Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JYX B0D91L16CC

JYX Karaoke Machine User Manual

Model: B0D91L16CC
Brand: JYX

1. Introduction

Thank you for choosing the JYX Karaoke Machine. This portable Bluetooth PA system is designed to provide high-quality audio for singing, parties, and various entertainment needs. It features two wireless microphones, bass/treble adjustment, and multiple connectivity options. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.



Image 1.1: The JYX Karaoke Machine, showcasing its compact design, integrated tablet stand, and two wireless microphones.

2. What's in the Box

- 1 x JYX Karaoke Machine
- 2 x Wireless Microphones
- 1 x Power Adapter
- 1 x User Manual

3. Product Overview

Key Features:

- HD Stereo Sound Quality: Built-in 10" woofer and 3.5" tweeter with up to 500W peak power.
- Independent Reverb/Treble/Bass Adjustment.
- Multiple Playback Modes: Bluetooth, AUX-IN, TWS, USB, TF connection.
- Long-lasting Battery: 11000mAh rechargeable battery for extended playtime.

- TV Connection Support.
- Two Wireless Microphones with 8 Voice Effects.

Components:

Familiarize yourself with the main components of your JYX Karaoke Machine:

- **Main Unit:** Houses the speakers, control panel, and input/output ports.
- **Wireless Microphones:** For vocal input, featuring LED displays and frequency adjustment.
- **Control Panel:** Located on the top of the main unit, includes knobs for volume, bass, treble, reverb, and mode selection buttons.
- **Input/Output Ports:** Various ports for connecting external devices (USB, TF, AUX, HDMI, Coaxial, Optical Fiber).



Image 3.1: Internal speaker configuration for high-quality stereo sound, including deep bass, midrange, and treble drivers.



Image 3.2: The included wireless microphones, highlighting their LED displays and the remote control for accessing 8 different voice effects.



Image 3.3: A visual summary of the JYX Karaoke Machine's main features and capabilities.

4. Setup

Initial Charging:

Before first use, fully charge the karaoke machine using the provided power adapter. The charging indicator will show the charging status.

Powering On/Off:

Press and hold the power button on the main unit to turn the device on or off.

Microphone Setup:

The wireless microphones are pre-paired with the main unit. Simply insert batteries (not included) into the microphones and power them on. They should automatically connect.

5. Operating Instructions

Mode Selection:

Use the 'Mode' button on the control panel to switch between Bluetooth, AUX, USB, TF, Coaxial, and Optical Fiber input modes.

Playing Music:

- **Bluetooth:** Select Bluetooth mode, enable Bluetooth on your device (smartphone, tablet, etc.), and select "JYX-XXXX" from the list of available devices.
- **USB/TF Card:** Insert a USB drive or TF card into the respective slot. The system will automatically switch to USB/TF mode and begin playing compatible audio files.
- **AUX-IN:** Connect an external audio device (e.g., MP3 player, computer) to the AUX-IN port using a 3.5mm audio cable. Select AUX mode.

Using Microphones:

- Ensure microphones are powered on and connected.
- Adjust microphone volume using the dedicated knob on the main unit.
- Use the remote control to cycle through 8 different voice effects (Male Voice, Female Voice, Monster Voice, Baby Voice, Original Voice, Karaoke Voice, etc.).
- Microphone frequency can be adjusted if interference occurs. Refer to the microphone's specific instructions for frequency adjustment.



Image 5.1: Overview of the multiple connection modes available on the JYX Karaoke Machine, including wired and wireless options.



Image 5.2: Details of the wireless microphone system and its diverse voice-changing capabilities.

6. Connectivity

Bluetooth Connection:

Activate Bluetooth mode on the karaoke machine. On your smart device, search for and connect to the device named "JYX-XXXX". A confirmation sound will indicate a successful connection.

TWS (True Wireless Stereo) Function:

If you have two JYX Karaoke Machines, you can pair them together for a true wireless stereo experience. Power on both units, select TWS mode on both, and they will automatically pair. Play audio from one device, and it will output through both speakers.

TV Connection:

The JYX Karaoke Machine supports connection to a TV via HDMI, Coaxial, or Optical Fiber ports. Use the appropriate cable (not included) to connect the machine to your TV's audio output. Select the corresponding input mode on the karaoke machine.

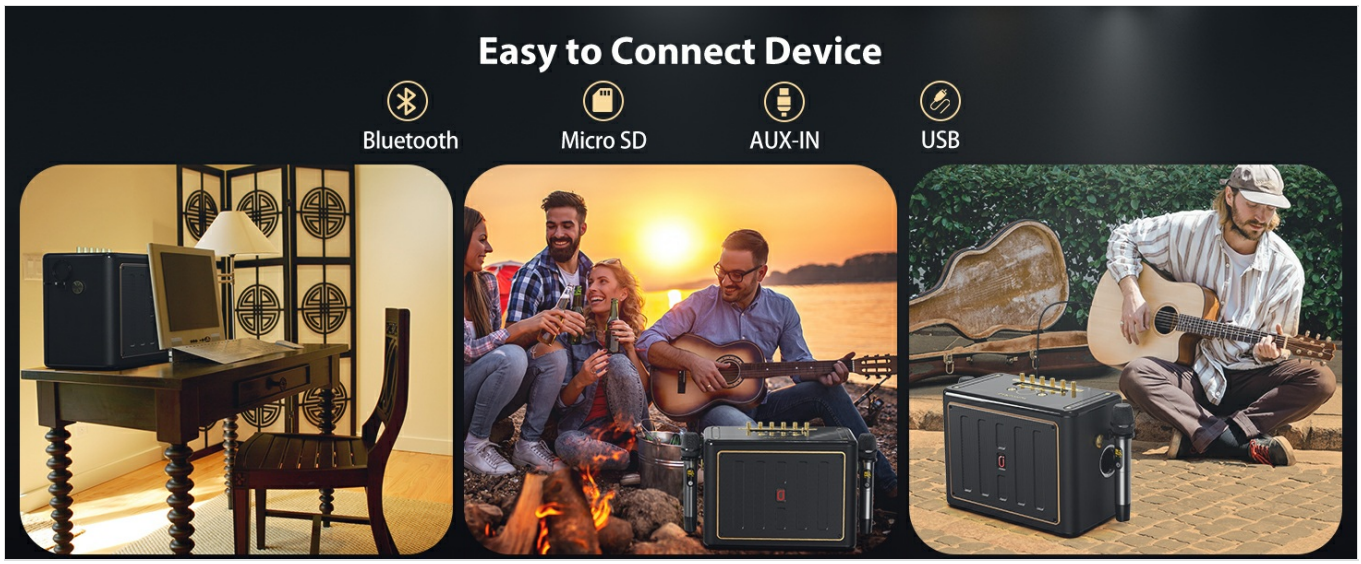


Image 6.1: Examples of easy device connection, including Bluetooth, Micro SD, AUX-IN, and USB.

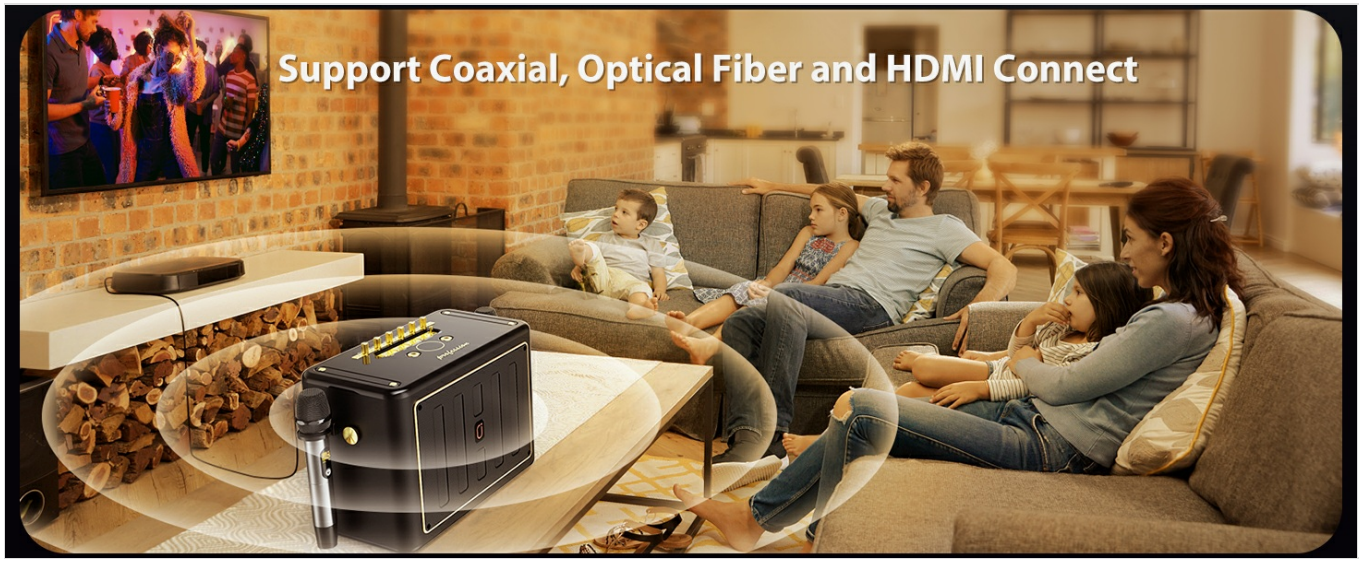


Image 6.2: Demonstrating TV connectivity options for enhanced karaoke and audio experience.

7. Sound Adjustment

The JYX Karaoke Machine features independent controls for sound customization:

- **Master Volume:** Adjusts the overall output volume of the system.
- **Microphone Volume:** Controls the volume of the wireless microphones.
- **Bass:** Adjusts the low-frequency sound output. Turn clockwise for more bass, counter-clockwise for less.
- **Treble:** Adjusts the high-frequency sound output. Turn clockwise for more treble, counter-clockwise for less.
- **Reverb:** Controls the echo effect on the microphone vocals.

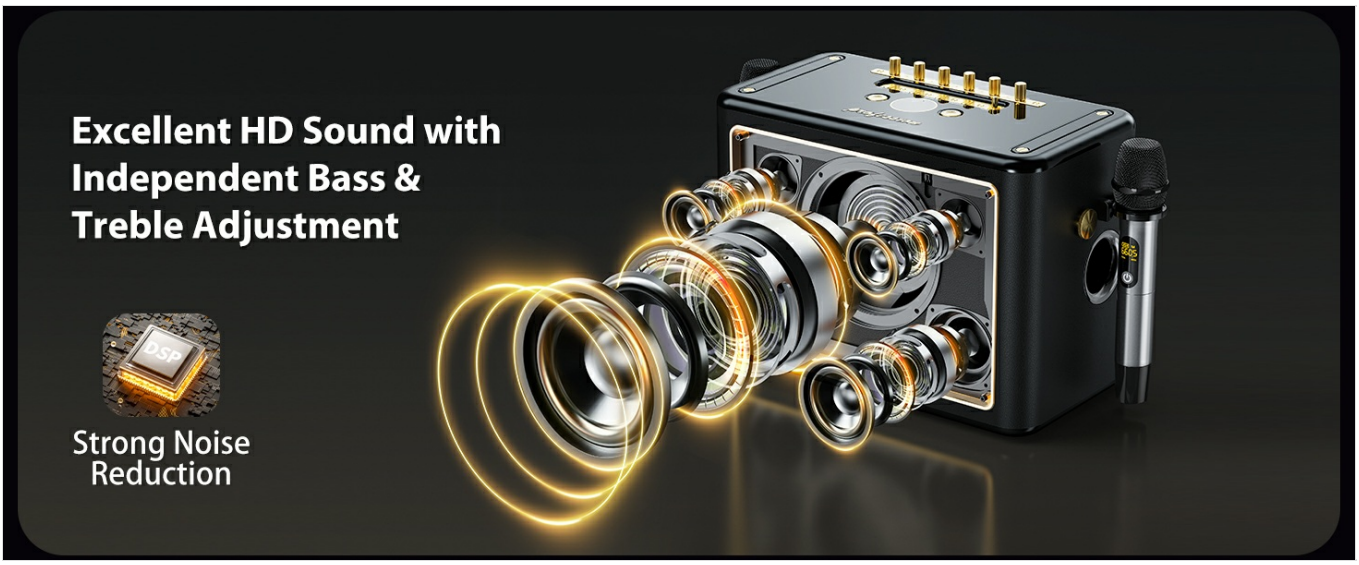


Image 7.1: Highlighting the independent bass and treble adjustment capabilities for optimal sound quality.

8. Battery Information

The JYX Karaoke Machine is equipped with a large 11000mAh rechargeable battery, providing extended playtime for both indoor and outdoor use.

- **Playtime:** Up to 120 hours (actual playtime may vary based on volume level and usage).
- **Charging Time:** Approximately 4-6 hours for a full charge.
- **Charging Indicator:** The LED display on the unit will indicate the battery level and charging status.

To preserve battery life, fully charge the unit before long periods of inactivity and avoid completely draining the battery frequently.



Image 8.1: Information on the long-lasting rechargeable battery, indicating playing and charging times.

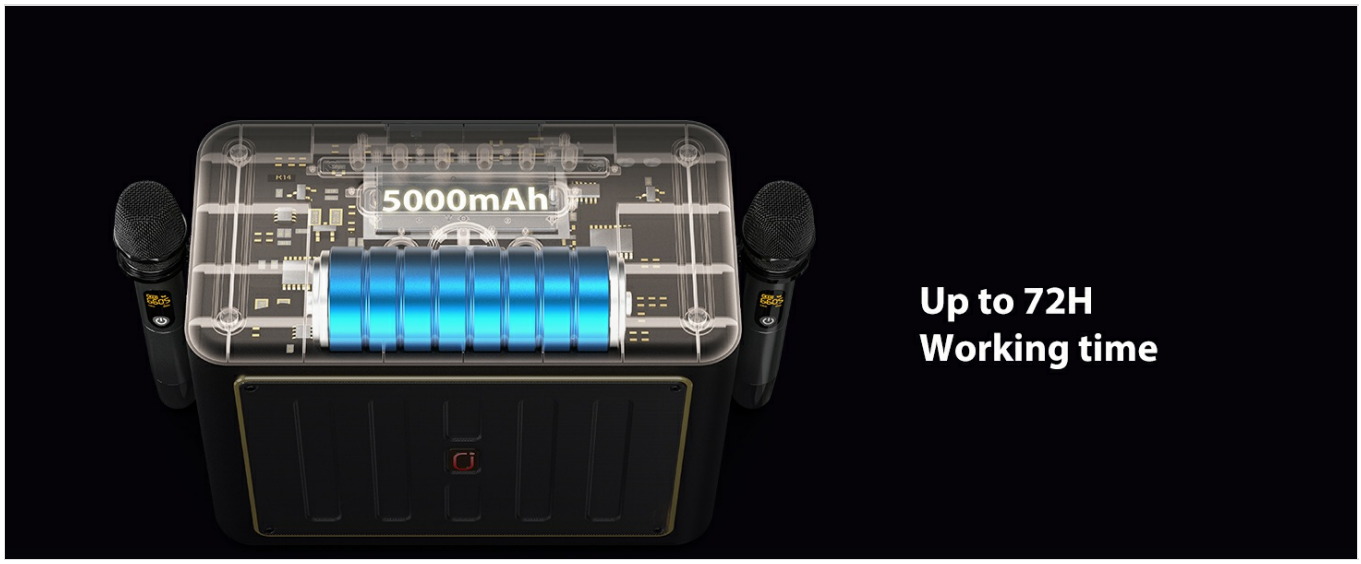


Image 8.2: Illustration of the internal battery, emphasizing its capacity and working time.

9. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surface of the machine. Do not use abrasive cleaners or solvents.
- **Storage:** Store the machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If not used for a long period, charge the battery every 3 months to maintain its health.
- **Microphone Care:** Remove batteries from microphones if not used for extended periods to prevent leakage.

10. Troubleshooting

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected.	Charge the unit; Ensure power adapter is securely connected.
No sound output	Volume too low; Incorrect input mode; Device not connected properly.	Increase volume; Select correct input mode (Bluetooth, AUX, USB, etc.); Reconnect device.
Microphone not working	Microphone off; Batteries low/dead; Not paired.	Turn on microphone; Replace batteries; Re-pair microphones if necessary (refer to microphone instructions).
Bluetooth connection unstable	Device too far; Interference.	Move device closer to the karaoke machine; Avoid obstacles or other wireless devices.

11. Specifications

Feature	Detail
Brand	JYX
Model	B0D91L16CC
Mounting Type	Tabletop
Power Source	Battery Powered
Connector Type	Aux, Bluetooth, USB, TF, HDMI, Coaxial, Optical Fiber
Output Wattage	500 Watts (Peak)
Number of Channels	1
Audio Input	Bluetooth, AUX-IN, TWS, USB, TF
Recommended Uses	Home, Party, Outdoor Gathering
Product Dimensions	3 x 4 x 5 inches
Item Weight	20 pounds
Battery Capacity	11000mAh

Feature	Detail
Color	Black

12. Warranty and Support

JYX provides comprehensive support for its products:

- **Warranty:** Enjoy a 12-month warranty from the date of purchase.
- **Technical Support:** Lifetime technical support is available for all JYX products.
- **Customer Service:** For any questions, issues, or assistance, please contact our customer support team.

Contact Information:

- Email: service@jyxspeaker.com

© 2024 JYX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D91L16CC

More documents and user manuals: **https://manuals.plus/**