Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lacuffy treadmill CT

Lacuffy Walking Pad Treadmill with Handle Bar

MODEL: TREADMILL CT

1. Introduction

Thank you for choosing the Lacuffy Walking Pad Treadmill. This 3-in-1 foldable treadmill is designed for versatile use, functioning as a walking pad, jogging machine, or running treadmill. It features a compact design for small spaces, a powerful yet quiet motor, and app control capabilities. Please read this manual thoroughly before initial use to ensure correct assembly, operation, and maintenance, and to maximize your safety and the product's lifespan.

2. Safety Information

Important Safety Precautions:

- Always consult with a physician before starting any new exercise program.
- Place the treadmill on a flat, stable surface with at least 2 feet (0.6 meters) of clear space on all sides.
- Ensure the safety key is properly attached to your clothing and the treadmill console before starting.
- Do not allow children or pets near the treadmill while it is in operation.
- The maximum user weight capacity for this treadmill is**300 pounds (136 kg)**. Do not exceed this limit.
- Wear appropriate athletic footwear during use.
- Keep hands and feet clear of all moving parts.
- Unplug the treadmill from the power outlet when not in use or before cleaning/maintenance.
- If you experience pain, dizziness, or shortness of breath, stop exercising immediately.

3. Package Contents

Verify that all components are present in the package:

- Lacuffy Walking Pad Treadmill Unit
- Phone Holder
- User Manual
- Remote Control

- L-shaped Wrench
- Battery (for remote control)
- Lubricating Oil
- Power Cord
- Screwdriver
- Safety Key

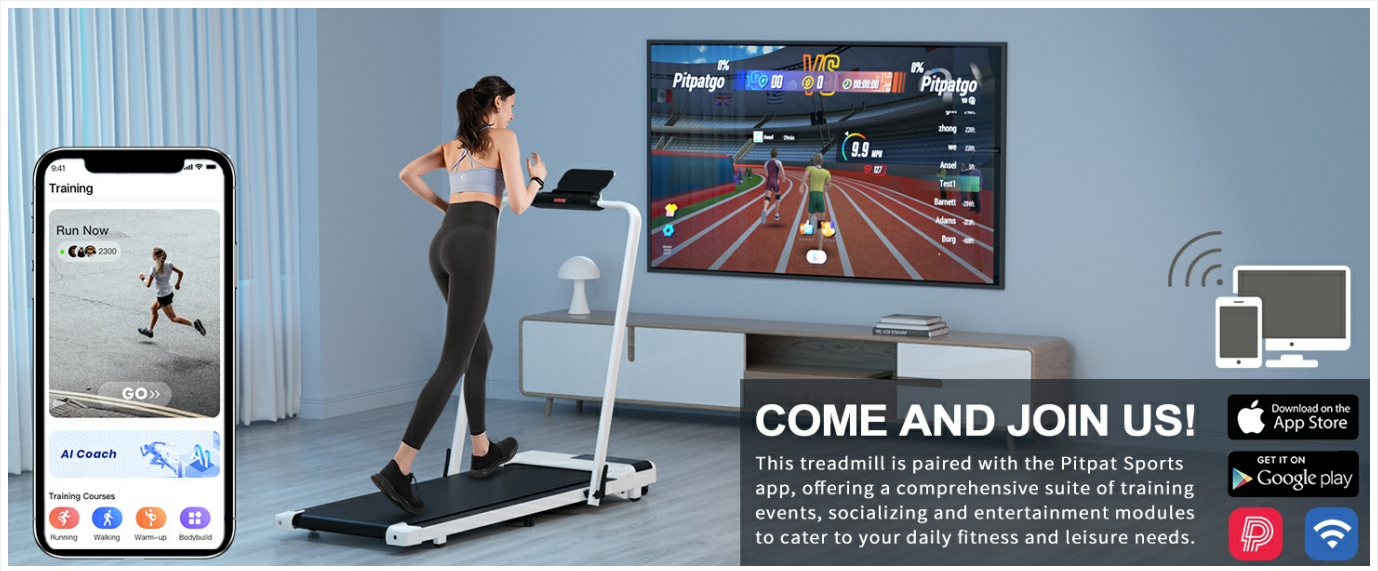


Figure 3.1: Included Components

4. Assembly and Setup

The Lacuffy treadmill requires minimal assembly. Follow these steps to set up your device:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Placement:** Position the treadmill on a level surface, ensuring adequate clearance around the unit.
3. **Unfolding (if applicable):** If the handle bar is folded, gently lift it into the upright position until it locks securely. Ensure all locking mechanisms are engaged.
4. **Power Connection:** Connect the power cord to the treadmill and then to a grounded electrical outlet.
5. **Safety Key:** Attach the safety key to the designated slot on the console. The treadmill will not operate without the safety key in place.



Figure 4.1: One-Step Folding Mechanism



Figure 4.2: Folded and Unfolded Dimensions

5. Operating Instructions

The Lacuffy treadmill offers two primary modes of operation:

5.1. Walking Pad Mode (Handle Bar Folded)

When the handle bar is folded down, the treadmill functions as a walking pad, ideal for use under a desk or in compact spaces. In this mode, the speed range is typically **0.6 to 3.8 miles per hour (mph)**.



Figure 5.1: Under-Desk Walking Pad Use

5.2. Treadmill Mode (Handle Bar Raised)

With the handle bar raised and locked, the unit operates as a traditional treadmill, suitable for jogging and running. The speed range in this mode is **0.6 to 7.5 mph**.



Figure 5.2: Treadmill Mode with Handle Bar

5.3. Controls and Display

The treadmill can be controlled via the included remote control or through the dedicated mobile application.

- **Remote Control:** Use the remote to start/stop the treadmill, adjust speed, and switch modes.
- **LED Display:** The integrated LED display shows essential metrics such as speed, time, distance, and calories burned.
- **Phone Holder:** A dedicated phone holder is provided on the handle bar for convenience.

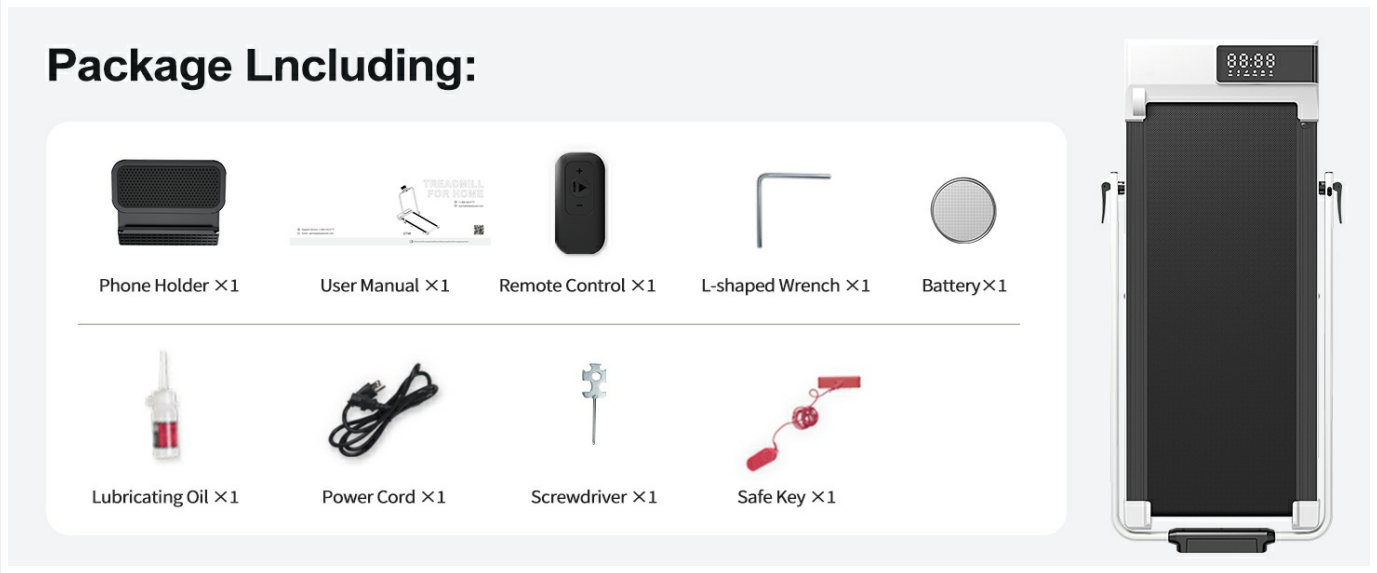


Figure 5.3: Console with Phone Holder

5.4. PitPat APP Control

To unlock the full potential of your Lacuffy treadmill, download and install the**PitPat** application on your smartphone. The app provides training programs, event participation, social features, and entertainment options. The treadmill requires activation through the PitPat app for full functionality.

- Download PitPat from the App Store (iOS) or Google Play Store (Android).
- Follow the in-app instructions to pair your treadmill and activate it.



Figure 5.4: PitPat App Integration

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your treadmill.

6.1. Lubrication

The running belt requires periodic lubrication to reduce friction and wear. Use the provided lubricating oil and follow these steps:

1. Turn off and unplug the treadmill.
2. Loosen the belt tension by turning the rear rollers counter-clockwise with the L-shaped wrench.
3. Lift the edge of the running belt and apply a small amount of lubricating oil evenly to the center of the deck, underneath the belt.
4. Tighten the belt tension by turning the rear rollers clockwise until the belt is snug but not overly tight.
5. Plug in the treadmill and run it at a low speed (e.g., 1 mph) for 5 minutes to distribute the lubricant.

6.2. Cleaning

Wipe down the treadmill surfaces with a damp cloth after each use. Avoid using abrasive cleaners or solvents. Regularly vacuum around and under the treadmill to prevent dust and debris buildup.

6.3. Belt Adjustment

If the running belt slips or drifts to one side, it may need adjustment. Refer to the detailed instructions in the full user manual for precise belt centering and tensioning procedures.

7. Troubleshooting

If you encounter issues with your treadmill, refer to the following common problems and solutions:

- **Treadmill does not start:** Ensure the power cord is securely plugged in, the power switch is on, and the safety key is correctly inserted.
- **Belt stops or slips:** The running belt may require tension adjustment or lubrication. Refer to the maintenance section.
- **Unusual noises:** Check for loose parts or foreign objects under the belt. If the noise persists, contact customer support.
- **App connectivity issues:** Ensure Bluetooth is enabled on your device and the treadmill is powered on. Restart both the app and the treadmill if necessary.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact Lacuffy customer support.

8. Product Specifications

Feature	Specification
Brand	Lacuffy
Model Name	treadmill CT
Product Dimensions (Unfolded)	52.17"D x 25.51"W x 42.32"H
Folded Size (Height)	5 inches
Item Weight	61.51 Pounds
Maximum Speed	7.5 Miles per Hour
Minimum Speed	0.6 Miles per Hour

Feature	Specification
Maximum Horsepower	3 Horsepower
Maximum Weight Recommendation	300 Pounds
Frame Material	Aluminum
Special Features	Foldable, Portable, Under Desk, APP Control, Remote Control, LED Display
Power Source	Electric
Connectivity Technology	APP Control
Metrics Measured	LED Display
Assembly Required	Yes

Figure 8.1: Powerful and Quiet Motor

9. Warranty and Support

Lacuffy is committed to providing quality products and customer satisfaction.

- **Warranty:** The product includes 1 year of lifetime service.
- **Customer Support:** A dedicated customer service team is available to troubleshoot issues within 24 hours.

Contact Information:

- **Support Service:** +1-888-625-8777
- **Email:** sports@pitpatfitness.com

Figure 9.1: Customer Support Contact Details

© 2025 Lacuffy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D91TFTWV

More documents and user manuals: **https://manuals.plus/**