Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic Proscenic P11

Proscenic P11 Mopping Vacuum Cleaner User Manual

Model: Proscenic P11

1. Important Safety Instructions

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Only use the charger supplied by the manufacturer to recharge.
- Store the appliance indoors. Put away after use to prevent accidents.

2. Product Overview and Package Contents

The Proscenic P11 Mopping Vacuum Cleaner is a versatile cordless stick vacuum designed for both dry vacuuming and wet mopping. It features a powerful motor, detachable battery, and multiple attachments for comprehensive home cleaning.



Image: Proscenic P11 Mopping Vacuum Cleaner with all components and accessories laid out.

Package Contents:

- Main Vacuum Body
- Extension Tube
- Motorized Floor Brush
- Detachable Mopping Base with Water Tank
- Mop Pads (x2)
- Detachable Battery
- Power Adapter/Charger

- 2-in-1 Dusting Brush
- Crevice Tool
- Wall Mount Bracket
- User Manual

3. Setup and Assembly

3.1 Assembling the Vacuum Cleaner

1. **Attach the Extension Tube:** Align the extension tube with the main vacuum body and push until it clicks into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension tube, ensuring it clicks securely.
3. **For Handheld Use:** The main vacuum body can be used directly with attachments like the 2-in-1 dusting brush or crevice tool without the extension tube.



Image: The Proscenic P11 vacuum cleaner fully assembled in its stick configuration.

3.2 Battery Installation and Charging

The Proscenic P11 features a detachable battery for convenient charging and extended runtime with an optional spare battery.

1. **Install Battery:** Slide the detachable battery into the slot at the bottom of the main vacuum body until it clicks into place.
2. **Charge Battery:** Connect the power adapter to the charging port on the battery or the wall mount. Plug the

adapter into a power outlet. The LED indicator on the battery will show charging status. A full charge typically takes 4-5 hours.



Image: Demonstrates how to detach the battery from the main vacuum unit.



Image: Illustrates the process of inserting the detachable battery into the vacuum cleaner.

4. Operating Instructions

4.1 Powering On/Off and Suction Modes

Press the power button on the handle to turn the vacuum on or off. The LED display will show the current mode and remaining battery life.

- **Eco Mode:** For light cleaning and maximum runtime (up to 50 minutes).
- **Smart Mode:** Automatically adjusts suction power based on floor type (up to 30 minutes).
- **Max Mode:** Provides maximum suction for deep cleaning (up to 15 minutes).

Press the mode button on the LED display to cycle through the different suction modes.



Image: Close-up of the vacuum's LED display, indicating Eco, Smart, and Max modes with their respective approximate runtimes.

4.2 Using the Mopping Function

The detachable mopping base allows for simultaneous vacuuming and wet mopping.

1. **Fill Water Tank:** Detach the mopping base from the motorized floor brush. Open the water tank cap and fill with clean water. Do not use detergents or chemicals that are not recommended for the device. Close the cap securely.

2. **Attach Mop Pad:** Securely attach a clean mop pad to the bottom of the mopping base.
3. **Attach Mopping Base:** Reattach the filled mopping base to the motorized floor brush.
4. **Begin Mopping:** Turn on the vacuum. The mopping base will dispense water as you clean, allowing for wet mopping while vacuuming. The 180-degree swivel steering aids in maneuverability.

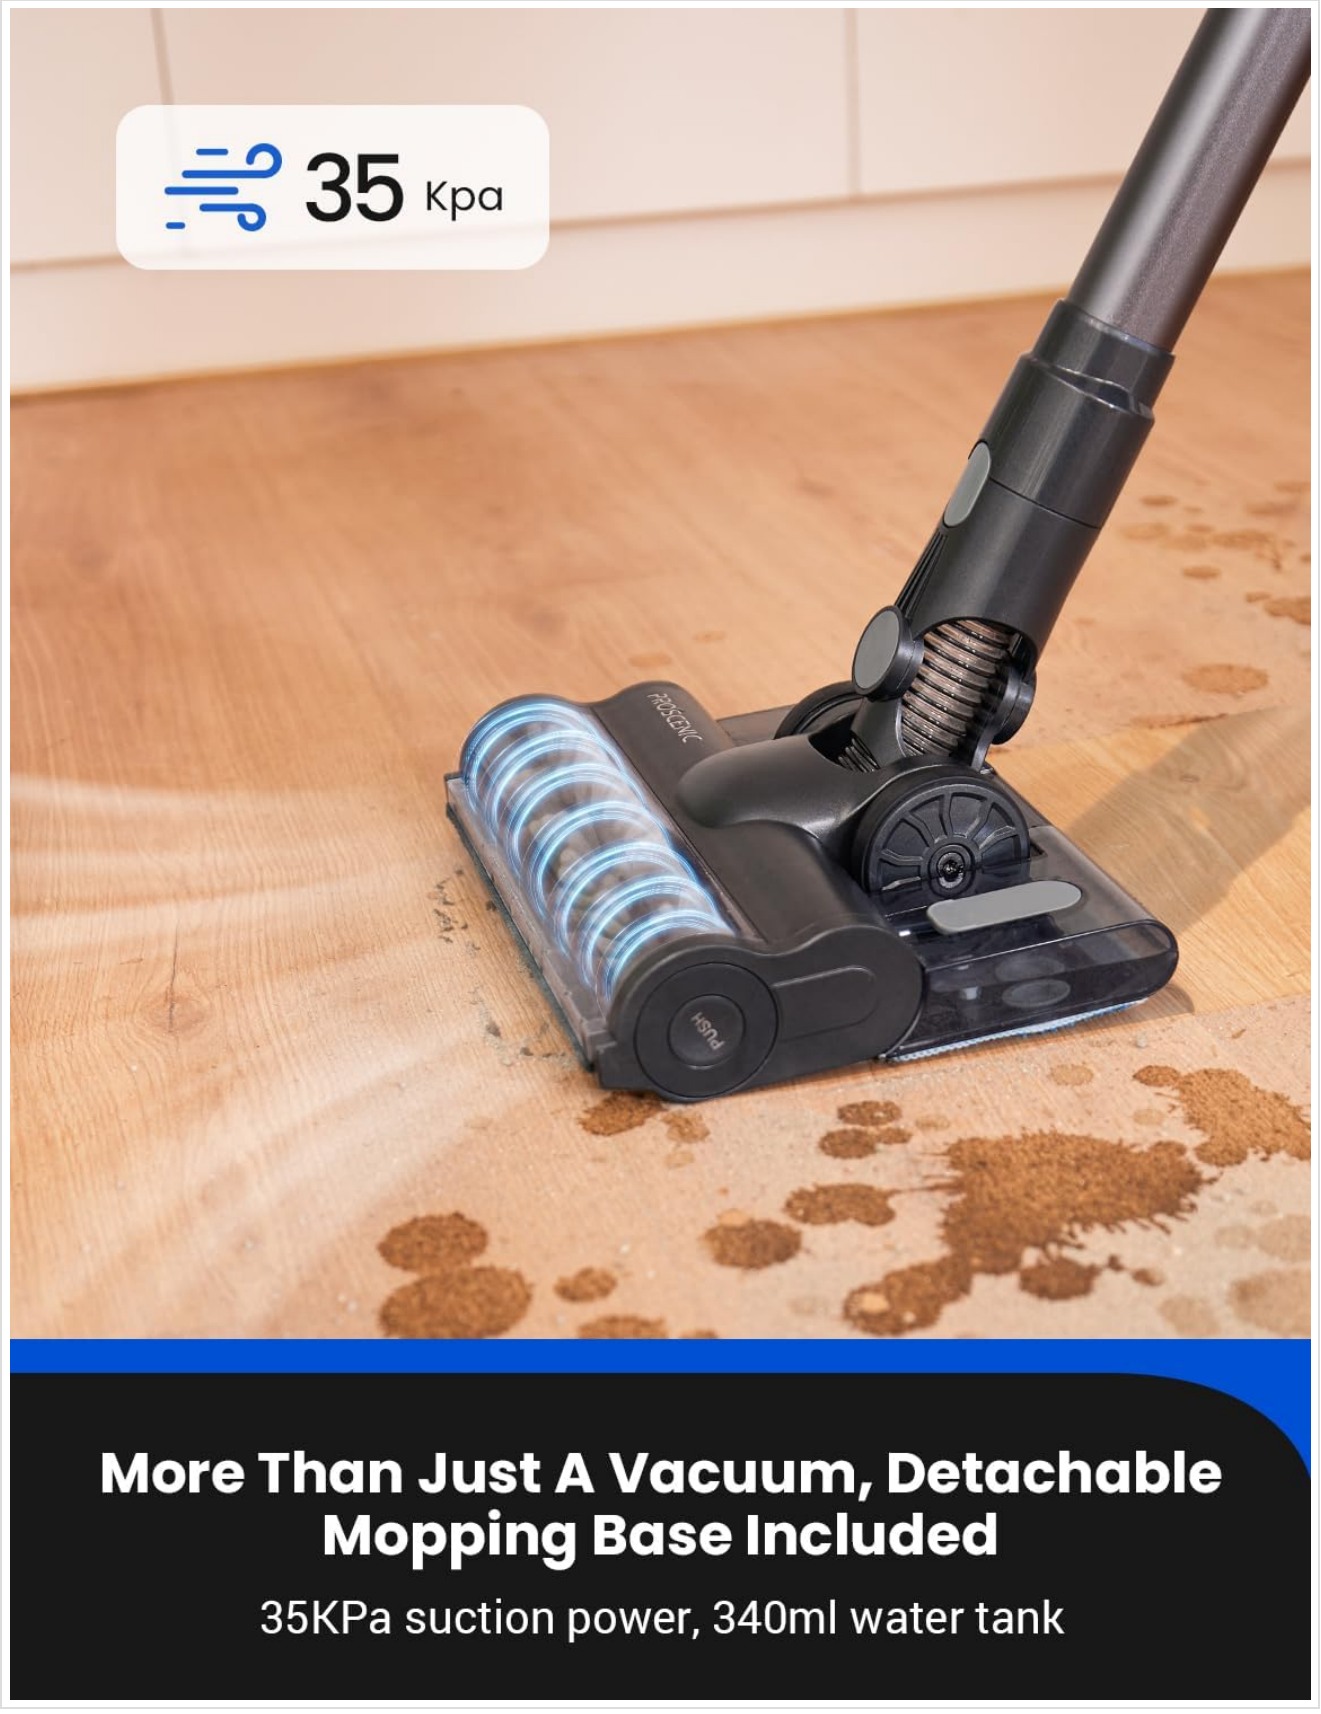


Image: Detailed view of the detachable mopping base, highlighting the water tank and mop pad attachment area.

4.3 Converting to Handheld Vacuum

The Proscenic P11 can easily convert into a handheld vacuum for cleaning furniture, car interiors, stairs, and other hard-to-reach areas.

1. **Detach Extension Tube:** Press the release button and pull the extension tube away from the main vacuum body.
2. **Attach Accessory:** Connect the desired accessory (e.g., 2-in-1 dusting brush, crevice tool) directly to the main vacuum body until it clicks into place.
3. **Begin Cleaning:** Use the handheld unit for targeted cleaning tasks.



Image: The Proscenic P11 vacuum cleaner being used in its handheld configuration to clean a sofa.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Proscenic P11 vacuum cleaner.

5.1 Emptying the Dustbin

Empty the dustbin after each use or when the MAX line is reached.

1. Hold the main vacuum body over a trash can.
2. Press the dustbin release button to open the bottom flap and empty the contents.
3. Close the dustbin flap securely.

5.2 Cleaning Filters

The filters should be cleaned regularly to maintain suction power. It is recommended to wash the filters monthly and replace them every 3-6 months depending on usage.

1. Twist and pull out the filter assembly from the dustbin.
2. Separate the HEPA filter and the metal mesh filter.
3. Tap off loose dirt. Rinse both filters under cold running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or direct heat.

5.3 Cleaning the Mopping Base and Mop Pads

After each mopping session:

- Empty any remaining water from the water tank.
- Remove the mop pad and wash it by hand or machine. Allow it to air dry completely.
- Wipe down the mopping base with a damp cloth.

5.4 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum and detach the motorized floor brush.
2. Locate the brush roll release mechanism (usually a latch or screw) on the side of the brush head.
3. Remove the brush roll. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
4. Reinsert the brush roll and secure the release mechanism.

6. Troubleshooting

If you encounter issues with your Proscenic P11, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not installed correctly.	Ensure battery is fully charged and properly inserted.

Problem	Possible Cause	Solution
Weak suction power	Dustbin is full; Filters are clogged; Blockage in nozzle/tube/brush roll.	Empty dustbin. Clean or replace filters. Check for and remove any blockages.
Brush roll not spinning	Brush roll is jammed by hair/debris; Brush roll is not installed correctly.	Clean brush roll. Ensure brush roll is correctly installed and secured.
Mopping function not working	Water tank is empty; Water tank cap is not sealed; Mopping base not attached correctly.	Fill water tank. Ensure cap is tightly closed. Reattach mopping base securely.
Short runtime	Battery not fully charged; Using Max mode frequently; Battery aging.	Fully charge battery. Use Eco or Smart mode for longer runtime. Consider battery replacement if significantly degraded.

7. Specifications

Detailed technical specifications for the Proscenic P11 Mopping Vacuum Cleaner and its battery.



Image: Table detailing the specifications of the Proscenic P11 detachable battery.

Feature	Specification
Brand	Proscenic
Model Number	Proscenic P11
Special Feature	Bagless, Detachable Mopping Base
Filter Type	Cartridge
Cordless	Yes
Runtime	Up to 1 hour (Eco Mode)
Form Factor	Stick, Handheld Convertible
Battery Type	Lithium-Ion (2000mAh * 7 Cells, 51.8Wh)
Recharge Time	4-5 hours

Feature	Specification
Noise Level	60 dB
Suction Power	Up to 35 kPa
Water Tank Capacity	340 mL
Item Weight	5.2 pounds
Indoor/Outdoor Usage	Indoor

8. Warranty and Support

Proscenic products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Proscenic website.
For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Proscenic Customer Service through their official channels. Details can typically be found on the product packaging or the brand's website.
Please have your model number (Proscenic P11) and purchase information ready when contacting support.

9. Official Product Videos

No official product videos from the seller are available for embedding at this time.

© 2025 Proscenic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D942ZY6L

More documents and user manuals: **https://manuals.plus/**