Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TCGHalo 151 UPC Acrylic Case

TCGHalo Acrylic 151 UPC Display Case Instruction Manual

Model: 151 UPC Acrylic Case

Introduction

This manual provides instructions for the proper setup, use, and maintenance of your TCGHalo Acrylic 151 UPC Display Case. This case is designed to securely store and display your Pokemon Scarlet & Violet 151 Ultra Premium Collection, offering protection with its durable acrylic construction and magnetic sliding lid.

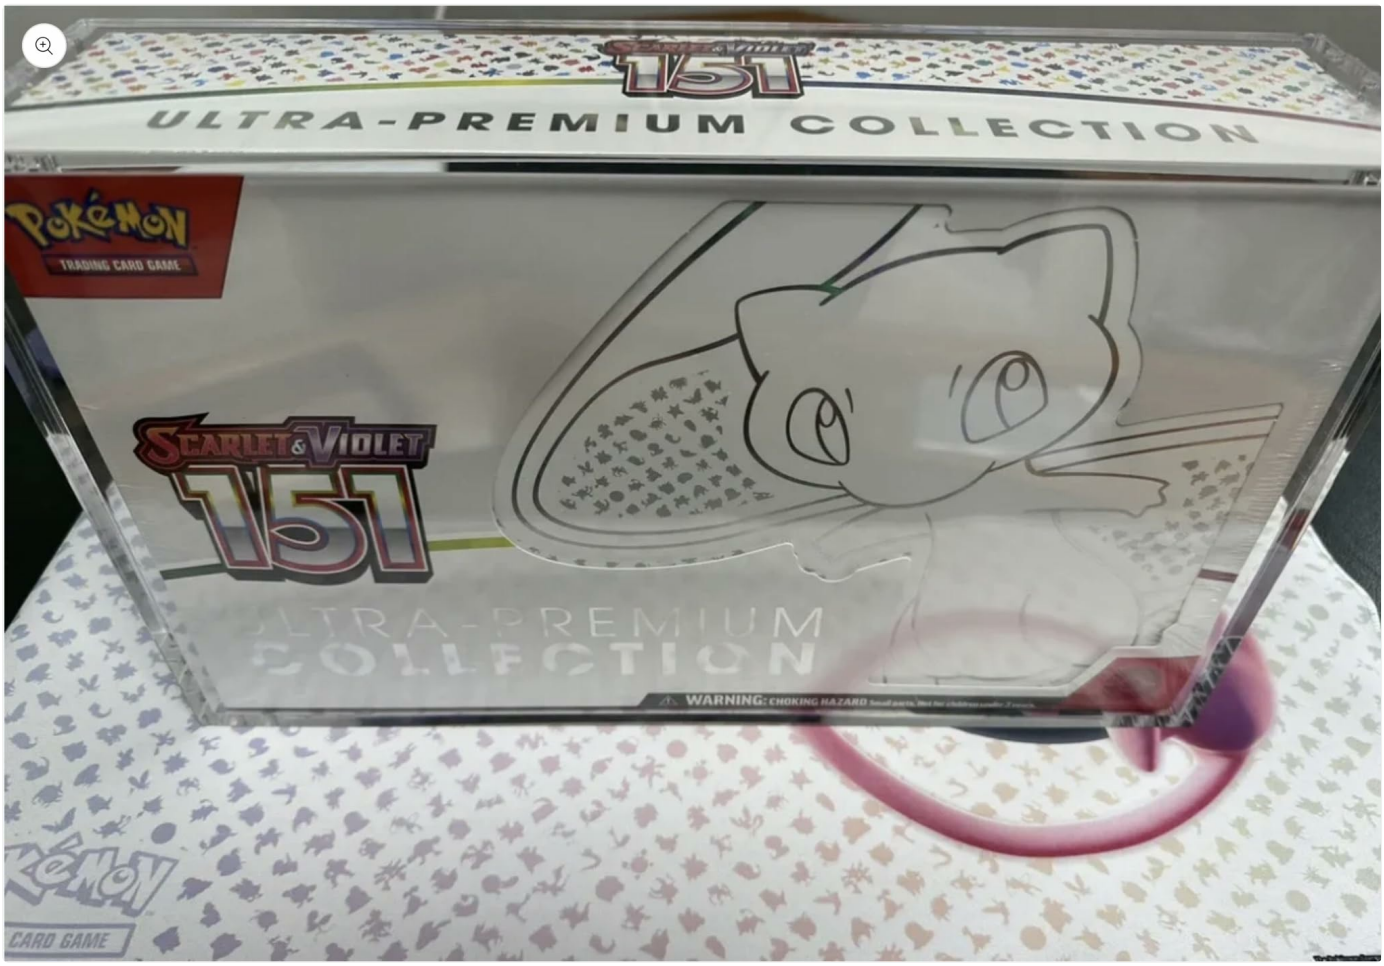


Image: The TCGHalo Acrylic 151 UPC Display Case, showcasing its clear design and how it encases a collectible box. This image illustrates the product's primary function of protecting and displaying valuable items.

Setup Instructions

Follow these steps to prepare your TCGHalo Acrylic 151 UPC Display Case for use:

1. **Unpack the Case:** Carefully remove the acrylic display case and all included components (cleaning cloth, rubber feet) from its packaging.
2. **Remove Protective Film:** The acrylic panels may have a protective film on both sides. Gently peel off this film from all surfaces to reveal the clear acrylic.
3. **Clean the Case:** Use the provided cleaning cloth to wipe down the interior and exterior surfaces of the case. This will remove any dust or smudges that may have accumulated during manufacturing or shipping.
4. **Attach Rubber Feet (Optional):** For added stability and to prevent scratching surfaces, peel and stick the included rubber feet to the bottom corners of the display case.

Operating Instructions

Using your TCGHalo Acrylic 151 UPC Display Case is straightforward:

1. **Open the Lid:** The case features a secure sliding magnetic lid. Gently slide the top panel to open the case.
2. **Insert Collectible:** Carefully place your Pokemon Scarlet & Violet 151 Ultra Premium Collection box or other compatible collectible inside the case. Ensure it fits snugly without forcing.
3. **Close the Lid:** Slide the top panel back into its closed position. The magnets will engage to hold the lid securely in place, protecting your item from dust and accidental damage.
4. **Display:** Place your protected collectible on a flat, stable surface for display.

Maintenance and Care

To keep your TCGHalo Acrylic 151 UPC Display Case in optimal condition:

- **Cleaning:** Regularly wipe the case with the provided cleaning cloth or a soft, lint-free microfiber cloth. For smudges or fingerprints, use a small amount of acrylic cleaner or mild soap and water. Avoid abrasive cleaners, paper towels, or ammonia-based products, as these can scratch or damage the acrylic.
- **Avoid Direct Sunlight:** While acrylic is durable, prolonged exposure to direct sunlight can cause discoloration over time. Position your display case in an area with indirect light.
- **Handle with Care:** Although robust, acrylic can scratch if mishandled. Avoid dropping the case or placing heavy, sharp objects on its surface.

Troubleshooting

Here are solutions to common issues you might encounter:

- **Case appears cloudy or scratched:** Ensure all protective films have been removed from both sides of the acrylic panels. If scratches are present, they may be superficial and can sometimes be buffed out with specialized acrylic scratch remover kits (not included).
- **Lid does not close securely:** Check for any obstructions preventing the lid from fully sliding into place. Ensure the collectible inside is positioned correctly and not interfering with the lid mechanism. Verify that the magnets are clean and free of debris.
- **Dust accumulation inside:** If dust accumulates, open the lid, carefully remove the collectible, and clean the interior with the provided cloth or a soft, dry microfiber cloth. Ensure the lid is fully closed after reinserting the collectible to minimize dust entry.

Specifications

Model Number:	151 UPC Acrylic Case
Material:	Acrylic
Color:	Clear
Product Dimensions (L x W x H):	15.2 x 4.1 x 9.1 inches (38.6 x 10.4 x 23.1 cm)
Item Weight:	4.26 pounds (1.93 kg)
Lid Type:	Sliding Magnetic Lid
Included Components:	Acrylic Case, Cleaning Cloth, Rubber Feet
Mounting Type:	Tabletop Mount

Warranty Information

Specific warranty details for the TCGHalo Acrylic 151 UPC Display Case are not provided in this manual. For information regarding product warranty, please refer to the product packaging or contact TCGHalo customer support directly.

Customer Support

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact TCGHalo customer support. You can typically find contact information on the product packaging or by visiting the official TCGHalo website.
For general inquiries, you may also visit the TCGHalo store on Amazon:TCGHalo Amazon Store

© 2026 TCGHalo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D96SRVZT

More documents and user manuals: **https://manuals.plus/**