Gevi SVCE0-GY0A1

Gevi Cordless Stick Vacuum Cleaner User Manual

Model: SVCE0-GY0A1

Introduction

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Gevi Cordless Stick Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Package Contents

Upon opening the package, please verify that all the following components are included:

- Main Unit (Handheld Vacuum)
- Bendable Tube
- Charging Wall Mount
- Dusting Brush
- Flat Suction Nozzle
- Power Adapter
- User Manual



Image: All components included with the Gevi Cordless Stick Vacuum Cleaner.

This image displays the Gevi Cordless Stick Vacuum Cleaner along with its various attachments and charging accessories, providing a visual overview of the complete package contents.

Setup

Assembly

1. Attach the bendable tube to the main unit until it clicks into place.
2. Connect the brush head to the other end of the bendable tube.
3. For handheld use, attach the dusting brush or flat suction nozzle directly to the main unit.

Charging

Before first use, fully charge the vacuum cleaner. The detachable battery allows for flexible charging options.

- Mount the charging wall mount in a convenient location.
- Place the vacuum on the wall mount to charge, or remove the battery and charge it separately.
- A full charge takes approximately 5 hours.



Image: The Gevi vacuum charging on its wall-mounted dock.

This image illustrates the Gevi Cordless Stick Vacuum Cleaner conveniently stored and charging on its dedicated wall mount, highlighting its easy charging and storage capabilities.

Operating Instructions

Power On/Off and Speed Settings

Press the power button to turn the vacuum on. The vacuum has two speed settings:

- **Eco Mode:** Provides up to 45 minutes of runtime, suitable for light cleaning and hard floors.
- **Turbo Mode:** Provides up to 18 minutes of runtime, ideal for deep cleaning and carpets.

Switch between modes using the control button on the handle.

Versatile Cleaning

The Gevi Cordless Stick Vacuum is designed for various cleaning tasks:

- **Floor Cleaning:** Use the main brush head for hard floors and low-pile carpets. The integrated LED lights illuminate hidden dust and debris.
- **Under Furniture:** The bendable tube allows easy access to clean under furniture without excessive bending.
- **Handheld Mode:** Detach the main unit and attach the dusting brush or flat suction nozzle for cleaning upholstery, tight spaces, car interiors, and elevated surfaces.



Image: Woman using the Gevi vacuum for quick cleanups on a carpet.

This image shows a woman effortlessly using the Gevi Cordless Stick Vacuum Cleaner on a carpet, demonstrating its convenience for everyday quick cleanups.



Image: The vacuum's bendable wand cleaning under a table.

This image highlights the Gevi Cordless Stick Vacuum Cleaner's lightweight design and bendable wand, allowing for easy maneuverability and cleaning under furniture.



Image: The vacuum in handheld mode for versatile cleaning.

This collage of images demonstrates the Gevi Cordless Stick Vacuum Cleaner's versatility, showing it used in handheld mode to clean upholstery, keyboards, and stairs with ease.

Maintenance

Emptying the Dust Cup

Regularly empty the dust cup to maintain optimal suction performance.

1. Press the release button to detach the dust cup from the main unit.
2. Hold the handle of the filter assembly and pull it out from the dust cup.
3. Empty the collected debris into a trash bin.

[redacted]

Video: How to clean the dust cup.

This video demonstrates the step-by-step process of cleaning the dust cup of the Gevi Cordless Stick Vacuum Cleaner, including detaching the cup, removing the filter assembly, and emptying the debris.

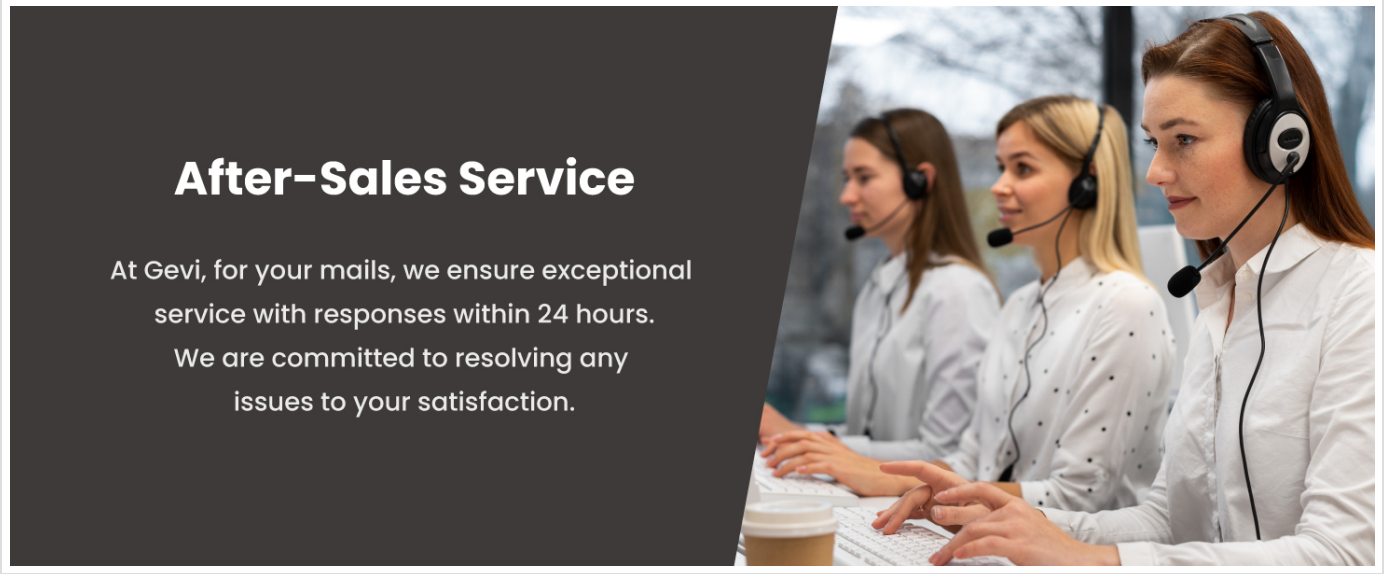


Image: Visual guide for emptying the dust cup.

This image provides a clear, three-step visual guide on how to empty the dust cup of the Gevi Cordless Stick Vacuum Cleaner, showing the release, filter removal, and debris disposal.

Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain filtration efficiency. It is recommended to wash the filter with water and allow it to air dry completely before reinserting.



Image: The HEPA filter and its function.

This image showcases the HEPA filter of the Gevi Cordless Stick Vacuum Cleaner, illustrating its role in capturing dust, hair, and fine particles to keep the air fresh.



Image: Washing the HEPA filter.

This image shows a hand washing the HEPA filter of the Gevi Cordless Stick Vacuum Cleaner under running water, demonstrating the recommended cleaning method for the filter.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris and remove as necessary to ensure effective cleaning.



Image: Removing the brush roll.

This image illustrates the process of removing the brush roll from the Gevi Cordless Stick Vacuum Cleaner's head, facilitating easy cleaning and maintenance.

Troubleshooting

If you encounter any issues with your Gevi Cordless Stick Vacuum Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not properly inserted.	Ensure battery is fully charged and securely inserted.
Reduced suction power	Dust cup full, filter clogged, or brush roll tangled.	Empty dust cup, clean HEPA filter, clear brush roll of debris.
Short runtime	Battery not fully charged or operating in Turbo mode.	Fully charge battery. Use Eco mode for longer runtime.
Unusual noise	Obstruction in the brush head or tube.	Check for and remove any blockages in the brush head or extension tube.

If the problem persists after attempting these solutions, please contact Gevi customer support.

Specifications

Feature	Detail
Brand	Gevi
Model Name	SVCE0-GY0A1
Special Feature	Compact, Cordless, HEPA, Headlight, Lightweight
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	0.5 Liters
Wattage	150 watts

Feature	Detail
Runtime	Up to 45 minutes (Eco mode)
Charging Time	5 Hours
Maximum Suction	11 Meters
Recommended Uses	Hard Floor, Carpet, Upholstery, Bare Floor
Form Factor	Stick
Color	White Gray
Product Dimensions	8.98"L x 9.84"W x 43.01"H
Battery Type	Lithium-Ion
Noise Level	80 dB
Item Weight	5.95 pounds
Number of Speeds	2

Warranty and Support

Gevi is committed to providing exceptional after-sales service. For any inquiries or support needs, please contact us. We ensure responses within 24 hours and are dedicated to resolving any issues to your satisfaction.



Image: Gevi After-Sales Service.

This image highlights Gevi's commitment to customer satisfaction through its responsive after-sales service, featuring customer service representatives ready to assist.

© 2023 Gevi. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question