Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NEARITY AW-OW30

NEARITY AW-OW30 Open Ear Bluetooth Headphones User Manual

Model: AW-OW30

Introduction Safety Information Product Overview Setup Operating Instructions Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides detailed instructions for the NEARITY AW-OW30 Open Ear Bluetooth Headphones. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience.

What's in the Box:

- Open-ear Headphones (White) x1
- Charging Case x1
- User Manual x1
- Quick Start Guide x1
- Charging Cable x1

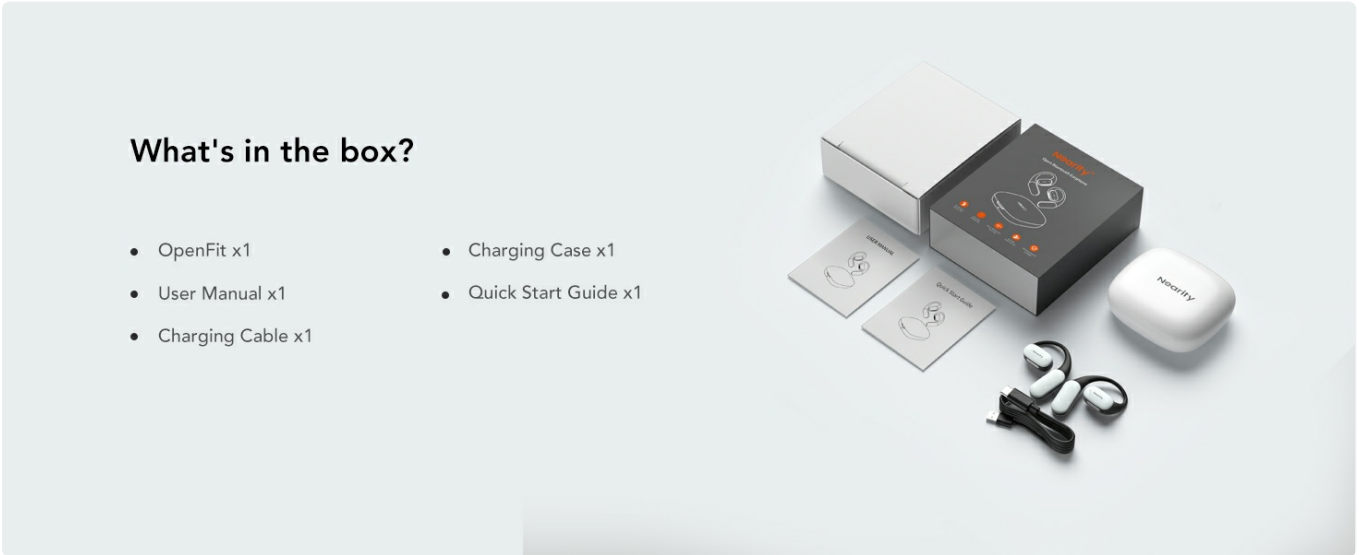


Figure 1: Package Contents

The package includes all necessary components for immediate use and guidance.

2. Safety Information

To prevent damage to your headphones or injury to yourself or others, read all safety information before using this product.

- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.
- **Environmental Awareness:** The open-ear design allows you to hear your surroundings. Exercise caution in environments requiring full attention, such as traffic.
- **Choking Hazard:** Keep the headphones and accessories out of reach of small children and pets to prevent choking or other injuries.
- **Temperature:** Do not expose the headphones or charging case to extreme temperatures (below 0°C or above 45°C).
- **Water Resistance:** These headphones are not water resistant. Avoid exposure to liquids.

3. Product Overview

The NEARITY AW-OW30 Open Ear Bluetooth Headphones are designed for comfort, sound quality, and situational awareness. They feature an ergonomic design, advanced noise cancellation for calls, and extended battery life.

Key Features:

- **Ergonomic & Lightweight Design:** Crafted with skin-friendly silicone material, weighing only 9.9g per earphone for ultra-comfort and a secure fit.
- **Immersive Sound Quality:** Delivers powerful audio with deep bass and robust volume.
- **ENC Noise Cancelling with HiFi4 DSP:** Utilizes 2 MEMS microphones to filter background noise for clear calls.
- **Extended Battery Life:** Up to 10 hours of playback on a single charge, with an additional 35 hours provided by the charging case (total 45 hours).
- **Environmental Awareness:** Open-ear design allows you to hear your surroundings while enjoying audio.
- **Bluetooth 5.3 & Dual Connectivity:** Supports simultaneous connection to two devices for seamless switching.
- **Broad Compatibility:** Works with iOS, Android, Windows, Mac, and Linux devices.



Figure 2: Soft Silicone Material for Enhanced Comfort



Figure 3: Ultra-Lightweight Design (9.9g per earphone)

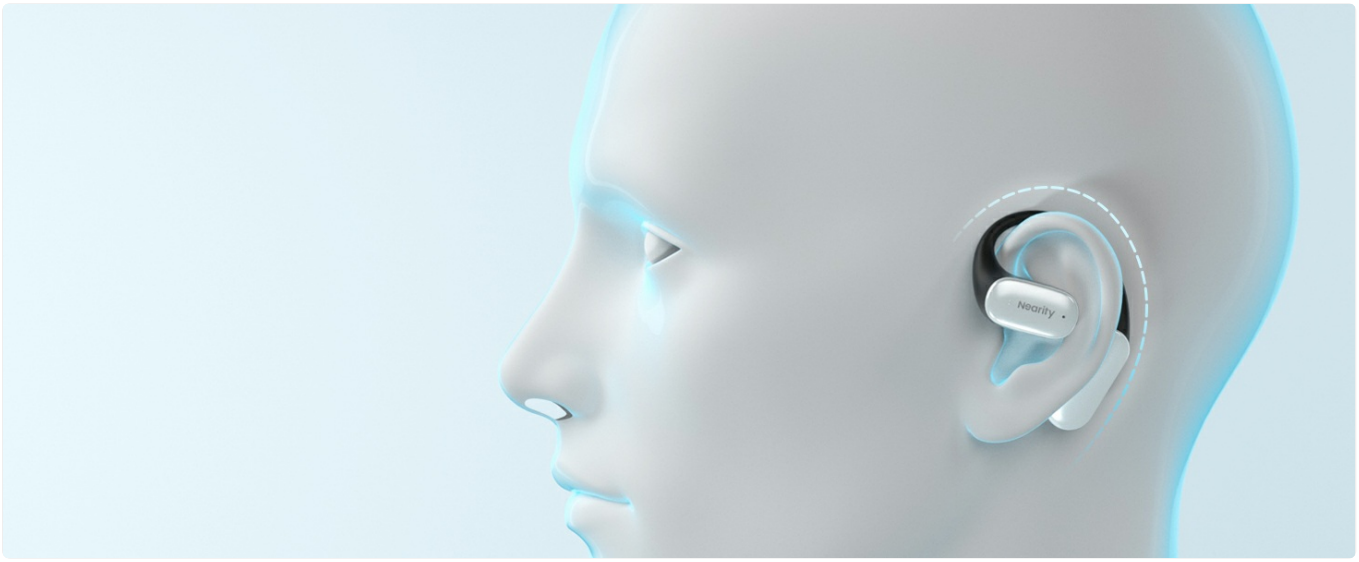


Figure 4: Secure and Stable Ear Hooks for Ergonomic Fit

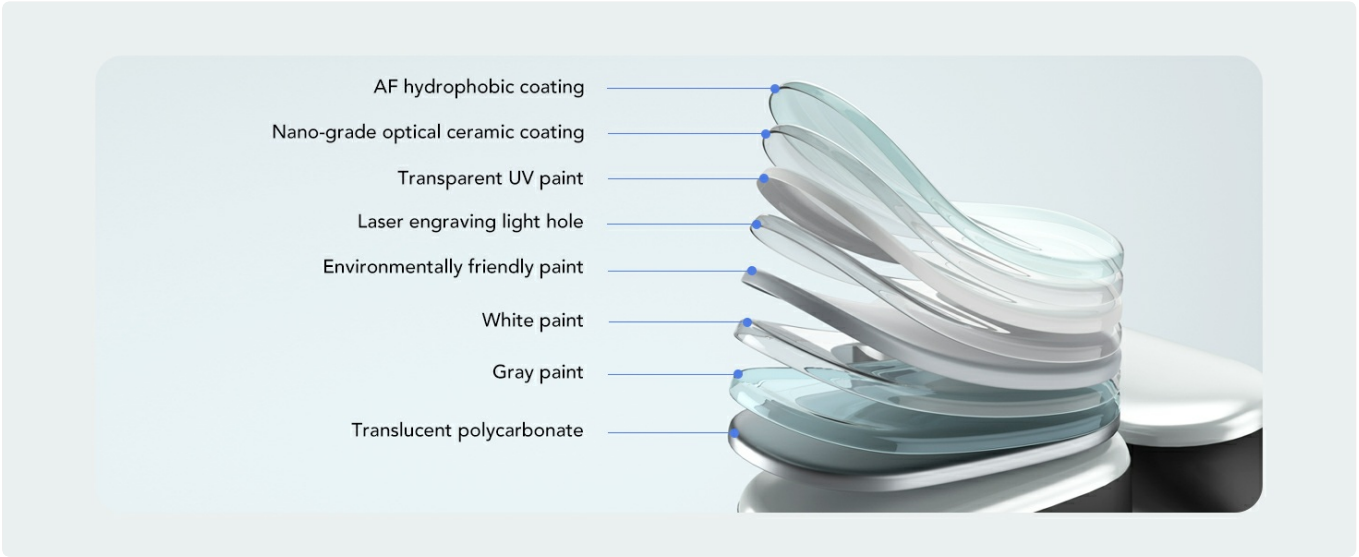


Figure 5: Special Surface Treatment Technology

Video 1: Demonstrating the comfort, noise cancellation, sound quality, open-ear design, and battery life of NEARITY Open Ear Bluetooth Headphones.

4. Setup

4.1 Charging the Headphones and Case

Before first use, fully charge the headphones and charging case. Connect the provided USB-C charging cable to the charging case and a power source. The indicator lights on the case will show the charging status. A full charge takes approximately 2 hours.

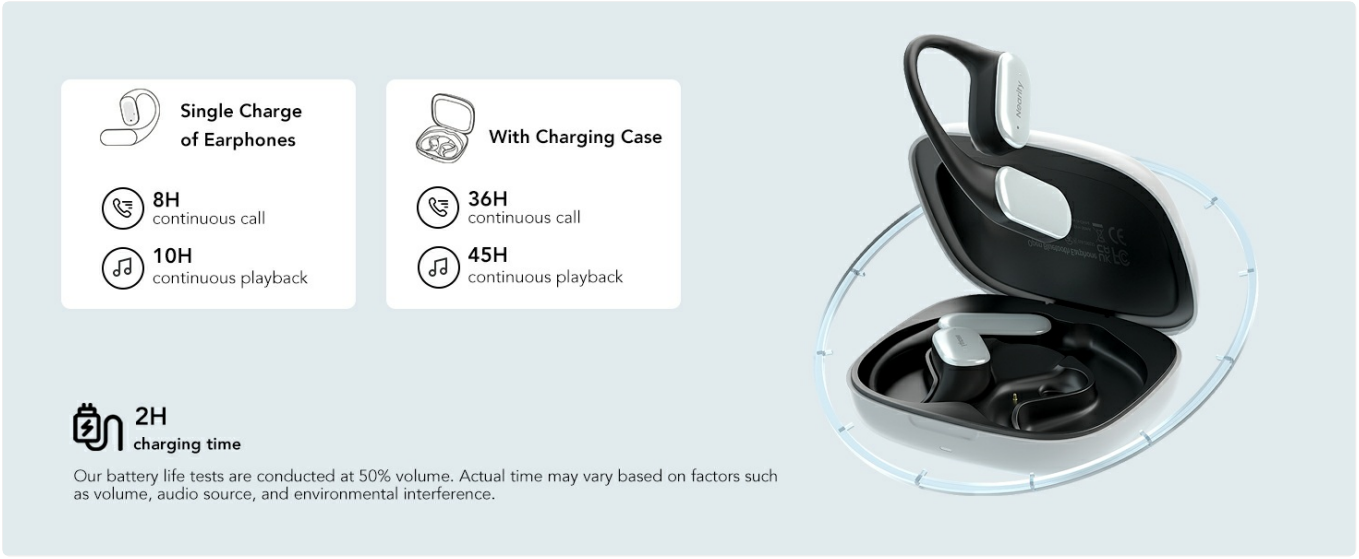


Figure 6: Battery Life and Charging Information

4.2 Pairing with Devices

1. Ensure the headphones are charged and inside the charging case.
2. Open the charging case. The headphones will automatically enter pairing mode.
3. On your device (smartphone, laptop, etc.), enable Bluetooth and search for available devices.
4. Select "NEARITY AW-OW30" from the list of devices to connect.
5. Once connected, a voice prompt will confirm successful pairing.

Dual Connection: The headphones support connecting to two devices simultaneously. After pairing with the first device, disable Bluetooth on that device, then pair with the second device. Re-enable Bluetooth on the first device, and the headphones will connect to both. You can seamlessly switch audio sources between the two connected devices.

5. Operating Instructions

5.1 Wearing the Headphones

To ensure optimal sound and comfort, wear the headphones correctly:

1. Take out the earphones from the charging case. Note the L (Left) and R (Right) markings.
2. Hang the earphones on your ear bone.
3. Rotate the earphones and slide them behind your ear.
4. Adjust the ear hook and pull it down for a secure fit.

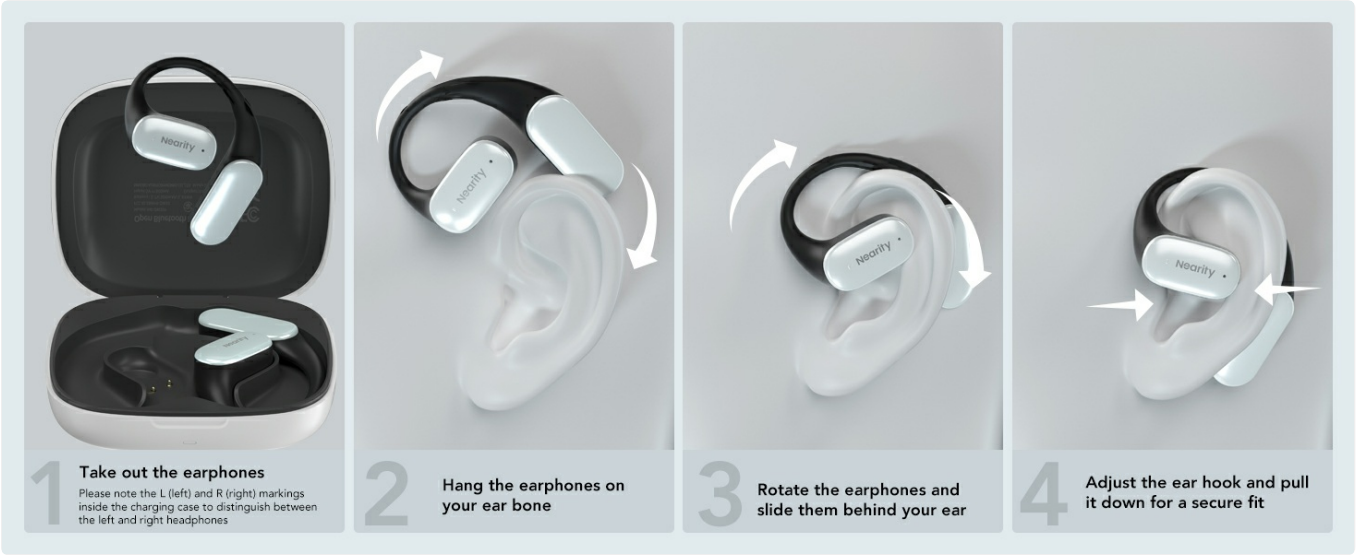


Figure 7: Wearing Instructions

5.2 Touch Controls

The headphones feature touch-sensitive controls on the outer surface of each earbud. Avoid touching the control area while wearing to prevent accidental activation. If a headphone turns off accidentally, press and hold for 2 seconds to restart.

Table 1: Touch Control Functions

Action	Function
Single-click	Pause/Play Music, Answer Call
Double-click (Left Ear)	Previous Track
Double-click (Right Ear)	Next Track
Double-click (Either Ear)	Hang Up/Reject Call
Triple-click (Either Ear)	Activate/Deactivate Voice Assistant



Figure 8: Touch Control Functions

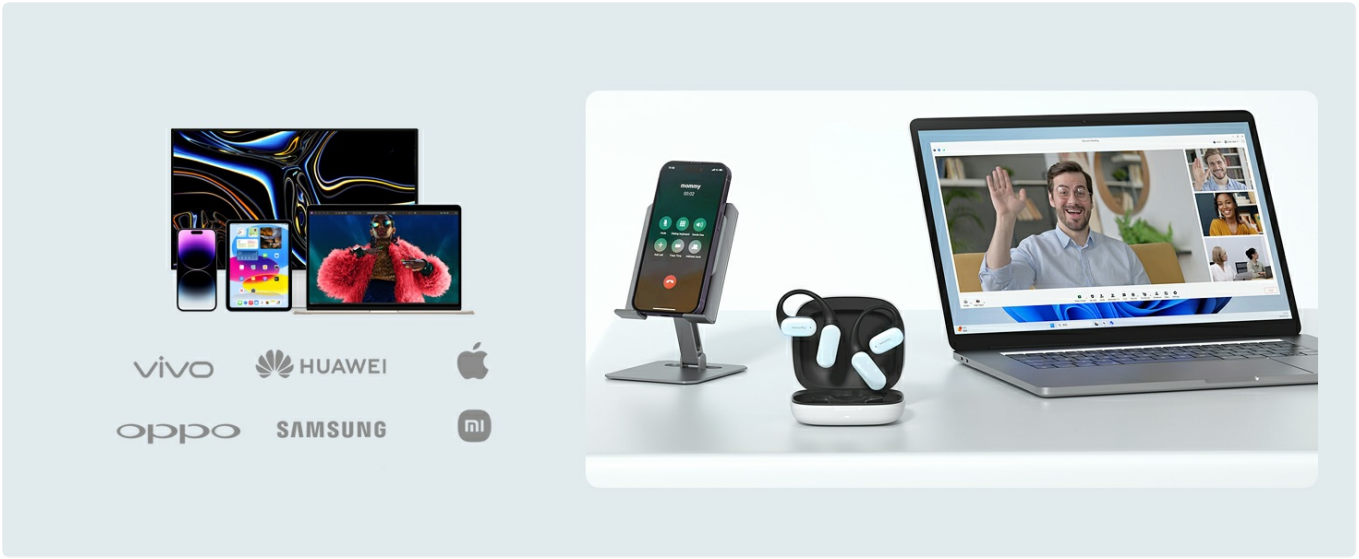


Figure 9: Multipoint Connectivity and Broad Compatibility

6. Maintenance

6.1 Cleaning

- Wipe the headphones and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture in any openings.

6.2 Storage

- When not in use, store the headphones in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

6.3 Battery Care

- Charge the headphones regularly, even if not in frequent use, to maintain battery health.
- Avoid fully discharging the battery frequently.

7. Troubleshooting

If you encounter issues with your NEARITY AW-OW30 headphones, refer to the following common solutions:

Table 2: Common Troubleshooting Steps

Problem	Solution
Headphones do not power on	Ensure headphones are charged. Place them in the charging case and close the lid, then open it again.
Cannot pair with device	Ensure Bluetooth is enabled on your device. Make sure headphones are in pairing mode (open case). Forget the device in your Bluetooth settings and try pairing again.
No sound or low volume	Check device volume and headphone volume. Ensure headphones are properly connected. Try restarting both headphones and the connected device.

Problem	Solution
Call quality issues	Ensure microphones are not obstructed. Move closer to your connected device. Avoid noisy environments where possible.
Headphones disconnect frequently	Ensure headphones are within Bluetooth range (10 meters). Avoid interference from other wireless devices.

For further assistance, please refer to the Quick Start Guide or contact NEARITY customer support.

8. Specifications

Table 3: Product Specifications

Feature	Detail
Brand	NEARITY
Model Number	AW-OW30-White
Color	White
Ear Placement	Open Ear
Form Factor	True Wireless
Noise Control	ENC Noise Cancelling
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Battery Life (Headphones)	Up to 10 hours (50% volume)
Total Playtime (with Case)	Up to 45 hours
Battery Charge Time	2 hours (full charge)
Control Method	Touch
Compatible Devices	Smartphones, Laptops, Desktop Computers (iOS/Android/Window/Mac/Linux)
Item Weight	0.59 Pounds (approx. 9.9g per earphone)

9. Warranty and Support

9.1 Warranty Information

The NEARITY AW-OW30 Open Ear Bluetooth Headphones come with a**1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical support, warranty claims, or any questions regarding your NEARITY product, please visit the official NEARITY website or contact their customer service department. Contact details can typically be found on the product packaging or the official brand website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9BG6TBD

More documents and user manuals: **https://manuals.plus/**