innioasis Y1-128G

Innioasis Y1 MP3 Player User Manual

Model: Y1-128G

Introduction

The Innioasis Y1 MP3 Player is a portable digital music player designed for high-fidelity audio and video playback. Featuring a classic click wheel control, a vibrant display, and extensive format compatibility, it offers a versatile entertainment experience. This manual provides detailed instructions for setting up, operating, and maintaining your device to ensure optimal performance.

What's in the Box

- Digital Mp3 Player x1
- Headphones x1
- User manual x1

Initial Setup

Charging the Device

Before first use, fully charge your Innioasis Y1 MP3 Player. Connect the device to a USB power adapter or a computer's USB port using the provided cable. The battery indicator on the screen will show charging progress. A full charge typically takes a few hours.



Image: The Innioasis Y1 MP3 Player displaying its long battery life and charging capabilities, highlighting 35 hours of music playback and 4 hours of video support.

Transferring Music and Files

To transfer files to your MP3 player:

1. Connect the MP3 player to your computer using the USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Open the device folder. You can create new folders (e.g., "Music", "Videos", "Audiobooks", "Photos") to organize your files.
4. Drag and drop your desired music, video, audiobook, or photo files into the appropriate folders on the device.
5. Once transfer is complete, safely eject the device from your computer before disconnecting the USB cable.



Image: The Innioasis Y1 MP3 Player's interface demonstrating powerful management for categories and playlists, allowing users to sort and organize their music library.

Operating Instructions

Power On/Off

- **Power On:** Press and hold the Power button until the screen lights up.
- **Power Off:** Navigate to the settings menu, select "Shutdown", and confirm.

Navigation (Click Wheel)

The Innioasis Y1 features a classic click wheel for intuitive navigation:

- **Rotate:** Spin the outer ring of the click wheel clockwise or counter-clockwise to scroll through menus, lists, or adjust volume.
- **Select:** Press the center button to confirm a selection or enter a menu.
- **Menu/Back:** Press the top button (usually indicated by a back arrow or menu icon) to go back to the previous

screen or access the main menu.

- **Play/Pause:** Press the bottom button to play or pause media.
- **Skip/Fast Forward/Rewind:** Press the left and right buttons to skip tracks or fast forward/rewind within a track.



Image: A diagram illustrating the classic click wheel control of the Innioasis Y1 MP3 Player, showing how to touch and rotate for navigation and selection.

Music Playback

From the main menu, select "Music". You can browse your music by artist, album, genre, or through folders. The player supports a wide range of audio formats, including MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, AMR, MID, M4R, MMF, WV, AIF, AIFF, AU, RA, MKA, AC3, CAF, ensuring HiFi lossless music experience.



Image: The Innioasis Y1 MP3 Player displaying a list of 21 compatible music formats, including MP3, WAV, FLAC, and more, highlighting its wide audio compatibility.



Image: The Innioasis Y1 MP3 Player screen showing music playback with a dog wearing headphones, emphasizing its HiFi sound quality and equalizer support for personalized audio.

Video Playback

Select "Videos" from the main menu. The Y1 MP4 player supports uninterrupted 720p playback for up to 4 hours with 50% brightness and wired headphones at max volume. Higher resolutions (>720p) may cause audio/video synchronization issues.

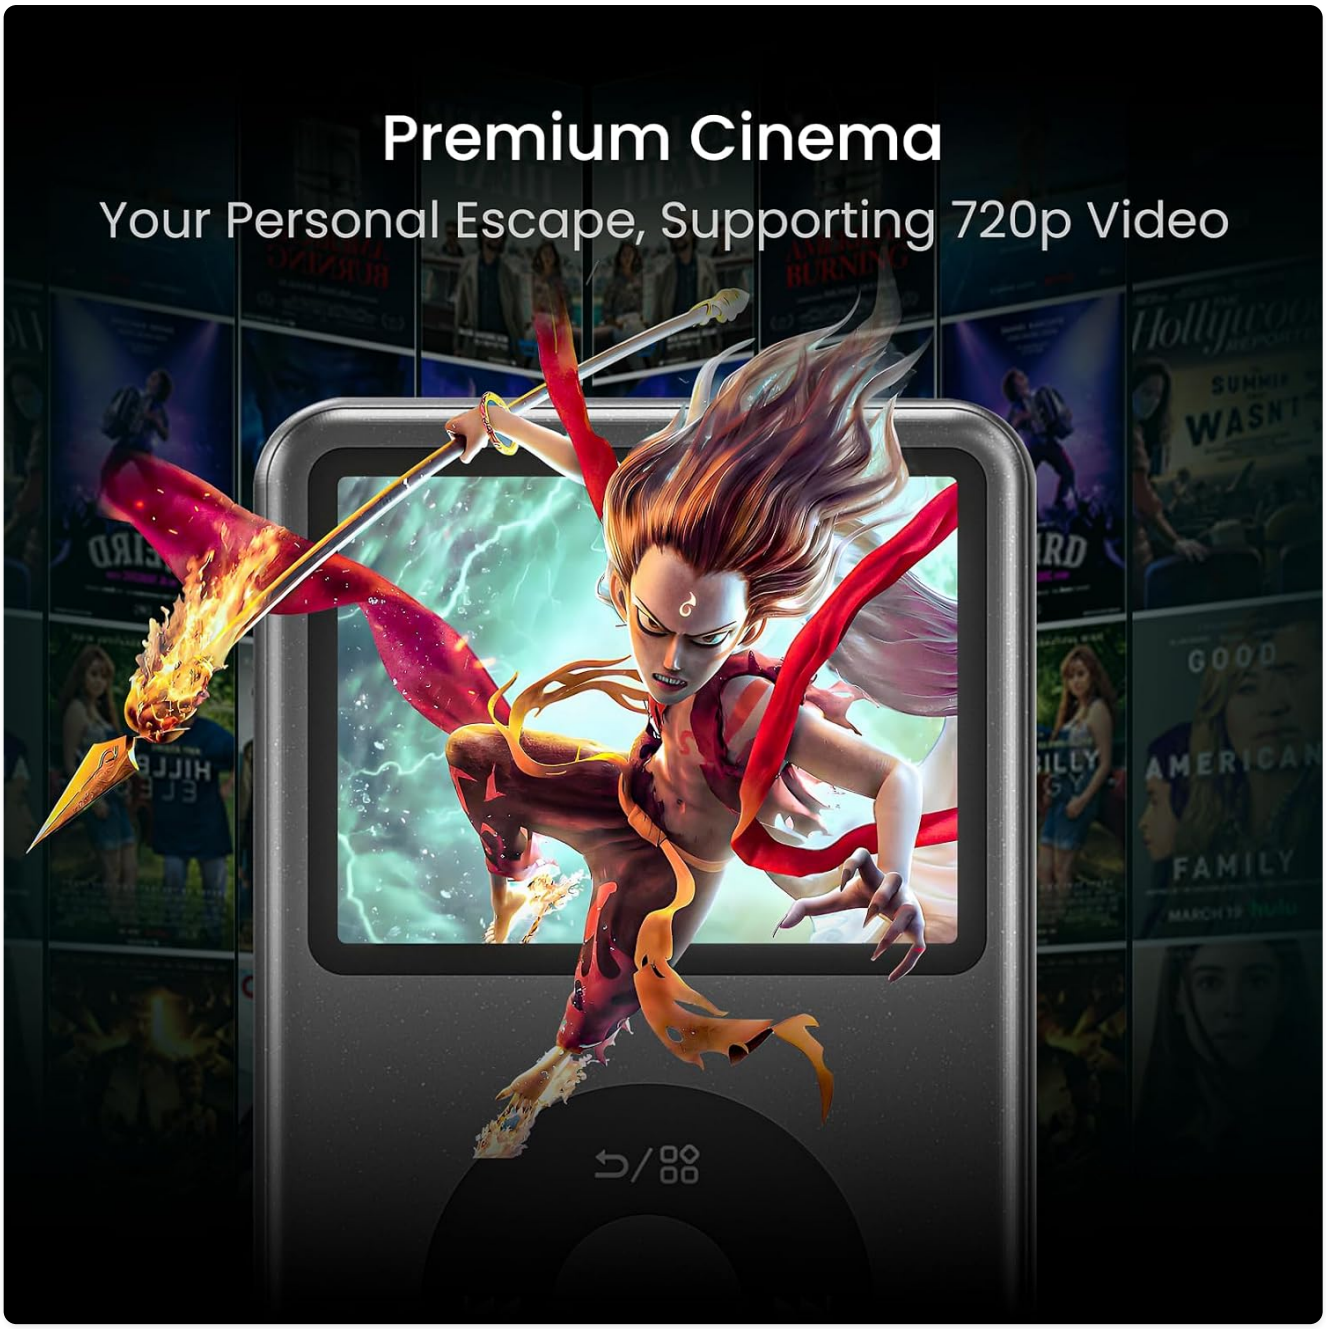


Image: The Innioasis Y1 MP3 Player displaying a vibrant video, illustrating its "Premium Cinema" experience and support for 720p video playback.

Audiobook Playback

The Y1 functions as an audiobook player. Select "Audiobook" from the main menu. It provides A-B repeat functionality, bookmarking options, and speed adjustments to enhance your listening experience. To create a bookmark, long-press during playback.



Image: The Innioasis Y1 MP3 Player displaying an audiobook list, indicating its support for audiobook playback and the ability to manage files by placing them in an "audiobook" folder when connected to a laptop.

FM Radio

Access the FM radio application from the main menu. You can scan for stations and record your favorite shows. Audio output can be switched between a Bluetooth headset or the built-in speaker.

Bluetooth Pairing

The device features Bluetooth 4.2 for stable connections with headphones, speakers, and car stereos. To pair:

1. From the main menu, select "Bluetooth".
2. Ensure Bluetooth is turned "On".
3. The player will scan for available devices.
4. Select your desired device from the list to pair.



Image: The Innioasis Y1 MP3 Player displaying its Bluetooth pairing screen, illustrating fast pairing and stable connection capabilities with various Bluetooth devices like earphones, speakers, and car stereos.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **Software Updates:** Check the manufacturer's website periodically for any available firmware updates to ensure optimal performance and new features.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, try a hard reset (refer to manufacturer's support for specific instructions if available, otherwise hold power button for 10-15 seconds).
Cannot transfer files.	Incorrect USB connection; driver issue; device not recognized.	Ensure the USB cable is securely connected. Try a different USB port or cable. Restart your computer and the MP3 player.
Bluetooth pairing fails.	Device out of range; pairing mode not active; interference.	Ensure both devices are in pairing mode and within 1 meter. Turn off and on Bluetooth on both devices. Avoid strong electromagnetic interference.
Poor audio/video quality.	Low quality source file; incompatible video resolution; damaged headphones.	Use higher quality audio/video files. Ensure video resolution is 720p or lower. Test with different headphones.
Click wheel unresponsive.	Software glitch; physical damage.	Restart the device. If the issue persists, contact customer support.

Technical Specifications

Feature	Detail
Model Name	Y1-128G
Brand	innioasis
Memory Storage Capacity	128 GB
Connectivity Technology	Bluetooth 4.2
Screen Size	1.8 inches
Display Technology	LCD
Battery Life (Music)	25-35 hours (continuous)
Battery Life (Video)	4 hours (720p, 50% brightness, wired headphones)

Feature	Detail
Supported Audio Formats	MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, AMR, MID, M4R, MMF, WV, AIF, AIFF, AU, RA, MKA, AC3, CAF
Supported Video Resolution	Up to 720p
Dimensions	3.86 x 2.4 x 0.35 inches
Item Weight	5.9 ounces
Special Feature	Built-In Speaker, Click Wheel Operation

Warranty and Support

Innioasis products are designed for reliability and performance. For warranty information and technical support, please refer to the warranty card included with your product or visit the official Innioasis website. You can also contact customer service for assistance with troubleshooting or product inquiries.
Online Support: Visit the Innioasis Store on Amazon

© 2025 Innioasis. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my Innioasis Y1 MP3 player display the message 'this song has been deleted or memory card has been removed' and stop playing music?

The error message "this song has been deleted or memory card has been removed" on your Innioasis Y1 typically indicates that the player's database can no longer locate the file path for your music....

Read full answer