Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Z-Lite 5008B

Z-Lite Gannon 5008B Outdoor Wall Sconce Instruction Manual

Model: 5008B

Introduction

Thank you for purchasing the Z-Lite Gannon 5008B Outdoor Wall Sconce. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.
This outdoor wall sconce is designed to provide ambient lighting for exterior spaces such as porches and patios. It features a durable stainless steel construction with a black finish and requires three light sources.

Important Safety Information

WARNING: RISK OF ELECTRIC SHOCK. Disconnect power at the circuit breaker or fuse box before installation or servicing. Improper installation can result in electric shock or fire.

- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with electrical wiring.
- Ensure the fixture is properly grounded.
- Do not exceed the maximum wattage specified for the bulbs.
- Handle glass components with care to prevent breakage.
- This fixture is rated for outdoor use. Ensure all connections are sealed to prevent water intrusion.

Package Contents

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- Z-Lite Gannon 5008B Outdoor Wall Sconce Fixture
- Mounting Hardware Kit
- Instruction Manual (this document)

Note: Light bulbs are typically not included and must be purchased separately.

Installation Instructions

1. Pre-Installation

1. **Turn off power:** Locate the circuit breaker or fuse box controlling the power to the desired installation location and turn off the power.
2. **Prepare the area:** Ensure the mounting surface is clean, dry, and structurally sound.
3. **Unpack contents:** Carefully remove all components from the packaging. Keep all parts together.

2. Mounting the Fixture

Refer to the dimensional drawing for precise measurements and backplate details.

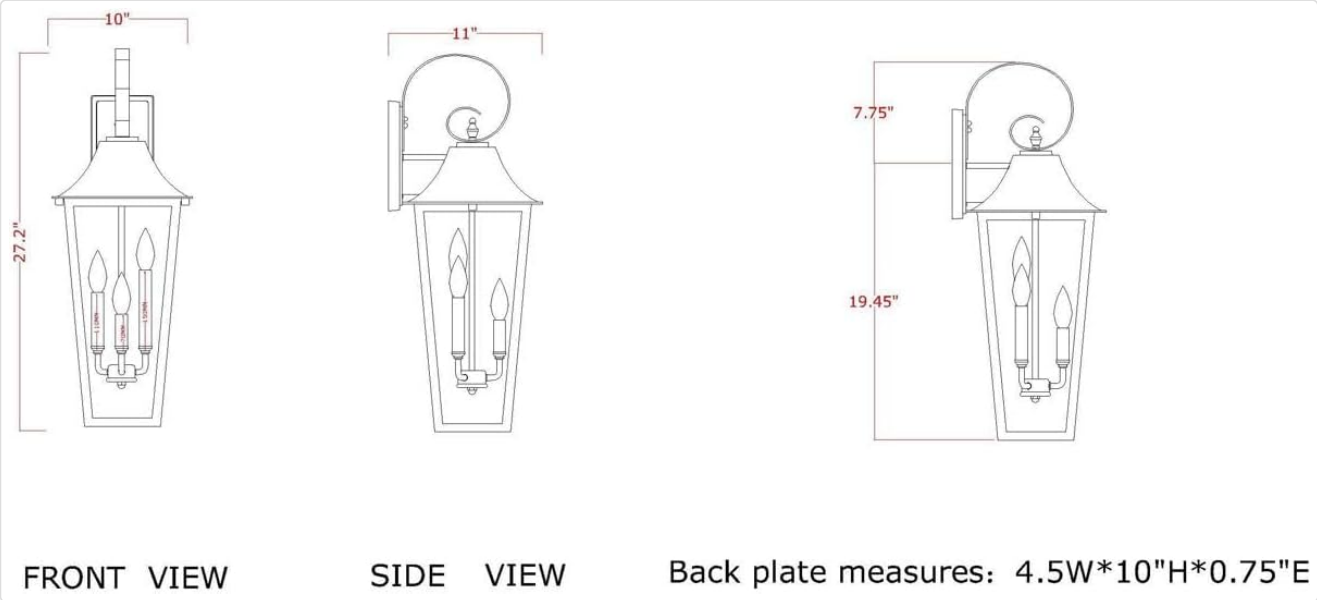


Image: Dimensional drawing of the Z-Lite Gannon 5008B outdoor wall sconce. This image displays the front view with a height of 27.2 inches and a width of 10 inches. The side view shows a depth of 11 inches. A separate diagram illustrates the backplate dimensions: 4.5 inches wide, 10 inches high, and 0.75 inches extension from the wall.

4. **Attach mounting bracket:** Secure the mounting bracket (included in hardware kit) to the junction box using the provided screws. Ensure the bracket is firmly attached and level.

3. Wiring

CAUTION: Ensure power is OFF before proceeding with wiring.

5. **Connect wires:** Using wire nuts (not always included), connect the fixture's wires to the corresponding wires from the junction box:
    - Connect the **black** (hot) wire from the fixture to the**black** (hot) wire from the junction box.
    - Connect the **white** (neutral) wire from the fixture to the**white** (neutral) wire from the junction box.
    - Connect the **green** or bare copper (ground) wire from the fixture to the**green** or bare copper (ground) wire from the junction box. If no ground wire is present in the junction box, consult a qualified electrician.
6. **Tuck wires:** Carefully tuck all connected wires into the junction box.

4. Securing the Fixture

7. **Attach fixture to bracket:** Align the fixture's backplate with the mounting bracket and secure it using the provided screws or nuts. Ensure the fixture is flush against the mounting surface and securely fastened.

5. Bulb Installation

This fixture requires three light sources.



Image: A detailed close-up of the Z-Lite Gannon 5008B outdoor wall sconce, highlighting the three candelabra-style light sockets. The image shows the internal structure where bulbs are to be inserted.

8. **Insert bulbs:** Carefully screw the recommended bulbs into the sockets. Do not overtighten.
9. **Restore power:** Once all steps are complete, restore power at the circuit breaker or fuse box.
10. **Test fixture:** Turn on the light switch to ensure the fixture is operating correctly.

Operation

The Z-Lite Gannon 5008B Outdoor Wall Sconce operates like any standard outdoor lighting fixture. Once properly installed and powered, it can be controlled by an external wall switch, dimmer (if compatible with installed bulbs), or timer system connected to its circuit.



Image: The Z-Lite Gannon 5008B outdoor wall sconce is shown installed on the exterior wall of a residential home, providing illumination near the main entrance. The fixture's black finish complements the home's exterior.

Maintenance

Cleaning

- **Disconnect power:** Always turn off power to the fixture before cleaning.
- **Wipe surfaces:** Use a soft, dry, or slightly damp cloth to clean the exterior surfaces.
- **Avoid harsh chemicals:** Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Clean glass:** For glass panels, use a mild glass cleaner applied to a cloth, not directly to the fixture.

Bulb Replacement

- **Disconnect power:** Turn off power to the fixture and allow bulbs to cool completely before replacing.
- **Remove old bulbs:** Carefully unscrew the old bulbs.
- **Install new bulbs:** Screw in new bulbs of the correct type and wattage (max 180 watts total for 3 bulbs, 60W per bulb).
- **Restore power:** Turn power back on and test the fixture.

Troubleshooting

If your Z-Lite Gannon 5008B Outdoor Wall Sconce is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check the circuit breaker or fuse. Ensure the wall switch is in the ON position.
	Loose or incorrect wiring.	Turn off power at the breaker. Recheck all wire connections. Consult a qualified electrician if unsure.
	Faulty bulb(s).	Replace bulb(s) with new ones of the correct type and wattage.
Light flickers.	Loose bulb.	Tighten the bulb(s) in the socket.
	Incompatible dimmer switch or bulb.	Ensure bulbs are dimmable if using a dimmer. Replace with compatible components.

If these steps do not resolve the issue, contact customer support or a qualified electrician.

Specifications

- **Model Number:** 5008B
- **Brand:** Z-Lite
- **Style:** Gannon
- **Color:** Black
- **Material:** Stainless Steel
- **Fixture Type:** Outdoor Wall Light
- **Number of Light Sources:** 3
- **Voltage:** 120 Volts

- **Maximum Wattage:** 180 watts (total)
- **Indoor/Outdoor Usage:** Outdoor
- **Item Dimensions (L x W x H):** 11" x 10" x 27.25"
- **Item Weight:** 13 Pounds
- **Mounting Type:** Ambient Lighting

Warranty

This Z-Lite Gannon 5008B Outdoor Wall Sconce is covered by a limited manufacturer warranty. Please refer to the warranty documentation included with your purchase or contact Z-Lite customer support for specific terms and conditions.

Customer Support

For technical assistance, missing parts, or warranty inquiries, please contact Z-Lite customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9KSY7G1

More documents and user manuals: **https://manuals.plus/**