Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hostreat LL-050-2

Hostreat Christmas Snowflake Projector Lights Outdoor

Model: LL-050-2

1. Introduction

Thank you for choosing the Hostreat Christmas Snowflake Projector Lights. This device is designed to project dynamic snowflake patterns, creating a festive atmosphere for both indoor and outdoor settings. Please read this manual thoroughly before use to ensure proper installation, operation, and maintenance.



Image 1.1: The Hostreat Christmas Snowflake Projector Lights creating a festive snowflake display on a house.

2. Safety Information

- Ensure the power source matches the device's requirements.

- Do not look directly into the light source to avoid eye damage.
- Keep the device away from open flames and excessive heat.
- Do not attempt to disassemble or modify the device. Refer all servicing to qualified personnel.
- Ensure all connections are secure and waterproof for outdoor use.
- Unplug the device during lightning storms or when unused for extended periods.

3. Package Contents

The package includes the following items:

- Hostreat Christmas Snowflake Projector Light unit (Model LL-050-2)
- Ground stake
- Round base
- Power adapter
- Instruction manual



Image 3.1: Overview of the projector components, including the main unit, mounting options, and power supply.

4. Setup Instructions

The Hostreat Snowflake Projector offers flexible installation options for various environments.

4.1 Assembling the Projector Heads

The projector features three adjustable heads. Gently push each projector head onto its designated ball joint on the main unit. Twist the locking piece to secure it in place. No additional tools are required for this step.

4.2 Mounting Options

- **Ground Installation:** Attach the ground stake to the base of the projector. Insert the stake firmly into soft ground (e.g., lawn or garden bed).
- **Flat Surface Installation:** Attach the round base to the projector. Place the projector on a flat, stable surface such

as a patio, deck, or indoor floor.

- **Wall Mounting:** The round base can also be used for wall mounting. Secure the base to a wall using appropriate screws (not included) and then attach the projector unit.

4.3 Power Connection

Connect the power adapter to the projector unit and then plug the adapter into a standard electrical outlet. Ensure the connection is tight and protected from moisture, especially for outdoor use.

Your browser does not support the video tag.

Video 4.1: A short demonstration of the Hostreat Snowflake Projector's setup and operation, highlighting its ease of use.

5. Operating Instructions

Once powered on, the projector will automatically begin displaying dynamic snowflake patterns. The three projector heads can be individually angled to cover a wider area or focus on specific points. The optimal projection distance is 16-36 feet, covering an area of 235-521 square feet.

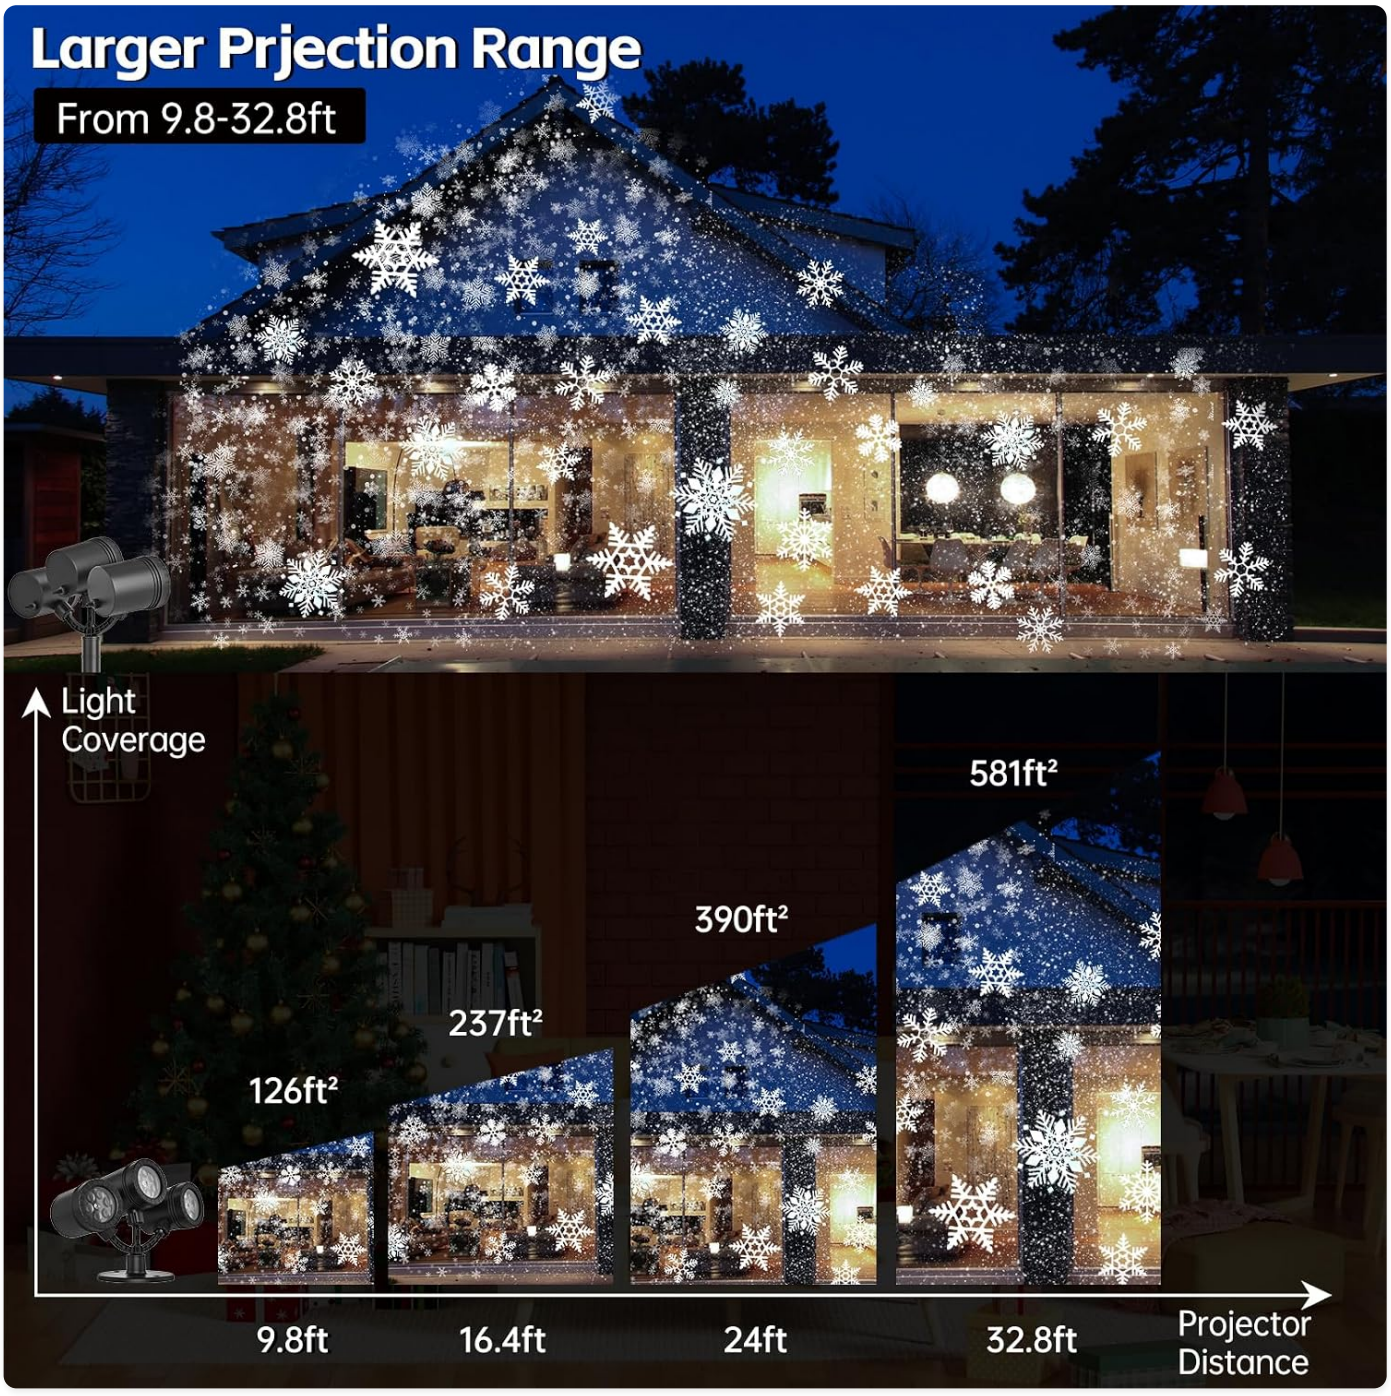


Image 5.1: This diagram shows the effective projection range and coverage area, indicating how distance affects the illuminated surface size.

5.1 Indoor and Outdoor Use

The projector is suitable for both indoor and outdoor use. For indoor applications, project onto walls or ceilings to create a magical snowfall effect. For outdoor use, project onto the exterior of your home, fences, or trees.



Image 5.2: The projector's versatility is shown with examples of its use in both indoor and outdoor settings.

Your browser does not support the video tag.

Video 5.1: A demonstration of the 2024 upgraded snowflake projector in action, showcasing its dynamic patterns.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your projector.

- **Cleaning:** Gently wipe the lens and exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check the power cord and connections for any signs of damage.

7. Troubleshooting

If you encounter any issues, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Projector does not turn on.	No power supply; faulty connection.	Check power outlet, ensure adapter is securely connected.
Snowflake patterns are dim or unclear.	Excessive ambient light; incorrect projection distance; dirty lens.	Operate in darker conditions; adjust projection distance (16-36ft recommended); clean the lens.
Patterns are not moving.	Motor malfunction.	Contact customer support if the issue persists after power cycling.

8. Specifications

Feature	Detail
Model Number	LL-050-2
Brand	Hostreat
Light Source Type	Light Emitting Diode (LED)
Number of Light Sources	3
Light Source Wattage	12 Watts
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	White
Product Dimensions	5.9"L x 5.7"W x 4.7"H
Item Weight	15.5 Ounces
Power Source	Corded Electric
Mounting Type	Wall Mount, Ground/Lawn Mount
Beam Angle	30 Degrees
Certification	FCC

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Hostreat website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Hostreat. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9LX2BB8

More documents and user manuals: **https://manuals.plus/**