Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Blooy 2996S

Blooy 2996 Metal Bobbin Instruction Manual

For Singer and Consew Sewing Machines

Introduction

This manual provides comprehensive instructions for the proper use, maintenance, and troubleshooting of your Blooy 2996 Metal Bobbins. These bobbins are designed for compatibility with various Singer and Consew sewing machine models, ensuring smooth and efficient sewing operations. Please read this manual carefully before use to ensure optimal performance and longevity of your bobbins.

Product Overview

The Blooy 2996 Metal Bobbins are precision-engineered sewing machine accessories. Each bobbin is made from durable steel, designed to withstand the rigors of regular sewing. This pack includes 20 bobbins, providing a generous supply for your sewing projects.



Image: Three Blooy 2996 metal bobbins, showcasing their design and metallic finish from various perspectives.



Image: A detailed close-up of a single Blooy 2996 metal bobbin, highlighting its central hole and the small notch for thread winding.



Image: A full view of the 20-piece pack of Blooy 2996 metal bobbins, arranged neatly to show the quantity included.

Compatibility

These bobbins (Part Number: 2996, Alternate Part Numbers: 6018, 212C) are compatible with a wide range of sewing machines. Please verify your machine model against the lists below:

Compatible Singer Models:

- 16 Class, 16U
- 31 Class, 32-45, 32-63, 32-64, 331K, 331K1, 331K2, 331K3, 331K4, 331K101, 331K102, 331K103, 331k104, 31K19, 31K21, 31K47
- 32K4, 32K6
- 37-2, 37-3, 37-4, 37-5, 37-6, 37-7, 37-8, 37-9, 37-10
- 44 Class, 44-91, 46K10, 46K14
- 68, 69 Class, 78 Class

- 431F200A
- 51-1, 51-2, 51-3, 51-4, 51-6, 51-7, 51-8, 51-9, 51-10, 51-11, 51-15, 51-16
- 58-1, 58-2, 58-3, 58-4, 58-5, 58-9, 58-10, 58-11, 58-12, 58-13, 58-15, 58-14, 58-16

Note: Not compatible with Singer 31-20.

Compatible Consew Models:

- 118 Class
- 18 Class
- 28 Class

Setup and Installation

Proper setup of the bobbin is crucial for smooth sewing. Follow these general steps, referring to your sewing machine's specific manual for detailed instructions on bobbin winding and insertion.

1. **Winding the Bobbin:**
    - Place an empty Blooy 2996 metal bobbin onto the bobbin winder spindle of your sewing machine.
    - Follow your machine's threading path for bobbin winding, typically involving guiding the thread through tension discs and around the bobbin.
    - Engage the bobbin winder and start the machine to wind the thread evenly onto the bobbin. Do not overfill.
    - Once full, cut the thread and remove the wound bobbin from the spindle.
2. **Inserting the Bobbin:**
    - Open the bobbin case or bobbin compartment of your sewing machine.
    - Insert the wound bobbin into the bobbin case or drop-in compartment according to your machine's design (e.g., clockwise or counter-clockwise rotation).
    - Pull the thread through the tension spring or slot in the bobbin case/compartment. Ensure the thread moves freely.
    - Close the bobbin case or compartment cover securely.

Operation

Once the bobbin is correctly installed, you can proceed with your sewing project. The Blooy 2996 metal bobbins are designed for consistent thread delivery, contributing to even stitches.

- **Thread Tension:** Ensure your machine's upper thread tension is correctly adjusted to balance with the bobbin thread tension. Incorrect tension can lead to skipped stitches or uneven seams.
- **Regular Checks:** Periodically check the bobbin thread level to avoid running out mid-seam.
- **Smooth Unwinding:** These metal bobbins are designed for smooth unwinding. If you experience snagging or uneven thread release, check for any burrs on the bobbin or issues with your bobbin case.

Maintenance

Proper care of your bobbins will extend their lifespan and ensure consistent sewing performance.

- **Cleaning:** Regularly inspect bobbins for lint or thread residue, especially around the center hole and edges. Use a small brush or compressed air to clean them.

- **Storage:** Store bobbins in a clean, dry place, preferably in a bobbin organizer to prevent tangling of threads and to protect them from dust and damage.
- **Inspection:** Before each use, quickly inspect bobbins for any signs of damage, such as bends, burrs, or rust. Damaged bobbins can affect stitch quality and potentially damage your machine.
- **Material:** Being made of steel, these bobbins are durable. Avoid dropping them on hard surfaces, which could deform them.

Troubleshooting

If you encounter issues related to bobbin performance, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Skipped Stitches / Uneven Stitches	Incorrect bobbin insertion, improper bobbin winding, or incorrect thread tension.	Ensure bobbin is inserted correctly (direction matters for some machines). Rewind bobbin if thread is unevenly wound. Adjust upper thread tension.
Thread Snagging / Breaking	Damaged bobbin (burrs, bends), lint in bobbin case, or incorrect bobbin size.	Inspect bobbin for damage; replace if necessary. Clean bobbin case thoroughly. Verify bobbin is the correct size for your machine.
Bobbin Thread Not Picking Up	Bobbin not seated correctly, or upper thread not properly threaded.	Re-seat the bobbin firmly in its case/compartment. Re-thread the entire machine, ensuring all guides and tension discs are correctly used.

Specifications

Detailed specifications for the Blooy 2996 Metal Bobbins:

- **Part Number:** 2996
- **Alternate Part Numbers:** 6018, 212C
- **Material:** Steel
- **Color:** Silver
- **Outside Diameter:** 20.6 mm
- **Height (Tall):** 11.7 mm
- **Product Dimensions:** 3 x 3 x 1.3 cm
- **Item Weight:** 100 g (for the pack)
- **Quantity:** 20 Pieces per pack

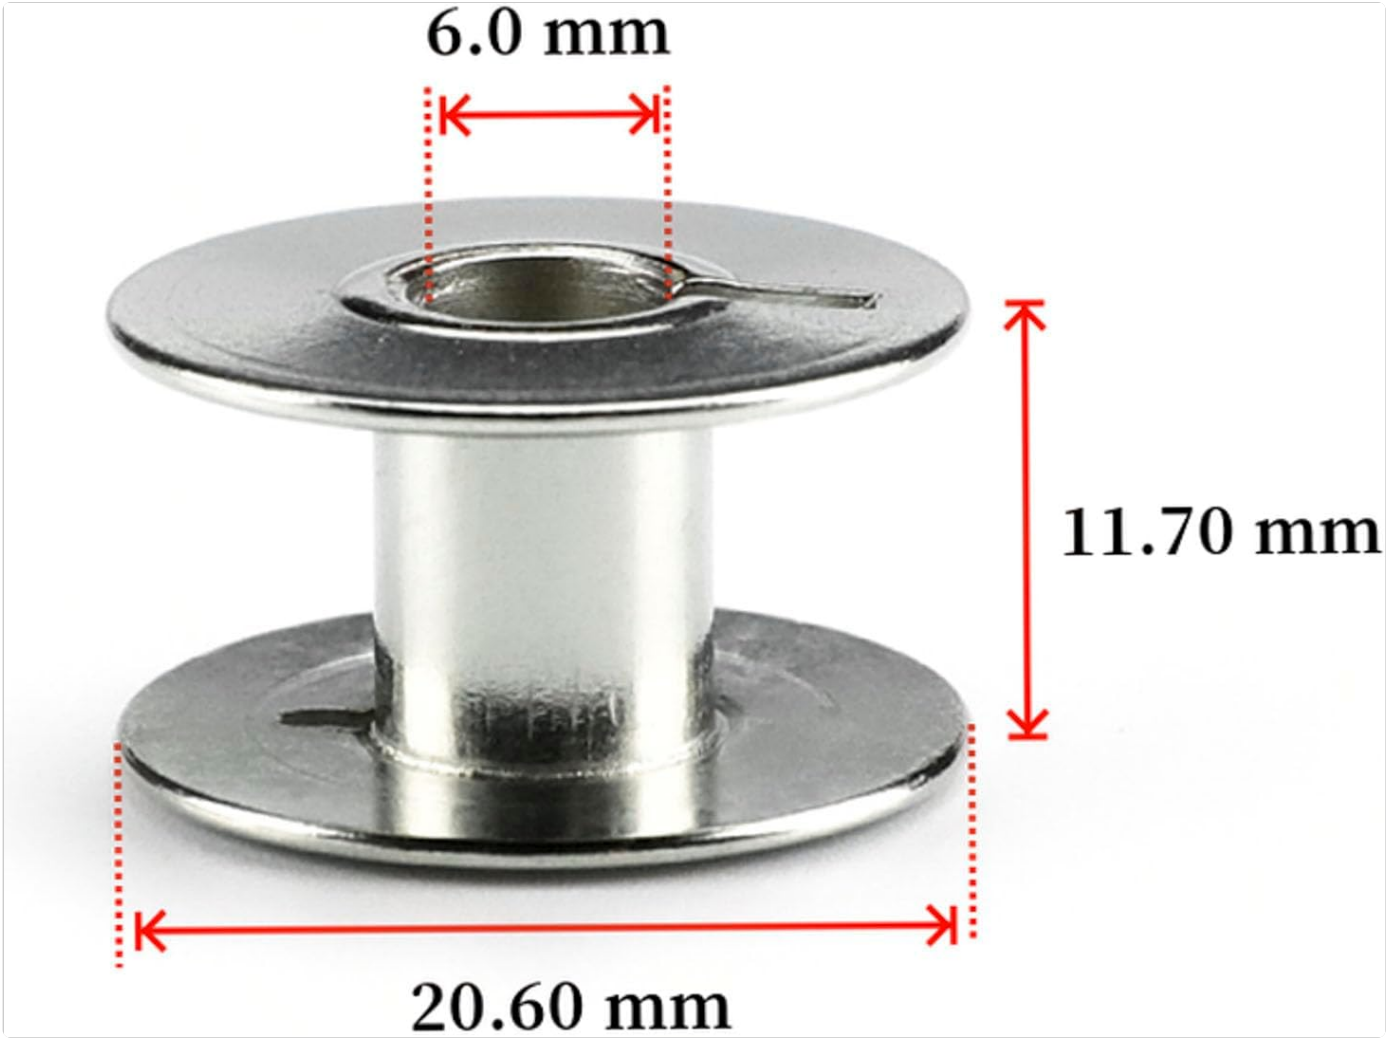


Image: A technical diagram illustrating the precise dimensions of a single Blooy 2996 metal bobbin, including its diameter (20.60 mm) and height (11.70 mm).

Warranty and Support

For any questions, concerns, or support regarding your Blooy 2996 Metal Bobbins, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase. Specific warranty details may vary by region and retailer.

For general inquiries, you may visit the Blooy brand page on Amazon.

© 2024 Blooy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9R23L4Q

More documents and user manuals: **https://manuals.plus/**