Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XCZAP 027201

XCZAP Waterproof LED Digital Watch Model 027201 Instruction Manual

Introduction

This manual provides comprehensive instructions for the XCZAP Waterproof LED Digital Watch, Model 027201. This digital watch features a chronograph, alarm, 12/24 hour display, date, day of the week, and LED backlight. Please read this manual carefully to ensure proper use and maintenance of your watch.



Image: The XCZAP Digital Watch displayed on a wrist, showing its design and digital display.

Watch Components

Familiarize yourself with the buttons and display of your watch:

- **LIGHT Button:** Activates the LED backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Chronograph).
- **RESET Button:** Used for resetting values during setting or chronograph.
- **START Button:** Used for starting/stopping functions or adjusting values during setting.



Image: A close-up view of the watch dial, highlighting the "LIGHT", "START", "MODE", and "RESET" button labels around the bezel.

Setup and Time Setting

To set the time and date on your XCZAP digital watch:

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. While a digit is flashing, press the **START** button to adjust the value. Hold the **START** button to increase values quickly.
4. To switch between 12-hour and 24-hour format, press the **RESET** button until the hour digits are flashing, then press **START** to toggle.
5. Once all settings are adjusted, press the **MODE** button to return to the normal time display.

Operating Functions

Alarm Setting

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **RESET** button to select between setting hours or minutes.
3. Press the **START** button to adjust the flashing value.
4. Press the **MODE** button to confirm and exit alarm setting.
5. To activate/deactivate the alarm, press the **RESET** button while in alarm mode (after pressing MODE twice). An alarm icon will appear/disappear on the display.

Chronograph (Stopwatch)

1. From the normal time display, press the **MODE** button once to enter chronograph mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the chronograph to "00:00:00" while it is paused.
5. Press the **MODE** button to exit chronograph mode and return to normal time display.

LED Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds, improving visibility in low-light conditions.

Maintenance

Proper care will extend the life of your watch:

- **Water Resistance:** This watch is 3ATM (30 meters) water resistant, suitable for daily water splashes like hand washing. It is **not** suitable for showering, bathing, swimming, or diving. Avoid pressing buttons underwater.
- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The watch uses a standard watch battery. Battery replacement should be performed by a qualified technician to maintain water resistance.



Image: A diagram illustrating the 30M water resistance rating, showing suitability for hand washing but not for showering, swimming, or diving.



Image: A person washing hands, demonstrating the watch's suitability for daily water splashes.

Troubleshooting

If you encounter issues with your watch, refer to the following common solutions:

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not specify one). Try pressing the buttons firmly. If the issue persists, a battery reset (by removing and reinserting the battery) might be necessary, but this should be done by a professional.
- **Time is inaccurate:** Re-set the time following the "Setup and Time Setting" instructions. If inaccuracy persists after setting, the battery may be weak or the movement may require service.
- **Water inside the watch:** If moisture appears inside the watch, stop using it immediately and have it inspected by a professional. This indicates a breach in the water resistance seal.

Specifications

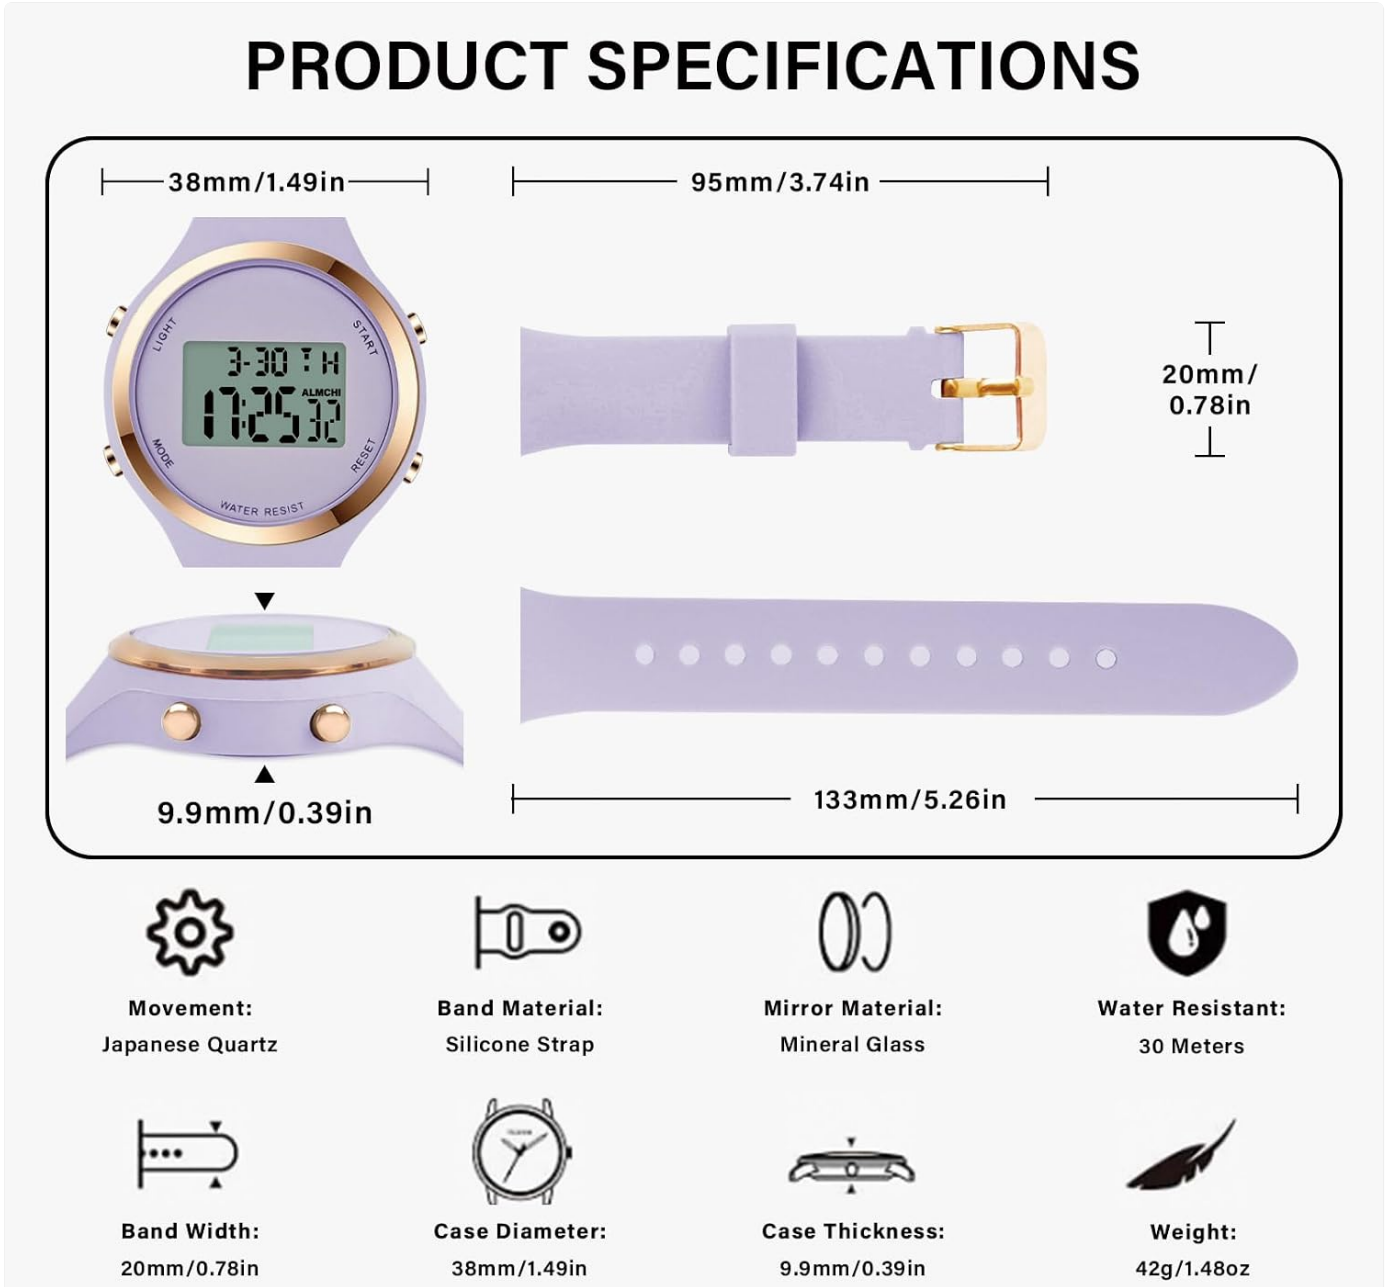


Image: A technical diagram showing the dimensions and key specifications of the watch.

Product Specifications

Model Number	027201
Movement Type	Digital, Japanese Quartz
Case Material	Rubber, Alloy
Band Material	PU, Silicone
Dial Diameter	38 mm / 1.49 in
Case Thickness	12 mm / 0.47 in
Band Width	16 mm / 0.62 in
Band Length	225 mm / 8.85 in

Water Resistance	30 Meters (3 ATM)
Functions	LED Light, Chronograph, Alarm, 12/24 Hour, Date, Week, Stopwatch
Weight	17 Grams / 0.6 ounces

Warranty and Support

This XCZAP watch comes with a limited warranty. For specific warranty details or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9VZ4WCZ

More documents and user manuals: **https://manuals.plus/**