Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Breeze Bay 99813

Breeze Bay 99813 Replacement Ceiling Fan Remote Control

User Manual

Introduction

This manual provides instructions for the installation, operation, and maintenance of your Breeze Bay 99813 Replacement Ceiling Fan Remote Control. Please read these instructions carefully before use to ensure proper functionality and safety.

Package Contents

Verify that all items are present in your package:

- 1 x Remote Control
- 1 x Wall Mount Holder
- 1 x User Manual
- 2 x Screws



Image Description: A flat lay image displaying the contents of the package: one white remote control, one white wall mount holder, a folded user manual, and two screws with plastic sleeves.

Compatibility

This remote control is a replacement for Hunter 99813 remotes operating at a frequency of 434MHz. It is **not universal**. To ensure compatibility, check the FCC ID/Model number on the back of your original remote. It must match one of the following:

- 99770
- 99392
- 99118
- 99122
- 99123
- 99119

If your original remote's FCC ID/Model is not listed, this remote may not be compatible with your receiver.

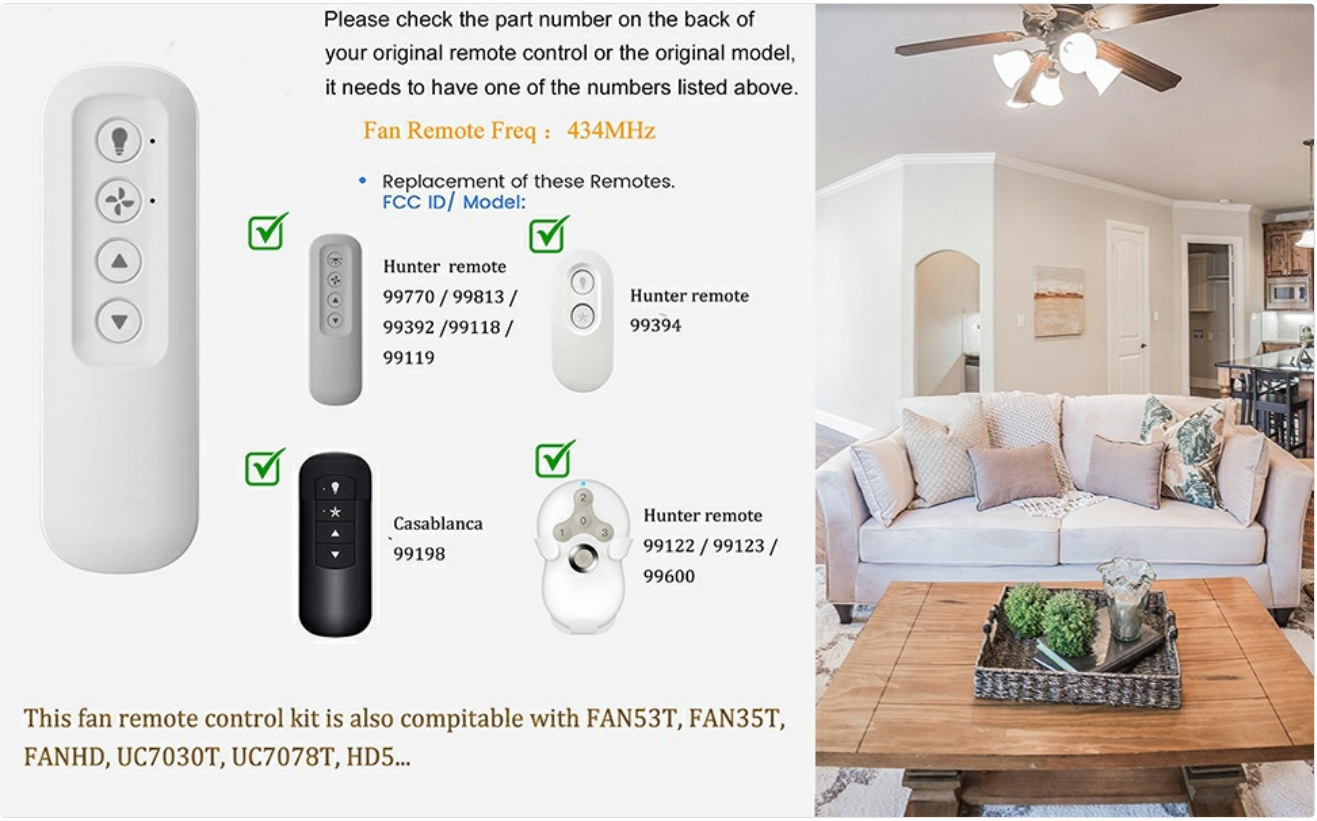


Image Description: A graphic showing the Breeze Bay remote alongside several older Hunter and Casablanca remote models, indicating which FCC ID/Model numbers are compatible replacements.

Setup

1. Battery Installation

The remote control requires one 3V CR2032 battery (not included).

1. Locate the battery compartment on the back of the remote control.
2. Use a small screwdriver to remove the screw securing the battery cover.
3. Open the battery cover.
4. Insert the CR2032 battery with the positive (+) side facing up.
5. Replace the battery cover and secure it with the screw.

2. Pairing the Remote

This remote features a self-learning function for convenient pairing.

1. **Cycle Fan Power:** Turn off the power to your ceiling fan using the wall switch or circuit breaker. Keep it off for at least 4 seconds, then restore power.
2. **Press Learn Button:** Within 30 seconds of restoring power to the fan, locate the "Learn" button inside the remote's battery compartment (after installing the battery). Short press the "Learn" button. **Do not hold the button.**
3. **Confirmation:** The fan light will blink twice to confirm successful pairing.



Image Description: A step-by-step visual guide demonstrating how to open the remote's battery cover, cycle the fan's power, and press the 'Learn' button for pairing.

Setup Video Guide

Your browser does not support the video tag.

Video Description: An official product video demonstrating the unboxing, battery installation, and basic testing of the Breeze Bay 99813 ceiling fan remote control.

Operating Instructions

Fan Speed Control

The remote control allows you to adjust the fan speed and turn the fan off.

- **HI:** Sets the fan to high speed.
- **LO:** Sets the fan to low speed.
- **FAN OFF:** Turns the fan off.



Image Description: A visual representation of the remote's fan speed buttons, indicating settings for high, medium, low, and sleep modes, suitable for various activities like sport, normal use, and sleeping.

Light Control and Dimming

The LIGHT button controls the ceiling fan's light brightness and On/Off function.

- **Short Press:** Toggles the light On or Off.
- **Long Press:** Dims the light from 1% to 100% (stepless dimming).

Note: This remote is compatible with all incandescent light bulbs and dimmable LED/CFL lamps. Other LED and CFL lamps may only support On and Off functions.



Image Description: Two scenes illustrating the light dimming feature: one showing a dinner setting with 70% brightness, and another showing a sleeping child with 10% brightness for rest.

Maintenance

No specific user maintenance is required for this remote control. Keep the remote clean and dry. Replace the battery when the remote's indicator light does not illuminate or when the remote becomes unresponsive.

Troubleshooting

- **Remote not responding:** Ensure the battery is correctly installed and has sufficient charge. Replace the CR2032 battery if necessary.
- **Remote not pairing:** When cycling power to the fan, ensure both the wall switch and the circuit breaker are turned off for at least 4 seconds before restoring power. This ensures a complete power cycle for the receiver.
- **Fan or light not responding after pairing:** Re-attempt the pairing process. Ensure the "Learn" button is pressed within 30 seconds of restoring power to the fan.
- **Light dimming not working:** Verify that your light bulbs are dimmable. Non-dimmable LED/CFL bulbs will only support On/Off functionality.

Specifications

Feature	Specification
Model Numbers	RC81T & RC82T (Replacement for 99813)
Power Source	1 x 3V CR2032 Battery (not included)
Frequency	434MHz
Dimensions	4.8 x 2.24 x 1.38 inches (12.2 x 5.7 x 3.5 cm)
Item Weight	1.76 ounces (50 grams)
Special Feature	Light Dimmer
Color	White
Compatible Devices	3-Speed AC Hunter Ceiling Fan (specific models listed in Compatibility section)

Warranty and Support

For warranty information, please refer to the retailer's return and warranty policies where the product was purchased. For technical support or further assistance, please contact Breeze Bay customer service through the retailer's platform or the official Breeze Bay store.

© 2026 Breeze Bay. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9XJ1VSD

More documents and user manuals: **https://manuals.plus/**