OSOTEK H200 Pro Plus

OSOTEK H200 Pro Plus Wet and Dry Vacuum Cleaner

User Manual

1. Introduction

Thank you for choosing the OSOTEK H200 Pro Plus Wet and Dry Vacuum Cleaner. This advanced cordless cleaning device is designed to provide efficient and thorough cleaning for various hard floor surfaces. Featuring innovative self-cleaning, hot air drying, and powerful suction, it simplifies your cleaning routine. Please read this manual carefully before operating the device to ensure proper use, maintenance, and optimal performance. Keep this manual for future reference.

2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Use only as described in this manual.
- Do not immerse the appliance, power adapter, or charging base in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only OSOTEK recommended cleaning solutions.
- Ensure the dirty water tank is properly installed before use.
- Store the appliance indoors in a dry place.

3. Package Contents

Carefully unpack your OSOTEK H200 Pro Plus and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1x OSOTEK H200 Pro Plus Wet Vacuum Cleaner
- 1x Brush (internally installed)
- 1x Filter (internally installed)
- 1x OSOTEK Floor Cleaning Solution
- 1x Cleaning Tool
- 1x Power Adapter
- 1x Charging Station
- 1x Warranty Card
- 1x User Manual



Image: All components included in the OSOTEK H200 Pro Plus package.

4. Product Overview

Familiarize yourself with the different parts of your OSOTEK H200 Pro Plus for effective operation.





Image: The OSOTEK H200 Pro Plus main unit, showing its sleek design and brush head.

Key Components:

- **Handle:** Ergonomically designed for comfortable grip and control.
- **LED Display:** Provides real-time information on machine status, water levels, and battery life.
- **Clean Water Tank (750 ml):** Holds fresh water and cleaning solution.
- **Dirty Water Tank (640 ml):** Collects dirty water and debris.
- **Brush Head:** Contains the main roller brush for scrubbing and suction.
- **Charging Base:** Used for charging and initiating the self-cleaning cycle.

5. Setup

5.1 Assembly

1. Insert the handle into the main body until it clicks into place.
2. Place the charging station on a flat, stable surface near a power outlet.

5.2 Charging

Before first use, fully charge the device. A full charge takes approximately 4-5 hours.

1. Connect the power adapter to the charging station and plug it into a wall outlet.
2. Place the OSOTEK H200 Pro Plus onto the charging station. The LED display will indicate charging status.



Image: The OSOTEK H200 Pro Plus docked on its charging station.

5.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. You may add OSOTEK floor cleaning solution as per instructions on the solution bottle. Do not exceed the MAX fill line.
3. Close the cap securely and reinsert the tank into the main unit until it clicks.

6. Operating Instructions

6.1 Powering On/Off

Press the Power button on the handle to turn the device on or off. The device will start in Automatic mode by default.

6.2 Cleaning Modes

The OSOTEK H200 Pro Plus operates primarily in an automatic mode, adjusting suction and water flow based on floor conditions. The LED display will show the current mode and status.

6.3 Maneuverability and Cleaning Performance

The device is designed for easy maneuverability and effective cleaning across various hard floor types.

- **180° Flat Design:** The innovative design allows the device to lay almost flat (180° angle) and reach under furniture with a clearance as low as 10.5 cm, ensuring thorough cleaning in hard-to-reach areas.



Image: The OSOTEK H200 Pro Plus demonstrating its ability to clean under low furniture.

- **Powerful Suction:** With 20,000Pa suction power, the H200 Pro Plus effectively removes stubborn dirt, debris, and liquids from your floors.



Image: Visual representation of the powerful 20,000Pa suction capability.

- **Edge Cleaning:** The brush head design allows for close-to-edge cleaning, ensuring that corners and baseboards are thoroughly cleaned.

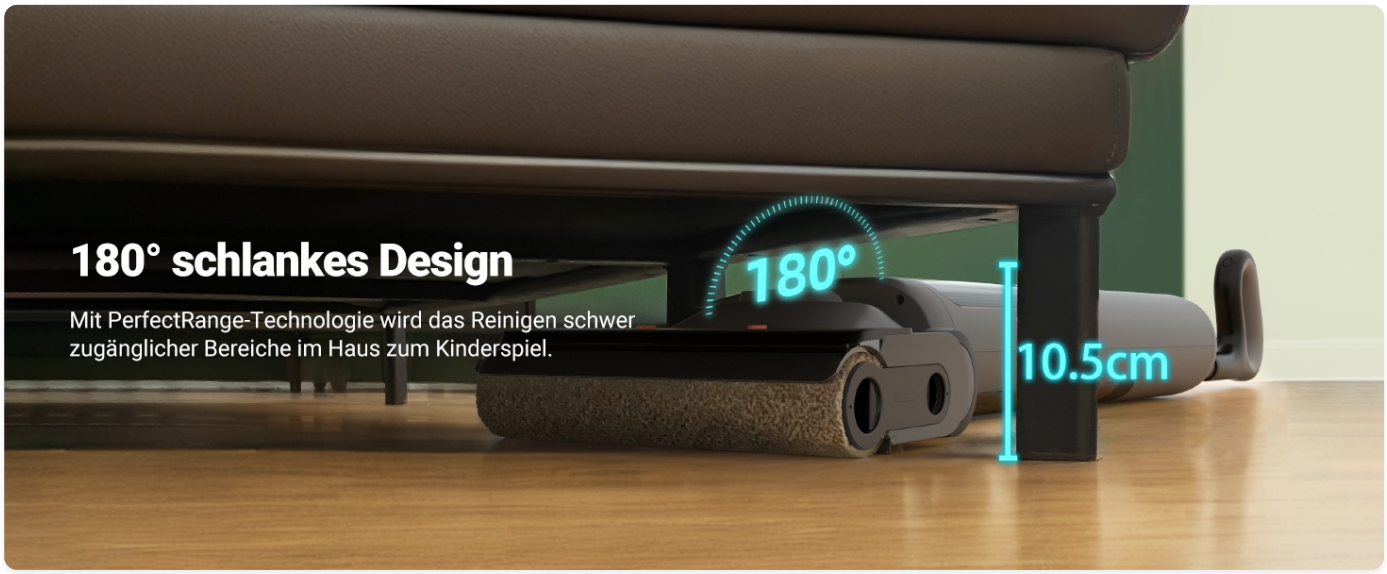


Image: The device cleaning right up to the edge of a wall.

- **Long Runtime:** The 4000mAh battery provides approximately 40 minutes of continuous cleaning in automatic mode, covering areas up to 250 m².



Image: The device's efficiency in cleaning large areas, supported by its battery life and tank capacities.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your OSOTEK H200 Pro Plus.

7.1 Self-Cleaning Function

After each use, it is recommended to run the self-cleaning cycle.

1. Place the device back on the charging station.
2. Ensure there is sufficient clean water in the clean water tank.
3. Press the Self-Cleaning button (usually indicated on the handle or charging base).
4. The device will automatically clean the roller brush with 100°C hot water and rotate the brush in both directions to

remove dirt and debris.



Image: The 100°C hot water self-cleaning process in action.

7.2 Hot Air Drying

Following the self-cleaning cycle, the device will initiate a 66°C hot air drying process.

- This feature ensures the brush roll is thoroughly dried, preventing the growth of mold, bacteria, and unpleasant odors.
- The drying process is designed to be low-noise.



Image: The 66°C hot air drying process for the brush roll.

7.3 Emptying and Cleaning the Dirty Water Tank

Empty the dirty water tank after each use.

1. Remove the dirty water tank from the main unit.
2. Open the tank and dispose of the dirty water and solid debris.
3. Rinse the tank thoroughly with clean water.
4. Allow the tank to air dry before reinserting it into the device.

7.4 Cleaning the Roller Brush and Filter

Even with self-cleaning, occasional manual cleaning of the roller brush and filter is recommended.

- Remove the roller brush cover and the brush itself. Use the provided cleaning tool to remove any tangled hair or debris.
- Rinse the brush under running water.
- Remove the filter from the dirty water tank and rinse it. Allow both to air dry completely before reassembling.



Image: The improved tangle-free roller brush design, simplifying maintenance.

8. Troubleshooting

If you encounter any issues with your OSOTEK H200 Pro Plus, please refer to the following common problems and solutions. For issues not listed here, contact customer support.

Problem	Possible Cause	Solution
Device does not power on	Low battery; Not charged; Power button not pressed correctly.	Charge the device fully; Ensure power button is pressed firmly.
Poor suction	Dirty water tank full; Clean water tank empty; Clogged brush roll/filter; Obstruction in nozzle.	Empty dirty water tank; Fill clean water tank; Clean brush roll and filter; Check for and remove obstructions.
Water leakage	Water tanks not properly installed; Tank caps not sealed; Damaged tank.	Ensure tanks are securely clicked into place; Check tank caps for proper seal; Contact support if tank is damaged.
Unpleasant odor	Dirty water tank not emptied/cleaned; Brush roll not dried properly.	Empty and clean dirty water tank thoroughly; Run self-cleaning and hot air drying cycle.
Self-cleaning not working	Insufficient clean water; Device not properly docked.	Ensure clean water tank is filled; Re-dock the device firmly on the charging station.

9. Specifications

Feature	Detail
Brand	OSOTEK
Model	H200 Pro Plus
Color	Grey
Product Dimensions	32.5 x 29 x 78.5 cm
Item Weight	5.1 Kilograms
Noise Level	78 dB
Runtime	40 Minutes (in automatic mode)
Clean Water Tank Capacity	750 ml
Dirty Water Tank Capacity	640 ml
Special Features	Self-cleaning, Hot Air Drying, Double-sided Brush Rotation, 180° Flat Design, Edge Cleaning

10. Warranty and Support

Your OSOTEK H200 Pro Plus comes with a manufacturer's warranty. Please refer to the included Warranty Card for detailed terms and conditions, including warranty period and coverage.
For technical support, troubleshooting assistance, or to inquire about replacement parts and accessories, please contact OSOTEK customer service through the official website or the contact information provided on your warranty card.
You can also visit the official OSOTEK store for more information and products:OSOTEK Store on Amazon.de

© 2025 OSOTEK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question