**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## VASAGLE ULET731W16

# VASAGLE Nightstands with Charging Station

Model: ULET731W16

Brand: VASAGLE

### Introduction

Thank you for choosing the VASAGLE Nightstands with Charging Station. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

### Product Features




The VASAGLE Nightstand features a modern design with integrated charging capabilities, perfect for any bedroom or living space.




Each nightstand measures 13.8"D x 15.7"W x 23.2"H, offering a compact yet functional design. It supports up to 136 lbs (62 kg).



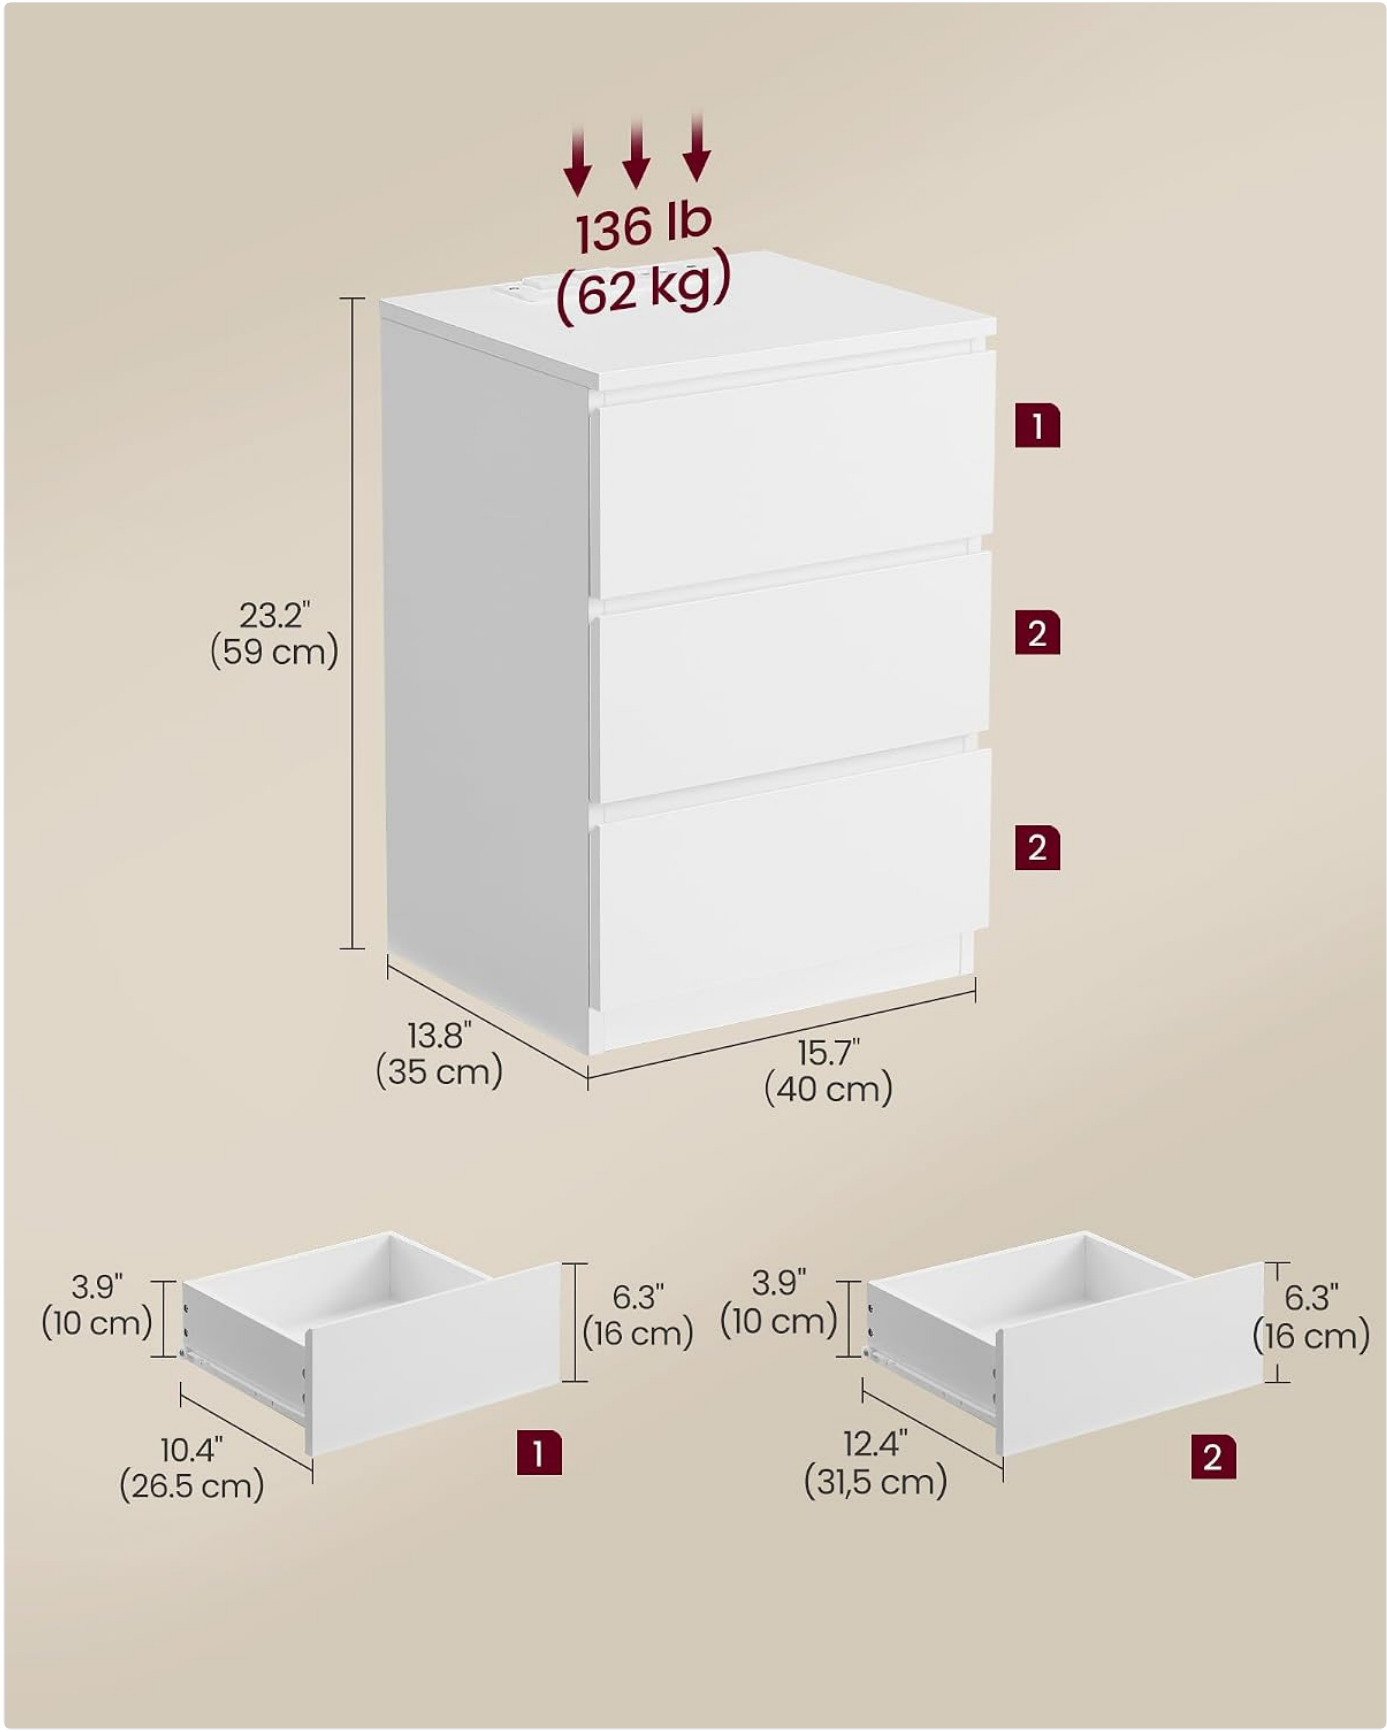

Equipped with a convenient charging station including 2 AC outlets and 2 USB ports, along with a 4.9 ft extension cord, allowing easy power access for your devices.

# Beveled Drawer Fronts

Make the drawers a breeze to open and close



Features three spacious drawers for organized storage of bedside essentials, keeping your space tidy.




The drawers are designed with beveled fronts for smooth and effortless opening and closing.




Constructed from 0.6" thick particleboard, ensuring stability and durability. The surface is also designed for easy cleaning.

## Safety Information

- Always follow assembly instructions carefully.

- Do not overload the drawers or the tabletop. The maximum weight capacity for each nightstand is 136 lbs (62 kg).
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Place the nightstand on a flat, stable surface to prevent tipping.
- Do not stand or climb on the nightstand.
- For the charging station, ensure devices are compatible with the power output (2 AC outlets, 2 USB ports). Do not exceed the rated electrical load.
- Avoid exposing the charging station to liquids.

---

## Assembly Instructions

Before you begin, ensure all parts and hardware are present. Refer to the included assembly kit and instructions for detailed step-by-step guidance. Tools recommended for assembly include an Allen Key and a screwdriver.

1. Unpack all components and verify against the parts list.
2. Identify and separate the different wooden panels and hardware.
3. Follow the numbered steps in the provided instruction manual to connect the panels using the designated screws and dowels.
4. Assemble the drawer slides onto the side panels of the nightstand.
5. Construct the drawers according to the instructions, ensuring smooth operation.
6. Install the power strip into the designated slot on the top panel.
7. Once fully assembled, gently place the nightstand in its desired location.
8. Ensure all connections are secure and the nightstand is stable before use.

---

## Operating Instructions

### Using the Charging Station:

- Plug the nightstand's power cord (4.9 ft) into a standard wall outlet.
- To charge devices, connect them to the 2 AC outlets or 2 USB ports located on the top surface of the nightstand.
- Ensure your devices are compatible with the power output of the charging station.
- Unplug devices when fully charged or when the charging station is not in use.

### Using the Drawers:

- Gently pull the beveled drawer fronts to open.
- Push the drawers back in until they are fully closed to ensure items are secure.
- Avoid forcing drawers open or closed if they encounter resistance.

---

## Maintenance and Care

- **Cleaning:** Wipe the surface with a dry cloth. Avoid using harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Immediately wipe up any spills with a soft, dry cloth to prevent staining or damage to the engineered wood.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight. Re-tighten as needed to maintain stability.
- **Placement:** Avoid placing the nightstand in direct sunlight or near heat sources to prevent warping or discoloration.

---

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Nightstand is wobbly. | Loose fasteners or uneven floor. | Check and tighten all screws. Ensure the nightstand is on a level surface; use furniture pads if necessary. |
| Drawers do not slide smoothly. | Improper assembly of drawer slides or obstruction. | Verify drawer slide installation according to instructions. Check for any objects blocking the slides. |
| Charging station not working. | Not plugged in, power outage, or faulty device. | Ensure the nightstand's power cord is securely plugged into a live outlet. Test the outlet with another device. Check your device's charging cable. |

---

## Specifications

| Feature | Detail |
|---|---|
| Brand | VASAGLE |
| Model Number | ULET731W16 |
| Color | Cloud White |
| Material | Engineered Wood, Particleboard |
| Product Dimensions (D x W x H) | 13.8" x 15.7" x 23.2" (35 cm x 40 cm x 59 cm) |
| Maximum Weight Recommendation | 136 Pounds (62 kg) |
| Charging Station | 2 AC Outlets, 2 USB Ports, 4.9 ft (1.5 m) Extension Cord |
| Number of Drawers | 3 |
| Assembly Required | Yes |

| Feature | Detail |
| --- | --- |
| Care Instructions | Wipe with Dry Cloth |

## Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official VASAGLE website. If you encounter any issues or have questions regarding your nightstands, please contact VASAGLE customer service for assistance.

© 2024 VASAGLE. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0DB73368Q**

More documents and user manuals: **https://manuals.plus/**