Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

realme realme air 6

realme Air 6 True Wireless Earbuds User Manual

Model: realme air 6

Introduction **What's in the Box** **Setup** **Operating Instructions** **Maintenance** **Troubleshooting** **Specifications** **Support**

1. Introduction

The realme Air 6 True Wireless Earbuds offer an immersive audio experience with advanced features such as 50dB Active Noise Reduction, Hi-Res Sound, and a powerful 12.4mm Dynamic Bass Driver. Designed for comfort and durability, these earbuds provide clear calls with 6 microphones and extended playback time. This manual will guide you through the setup, operation, and maintenance of your realme Air 6 earbuds.



Figure 1: realme Air 6 True Wireless Earbuds and Charging Case (Green color variant shown).

2. What's in the Box

Verify that all the following items are included in your package:

- realme Air 6 True Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable
- Eartips (various sizes)
- User Manual

3. Setup

3.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The case provides multiple charges for the earbuds, extending their usage time.

1. Place both earbuds into the charging case, ensuring they are correctly seated.
2. Connect the USB charging cable to the charging port on the case and to a power source (e.g., USB wall adapter, computer USB port).
3. The indicator light on the charging case will show the charging status. A full charge typically takes approximately 10 minutes for 7 hours of music playback, or longer for a full charge of the case and earbuds.



Figure 2: realme Air 6 Charging Case with indicator light.

3.2 Pairing with a Device

The realme Air 6 earbuds use Bluetooth 5.3 for stable and efficient wireless connectivity.

1. Ensure the earbuds are in the charging case and the case lid is open.
2. On your device (smartphone, tablet, computer), enable Bluetooth.
3. In your device's Bluetooth settings, search for available devices.
4. Select "realme Air 6" from the list of found devices to initiate pairing.
5. Once paired, the earbuds will automatically connect to your device when taken out of the case and Bluetooth is enabled on your device.

3.3 Choosing the Right Eartips

Selecting the correct eartip size is crucial for optimal sound quality, noise cancellation, and comfort. Experiment with the included eartip sizes to find the best fit for your ears.



Figure 3: Close-up view of realme Air 6 earbuds, highlighting the ear tips.

4. Operating Instructions

4.1 Touch Controls

The realme Air 6 earbuds feature intuitive touch controls on each earbud. Specific functions can often be customized via the realme Link app.

Action	Function
Single Tap	Play/Pause music, Answer/End call
Double Tap	Next track, Decline call
Triple Tap	Previous track
Press and Hold (one earbud)	Switch Noise Control Mode (ANC On/Off/Transparency)
Press and Hold (both earbuds)	Enter/Exit Game Mode

4.2 Active Noise Cancellation (ANC)

The realme Air 6 features 50dB Active Noise Cancellation, effectively reducing ambient noise for an undisturbed listening experience. It also includes a Transparency Mode to allow you to hear your surroundings without removing the earbuds.

- **ANC On:** Blocks out external noise. Ideal for noisy environments.
- **Transparency Mode:** Allows ambient sounds to pass through, useful for awareness of surroundings.
- **Normal Mode:** Standard audio playback without noise cancellation or transparency.

Switch between modes by pressing and holding one earbud. The realme Link app may offer further customization for noise control.

4.3 Game Mode (Super Low Latency)

Activate Game Mode for an ultra-low latency experience (55ms), ensuring audio and video synchronization during gaming or video playback.

- To activate Game Mode, press and hold both earbuds simultaneously.
- Repeat the action to exit Game Mode.

4.4 Call Function

Equipped with 6 microphones, the realme Air 6 earbuds provide clear call quality even in noisy environments.

- **Answer Call:** Single tap either earbud.
- **End Call:** Single tap either earbud during a call.
- **Decline Call:** Double tap either earbud when an incoming call rings.

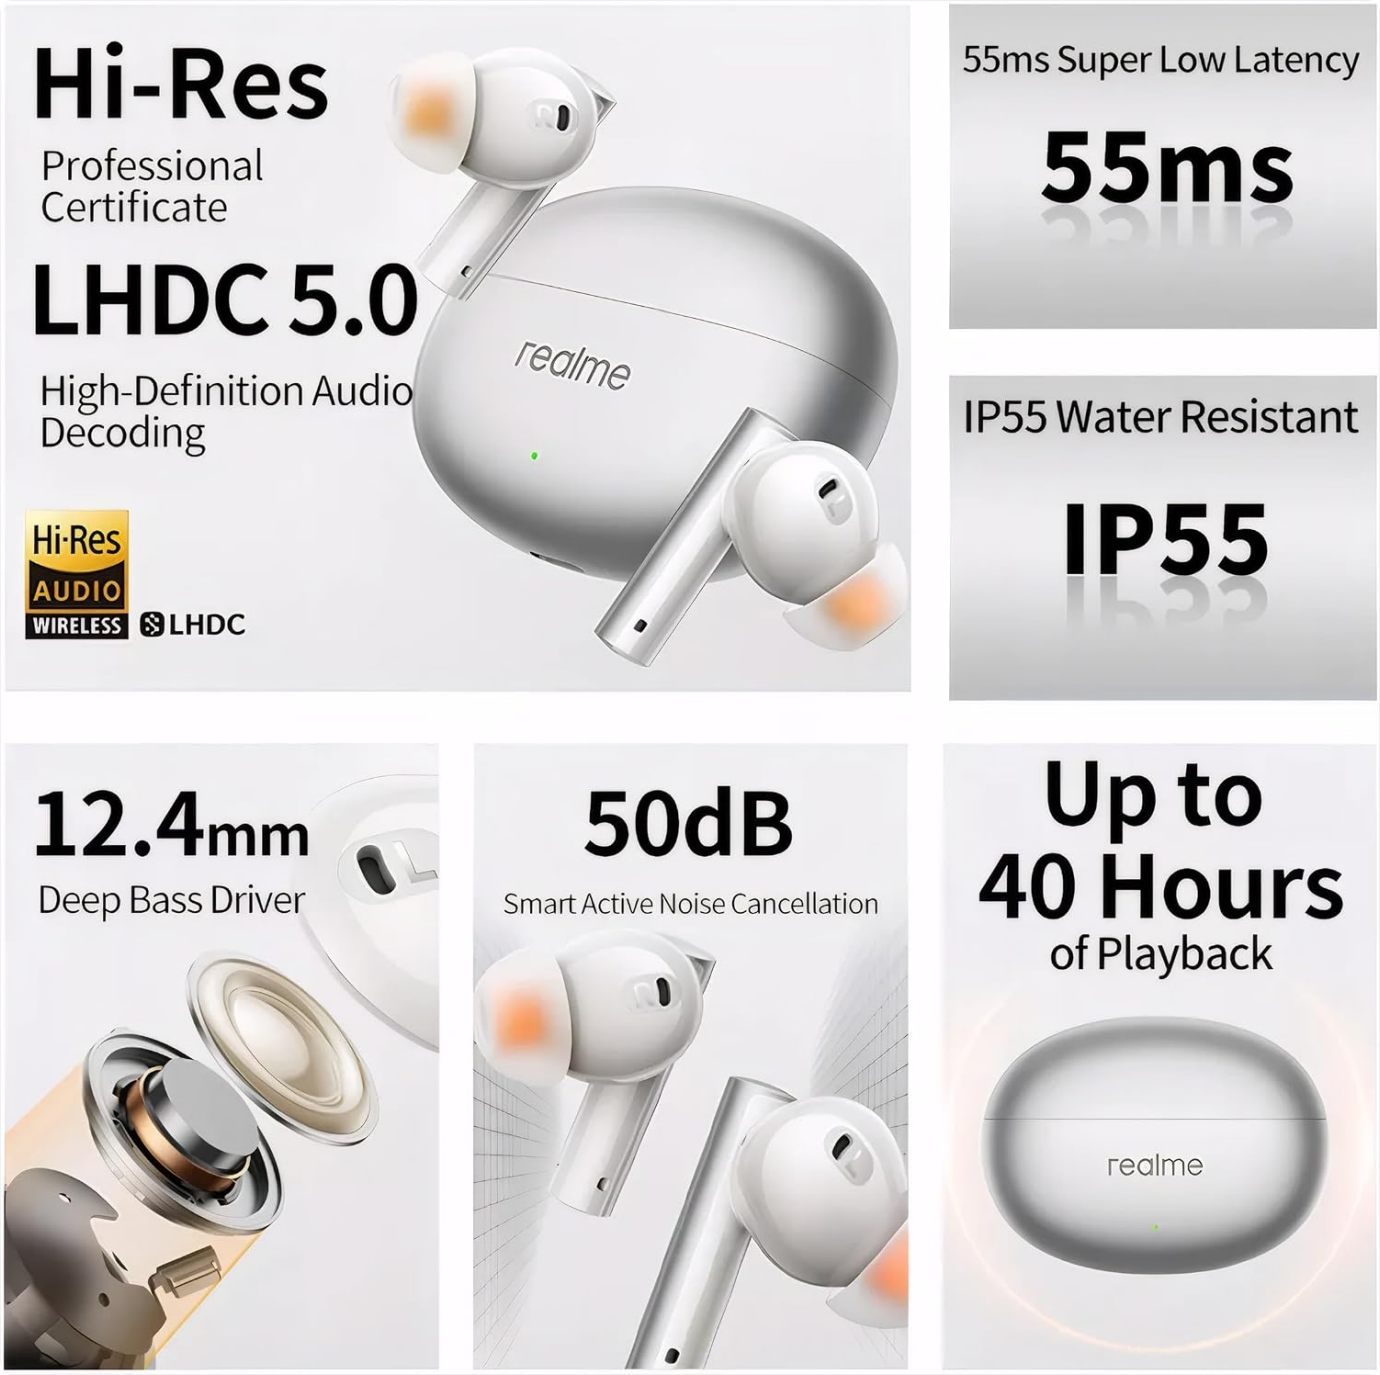


Figure 4: Key features of realme Air 6 earbuds, including Hi-Res Audio and 50dB ANC.

5. Maintenance

5.1 Cleaning

Regular cleaning helps maintain sound quality and hygiene.

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Use a cotton swab or small brush to carefully clean the speaker mesh and charging contacts. Avoid using sharp objects.

5.2 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place away from direct sunlight and extreme temperatures.

5.3 Water Resistance (IP55)

The realme Air 6 earbuds are IP55 water resistant, meaning they are protected against dust ingress and low-pressure water jets from any direction. This makes them suitable for workouts and light rain. Do not submerge the earbuds in water or expose them to high-pressure water jets.

6. Troubleshooting

If you encounter issues with your realme Air 6 earbuds, try the following solutions:

Problem	Possible Solution
Earbuds not pairing/connecting	◦ Ensure earbuds are charged. ◦ Turn Bluetooth off and on again on your device. ◦ Forget "realme Air 6" in your device's Bluetooth settings and re-pair. ◦ Place earbuds in case, close lid, wait 5 seconds, then open lid to reset connection.
No sound or low volume	◦ Check device volume and earbud volume. ◦ Ensure earbuds are properly seated in your ears. ◦ Clean speaker mesh for any debris. ◦ Reconnect the earbuds to your device.
Microphone not working during calls	◦ Ensure earbuds are connected and selected as the audio input device. ◦ Clean the microphone openings on the earbuds. ◦ Test in a quieter environment.
Battery drains quickly	◦ Ensure earbuds and case are fully charged. ◦ Active Noise Cancellation consumes more power; consider using Normal Mode when not needed. ◦ Reduce volume levels.

7. Specifications

Key technical specifications for the realme Air 6 True Wireless Earbuds:

Feature	Detail
Model Name	Air 6
Connectivity Technology	Wireless (Bluetooth 5.3)
Noise Control	50dB Active Noise Cancellation
Audio Driver Size	12.4mm Dynamic Bass Driver

Feature	Detail
Microphones	6 Mics for Clear Call
Battery Life (Earbuds + Case)	Up to 40 Hours
Charging Time	10 minutes charge for 7 hours playback
Low Latency Mode	55ms Super Low Latency (Game Mode)
Water Resistance	IP55
Frequency Range	20 Hz - 40 kHz
Weight	3.17 ounces

8. Warranty and Support

For warranty information, technical support, or further assistance, please refer to the official realme website or contact realme customer service. Keep your purchase receipt for warranty claims.
Official realme website: www.realme.com

© 2024 realme. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DB7F4JQQ

More documents and user manuals: **https://manuals.plus/**