Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AEROZY 3000

AEROZY Evaporative Air Swamp Cooler Model 3000 User Manual

Model: 3000

1. Introduction

Thank you for choosing the AEROZY Evaporative Air Swamp Cooler Model 3000. This appliance is designed to provide a comfortable indoor environment by cooling, humidifying, and circulating air. It operates by evaporating water, which naturally cools the air, making it an energy-efficient alternative to traditional air conditioners in dry climates. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.

2. Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the cooler with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Do not place the cooler near heat sources, open flames, or flammable materials.
- Always unplug the cooler before filling, cleaning, or performing any maintenance.
- Do not immerse the cooler, cord, or plug in water or other liquids.
- Keep children and pets away from the cooler during operation. The grill design is child-safe, but supervision is always recommended.
- Place the cooler on a stable, level surface to prevent tipping.
- Do not block air inlets or outlets.
- This appliance is for indoor use only.

3. Package Contents

Verify that all items are present in the package:

- 1x AEROZY Evaporative Air Cooler
- 1x Remote Control

- 2x Ice Packs
- 1x User Manual (this document)

4. Product Features

- **3-in-1 Functionality:** Operates as a fan, humidifier, and air cooler.
- **Energy Efficient:** Consumes only 45W during operation.
- **Portable Design:** Lightweight with casters for easy mobility between rooms.
- **Enhanced Cooling:** Includes two reusable ice packs for colder air output.
- **Quiet Operation:** Designed for low noise levels (approx. 36.9 dB).
- **12-Hour Timer:** Programmable timer for automatic shut-off.
- **Remote Control:** Convenient operation from a distance.
- **Multiple Settings:** Features 3 fan speeds and 3 operating modes.
- **Wide Oscillation:** 75° oscillation for broad air distribution.
- **Child-Safe Grill:** Designed with safety in mind.

5. Setup and Assembly

5.1 Unpacking

1. Carefully remove the cooler and all accessories from the packaging.
2. Retain packaging materials for future storage or transport.

5.2 Caster Installation (Tool-Free Assembly)

The AEROZY cooler features tool-free assembly for its casters, allowing for easy movement.

1. Gently lay the cooler on its side on a soft, clean surface to avoid scratching.
2. Insert each caster stem into the designated holes on the bottom of the unit until securely fitted.
3. Return the cooler to an upright position.

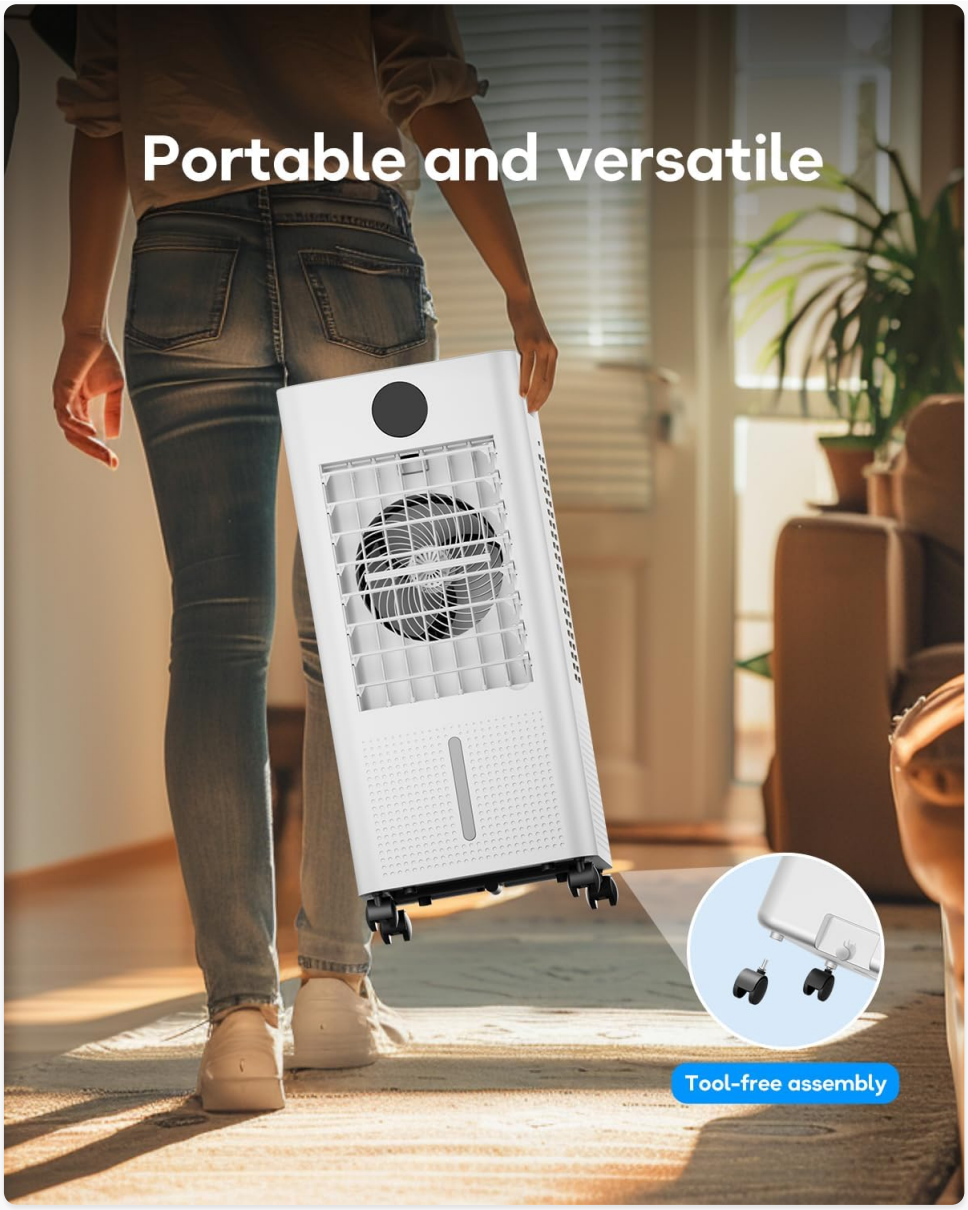


Image: The cooler is designed for portability with tool-free caster assembly.

5.3 Filling the Water Tank and Adding Ice Packs

For optimal cooling performance, fill the water tank and consider using the included ice packs.

1. Ensure the cooler is unplugged from the power outlet.
2. Locate the water tank access point (usually a top-fill or pull-out drawer).
3. Fill the tank with clean, cool water. Do not exceed the "MAX" fill line. The reservoir capacity is 2 gallons.
4. For enhanced cooling, place the two included ice packs (after freezing them) into the water tank.
5. Close the water tank access securely.



Image: Demonstrates filling the 2-gallon water tank for cooling.



Image: Illustrates the cooling process with ice packs absorbing heat and outputting cold air.

5.4 Placement

Place the cooler on a firm, level surface in a well-ventilated area. Ensure there is sufficient space around the unit for proper airflow.

6. Operating Instructions

The AEROZY Evaporative Air Cooler can be operated using the control panel on the top of the unit or the included remote control.



Image: The AEROZY cooler in operation, showing air output and the remote control.

6.1 Power On/Off

- Plug the power cord into a standard electrical outlet.
- Press the **POWER** button on the control panel or remote control to turn the unit on or off.

6.2 Fan Speed Selection

The cooler offers 3 fan speeds (Low, Medium, High).

- Press the **SPEED** button repeatedly to cycle through the available speeds.



Image: Illustrates the cooler's capability of 3 modes and 3 speeds.

6.3 Mode Selection

Choose from 3 operating modes:

- **Normal:** Constant airflow at the selected speed.
- **Natural:** Simulates a natural breeze by varying fan speeds.
- **Sleep:** Operates at a lower, quieter speed, often gradually decreasing fan speed over time for undisturbed rest.
- Press the **MODE** button repeatedly to select your desired mode.

6.4 Oscillation Function

Activate the oscillation feature to distribute cool air across a wider area (75° oscillation).

- Press the **OSC** button to start or stop the oscillation.



Image: Demonstrates the 75° oscillation feature for wide area cooling.

6.5 Timer Setting

Set the cooler to automatically turn off after a specified period (up to 12 hours).

- Press the **TIMER** button repeatedly to select the desired operating duration in hourly increments.
- The indicator lights will show the selected time.



Image: Highlights key features including the 12-hour timer, remote control, and low noise.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your AEROZY Evaporative Air Cooler. Always unplug the unit before cleaning.

7.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

7.2 Cleaning the Water Tank

Clean the water tank regularly to prevent mold and mildew growth.

1. Unplug the cooler.
2. Drain any remaining water from the tank.
3. Remove the water tank (if detachable) or access the interior for cleaning.
4. Clean the tank with a mild detergent and water. Rinse thoroughly.
5. Allow the tank to air dry completely before reassembling or refilling.

7.3 Cleaning the Evaporative Cooling Pad/Filter

The cooling pad (also known as the filter) should be cleaned periodically, especially in areas with hard water.

1. Unplug the cooler.
2. Access and carefully remove the cooling pad from the unit.
3. Rinse the pad under running water to remove dust and mineral deposits. For stubborn deposits, soak in a mild descaling solution (e.g., vinegar and water) before rinsing.
4. Allow the pad to air dry completely before reinserting it into the cooler.

7.4 Storage

When not in use for an extended period:

- Ensure the water tank and cooling pad are clean and completely dry.
- Store the cooler in a cool, dry place, preferably in its original packaging.

8. Troubleshooting

If you encounter issues with your AEROZY Evaporative Air Cooler, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply. Power cord not properly connected.	Check if the unit is plugged into a working outlet. Ensure the power cord is securely connected.
No cool air.	Water tank is empty. Cooling pad is dry or clogged. Ice packs not used or frozen.	Fill the water tank. Ensure the water pump is operating. Clean or replace the cooling pad. Freeze and insert ice packs into the water tank.
Weak airflow.	Air inlet/outlet blocked. Fan speed set too low.	Clear any obstructions from the air vents. Increase the fan speed setting.
Unpleasant odor.	Stagnant water or dirty cooling pad.	Drain and clean the water tank. Clean the cooling pad thoroughly. Use fresh water.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and unit.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the signal path.

9. Specifications

Feature	Specification
Brand	AEROZY

Feature	Specification
Model Name	3000
Mounting Type	Freestanding
Color	White
Power Consumption	45W
Noise Level	36.9 Decibels
Controls Type	Remote, On-unit buttons
Reservoir Capacity	2 Gallons
Special Features	Oscillation (75°), 3 Speeds, 3 Modes, 12H Timer, Quiet, Portable
Included Accessories	Remote Control, 2 Ice Packs

10. Warranty and Customer Support

For warranty information or technical assistance, please contact AEROZY customer support. Keep your purchase receipt as proof of purchase.
For further inquiries, please visit the AEROZY Store on Amazon.

© 2023 AEROZY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DB86K6GJ

More documents and user manuals: **https://manuals.plus/**