Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HELESIN HX-ZXS-CS

HELESIN 8ft 442 LED Lighted Christmas Cone Tree with Star Topper Instruction Manual

Model: HX-ZXS-CS

1. Introduction

Thank you for choosing the HELESIN 8ft 442 LED Lighted Christmas Cone Tree. This product is designed to provide festive illumination for your indoor and outdoor spaces. It features 442 warm white LED beads, an 8-foot height, and a star topper, creating an impressive light display. This manual provides essential information for safe installation, operation, and maintenance of your Christmas cone tree.

2. Safety Information

Please read and understand all safety instructions before installation and use. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- **Electrical Safety:** Ensure the power outlet used is suitable for outdoor use and protected by a Ground Fault Circuit Interrupter (GFCI) if installed outdoors. Do not overload electrical circuits.
- **Water Resistance:** The light string is IP44 waterproof, designed to withstand rain and snow. However, the power adapter should be protected from direct exposure to heavy rain or submersion.
- **Installation:** Install the tree on a stable, level surface. Use the provided ground inserts to secure the tree, especially in windy conditions.
- **Handling:** Do not hang heavy objects on the light strings. Avoid sharp objects that could damage the wiring.
- **Temperature:** The LED lights remain cool to the touch even after prolonged use, ensuring safety.
- **Children and Pets:** Keep packaging materials and small components away from children and pets.

3. Package Contents

Verify that all components are present before beginning assembly:

- Light String Body (with 442 LED beads)
- Detachable Bracket (Base components)

- Connecting Rods (for vertical support)
- Spring Hook
- Metal Ground Inserts (stakes)
- IR Adapter (UL certified low-voltage)
- Infrared Remote Control
- Star Topper

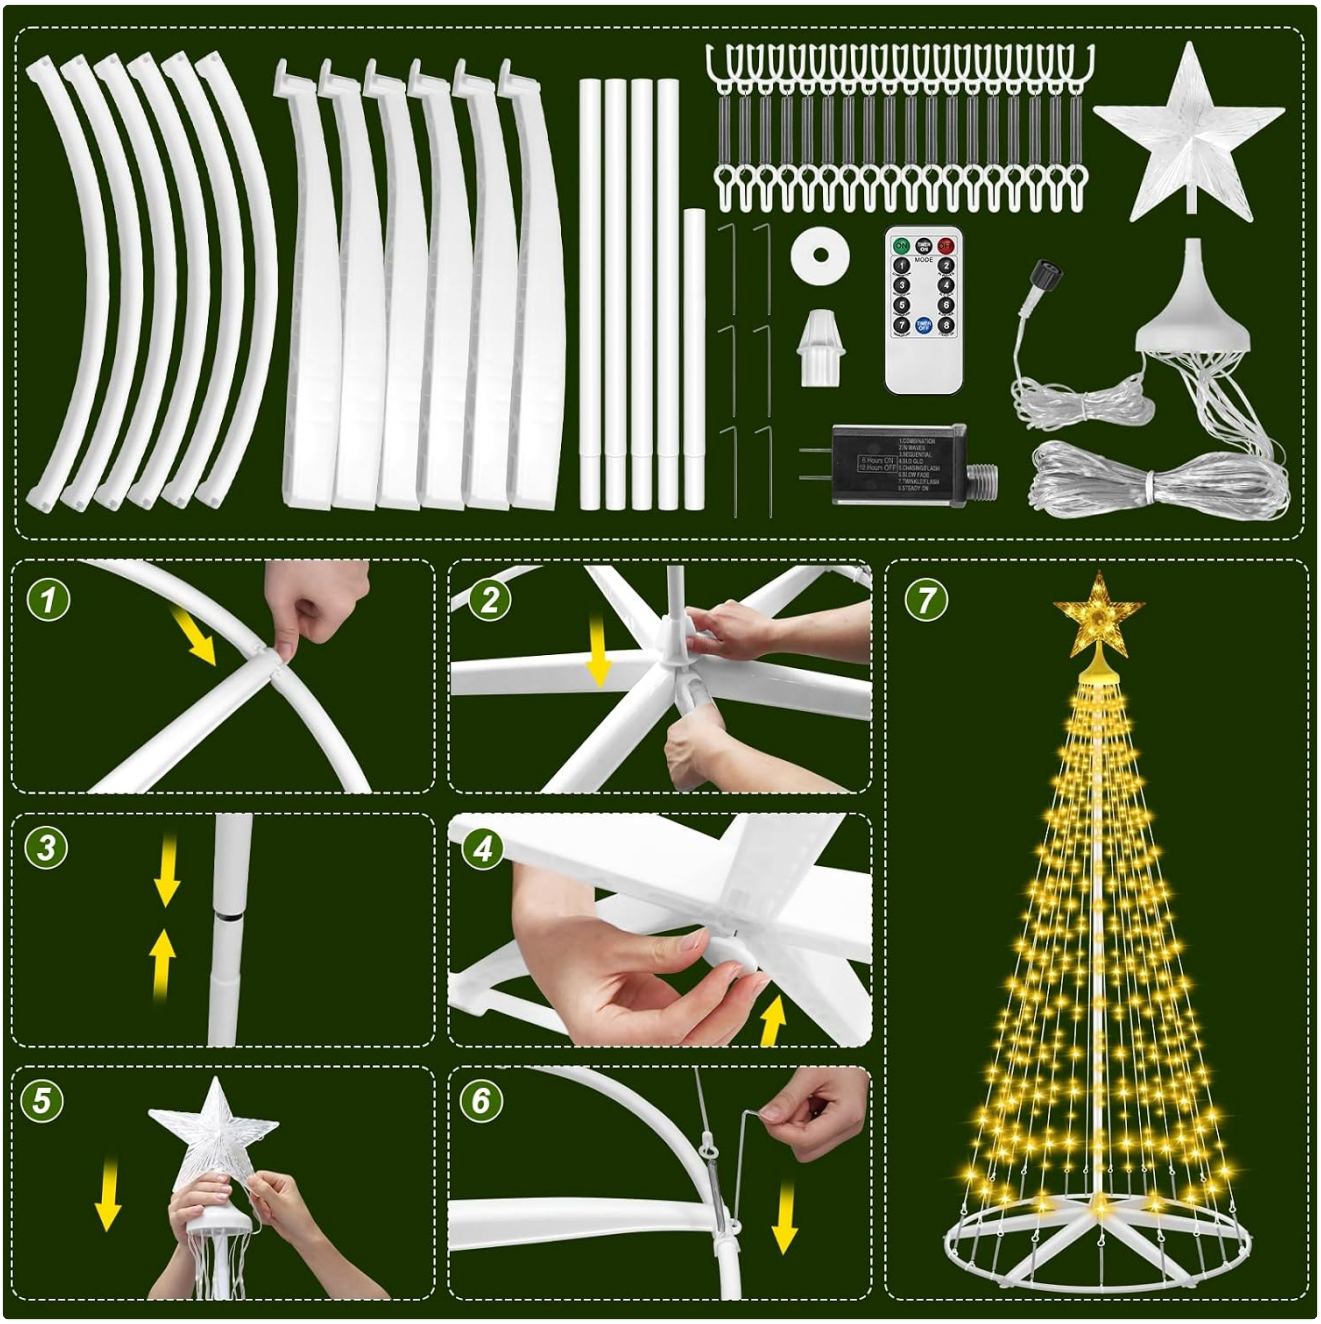


Figure 1: Included Components and Assembly Diagram

Description: This image displays all parts of the HELESIN 8ft LED Christmas Cone Tree. It includes the coiled light strings, the segmented base frame, vertical support poles, a star-shaped tree topper, a remote control, and a power adapter. The diagram also illustrates the step-by-step assembly process for clarity.

4. Setup Instructions

Follow these steps to assemble your HELESIN Christmas Cone Tree:

1. **Assemble the Base:** Connect the curved sections of the detachable bracket to form a circular base. Ensure all connections are secure. (Refer to step 1 and 2 in Figure 1).
2. **Insert Connecting Rods:** Insert the vertical connecting rods into the designated slots on the assembled base. Ensure they are firmly seated. (Refer to step 3 and 4 in Figure 1).
3. **Attach Star Topper:** Place the star topper onto the top of the central connecting rod. The light strings will hang from this point. (Refer to step 5 in Figure 1).
4. **Spread Light Strings:** Carefully uncoil the light strings and spread them evenly from the star topper down to the circular base. Each string should attach to a corresponding point on the base. (Refer to step 6 in Figure 1).
5. **Secure to Ground:** For outdoor use, use the metal ground inserts to anchor the base firmly into the ground. This prevents the tree from tipping over in wind.
6. **Connect Power:** Plug the IR adapter into a suitable outdoor-rated power outlet.



Figure 2: Key Features for Assembly and Stability

Description: This image provides detailed views of the product's features. It shows the illuminated star topper, the bright warm white LED beads on the light strings, an illustration of the easy-to-assemble connecting rods, and the robust design of the circular base for stability.

5. Operating Instructions

Your HELESIN Christmas Cone Tree can be controlled using the included infrared remote control or the mode button on the adapter.

5.1 Remote Control Functions

The remote control allows you to select from 8 lighting modes and utilize timer and memory functions.

- **ON/OFF:** Power the lights on or off.
- **MODE (1-8):** Select one of the 8 distinct lighting effects:
    1. Combination
    2. In Waves
    3. Sequential
    4. Slow Glow
    5. Chasing/Flash
    6. Slow Fade
    7. Twinkle/Flash
    8. Steady On
- **TIMER:** Activate the built-in timer function. Once activated, the lights will turn on for 6 hours and then off for 18 hours, repeating the cycle daily.
- **Memory Function:** The tree remembers the last selected lighting mode even after being powered off, ensuring your preferred setting is restored upon next use.

5.2 Adapter Button Control

Press the mode button located on the IR adapter to cycle through the 8 lighting modes. This button does not control the timer or ON/OFF functions.



Figure 3: Remote Control and Lighting Modes

Description: This image illustrates the various lighting effects available with the HELESIN Christmas Cone Tree, including Combination, In Waves, Sequential, Slow Glow, Chasing/Flash, Slow Fade, Twinkle/Flash, and Steady On. The remote control is also shown, highlighting its buttons for mode selection, timer, and power.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your Christmas cone tree.

- **Cleaning:** Disconnect from power before cleaning. Gently wipe the LED lights and structure with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, disassemble the tree and carefully coil the light strings. Store all components in their original packaging or a protective container in a cool, dry place away from direct sunlight. The foldable design allows for compact storage.
- **Inspection:** Before each use, inspect the power cord, adapter, and light strings for any signs of damage, fraying, or exposed wires. Do not use if damaged.

7. Troubleshooting

If you encounter issues with your HELESIN Christmas Cone Tree, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power, loose connection, faulty adapter.	Ensure the adapter is securely plugged into a working power outlet. Check if the outlet has power. Verify all connections are tight.
Remote control is not working.	Dead battery, obstruction, remote out of range.	Replace the battery in the remote control. Ensure there are no obstructions between the remote and the IR receiver on the adapter. Operate the remote within close range of the adapter.
Some lights are not working.	Damaged LED bead or wire.	Inspect the affected section for visible damage. If a section is completely out, contact customer support. Do not attempt to repair damaged wiring yourself.
Tree is unstable.	Improper assembly, insufficient anchoring.	Ensure the base components and connecting rods are fully engaged. Use all provided metal ground inserts to secure the base firmly into the ground.

8. Specifications

Detailed specifications for the HELESIN 8ft 442 LED Lighted Christmas Cone Tree:

- **Model Number:** HX-ZXS-CS
- **Height:** 8 Feet
- **Number of Light Sources:** 442 LED beads
- **Light Color:** Warm White
- **Color Temperature:** 3000 Kelvin
- **Power Source:** Corded Electric
- **Indoor/Outdoor Usage:** Outdoor (also suitable for indoor)
- **Special Feature:** Waterproof (IP44 rated for light string), Timer, Memory Function, Remote Control
- **Material:** Metal (frame)
- **Item Weight:** Approximately 6.69 pounds
- **Lead Length:** 26.2 feet (from adapter to first light)

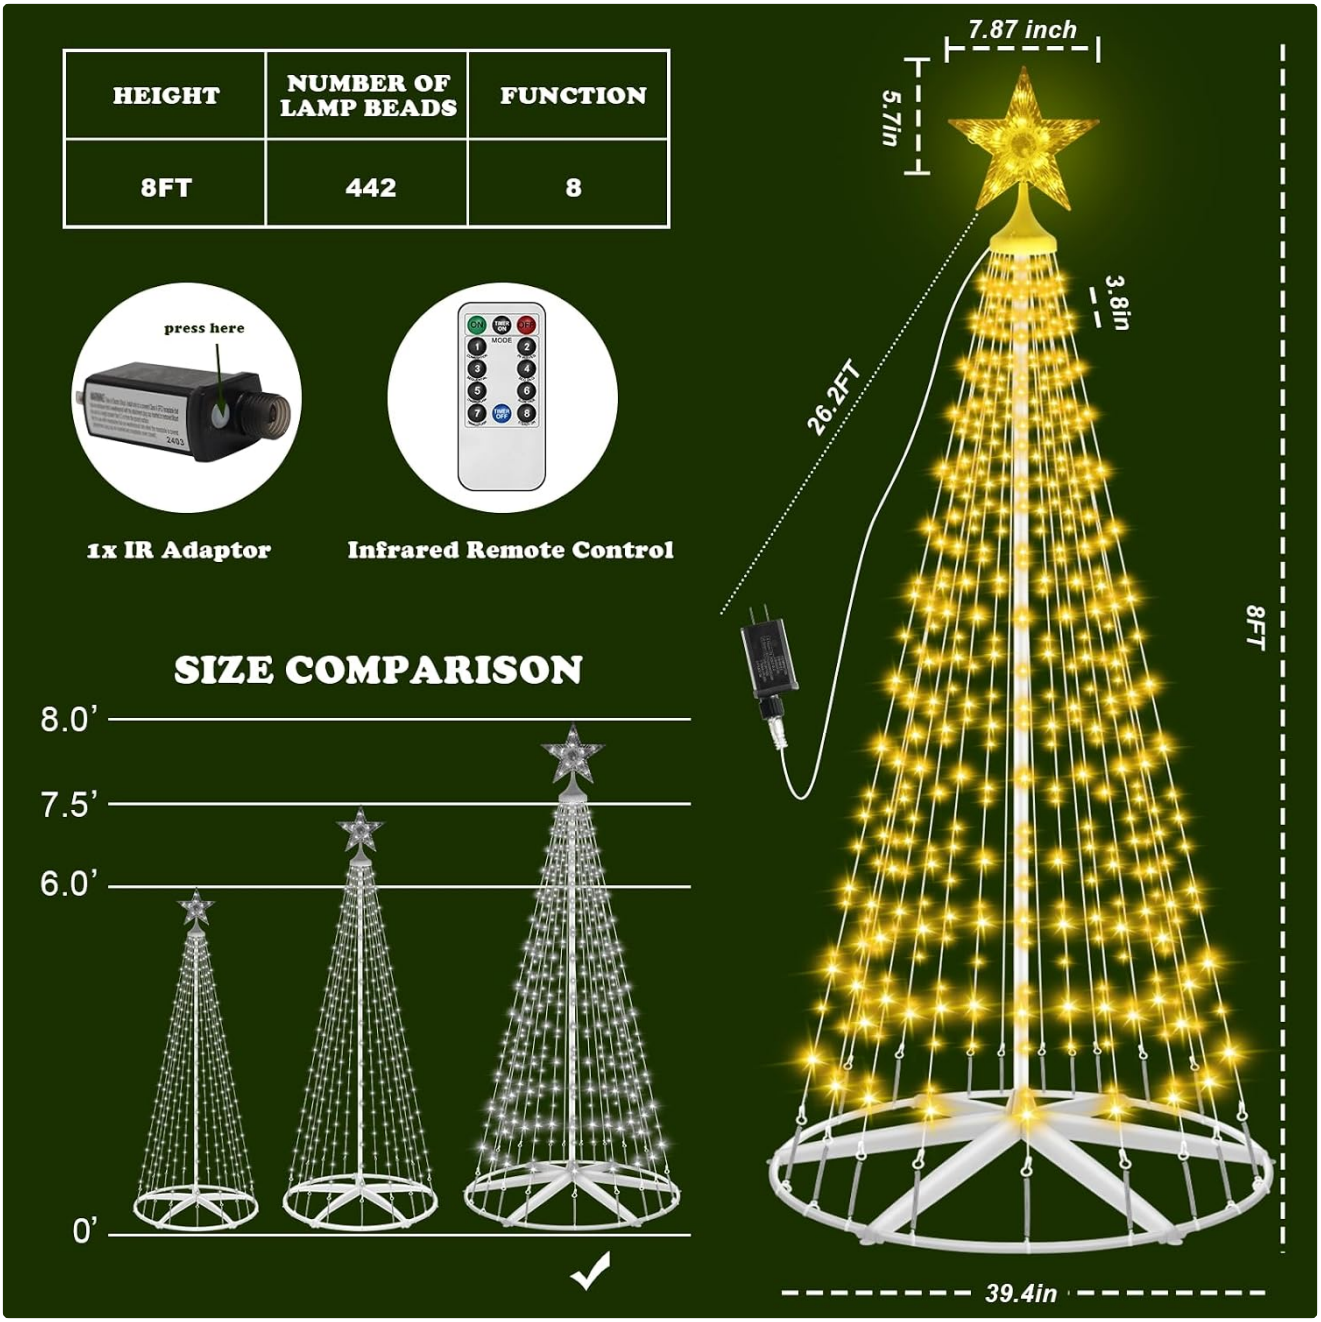


Figure 4: Product Dimensions and Features

Description: This image provides a detailed technical diagram of the 8ft HELESIN Christmas Cone Tree. It specifies the overall height of 8 feet, the base diameter of 39.4 inches, and the 26.2-foot lead cable. It also confirms 442 lamp beads and 8 lighting functions, along with illustrations of the IR adapter and remote control.



Figure 5: IP44 Waterproof Rating

Description: This image visually confirms the IP44 waterproof rating of the HELESIN Christmas Cone Tree, showing it can withstand outdoor elements like sun, rain, wind, and snow, making it suitable for various weather conditions.

9. Warranty and Support

HELESIN products are manufactured with quality and reliability in mind. For specific warranty information or technical support, please refer to the product packaging or contact your retailer. You may also visit the official HELESIN store on Amazon for additional product information and support resources:

Visit the HELESIN Store on Amazon

© 2023 HELESIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DB8HZ6NQ

More documents and user manuals: **https://manuals.plus/**