Faber 325.0719.727

Faber Artemis 60cm 1200m³/hr Filterless Kitchen Chimney

Model: 325.0719.727 | **Brand:** Faber

Your guide to installation, operation, and maintenance.

1. Introduction

Thank you for choosing the Faber Artemis 60cm 1200m³/hr Filterless Kitchen Chimney. This appliance is designed to provide efficient smoke and odor extraction, ensuring a clean and fresh kitchen environment. Featuring advanced technologies like filterless operation, autoclean alarm, and touch & gesture controls, this chimney offers convenience and powerful performance. Please read this manual thoroughly before installation and operation to ensure safe and optimal use of your new kitchen chimney.



Image 1.1: Faber Artemis 60cm Kitchen Chimney, showcasing its sleek black design and control panel.

2. Safety Information

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- Ensure the chimney is installed by a qualified technician.
- Do not operate the chimney without proper ventilation.
- Regularly clean the chimney to prevent grease buildup, which can be a fire hazard.
- Do not flambé under the chimney.
- Keep children away from the appliance during operation.
- Disconnect power before performing any maintenance or cleaning.
- The appliance is designed for domestic kitchen use only.

3. Product Overview

3.1 Key Features

- **Type:** Wall Mounted, Slant Body with T Shape Panel.
- **Suction Capacity:** 1200 m^3/hr, ensuring powerful smoke extraction.
- **Filterless Technology:** Eliminates the need for filters, simplifying maintenance.
- **Autoclean Function:** Automatic cleaning with an alarm for timely maintenance.
- **Control:** Intuitive Touch & Gesture Display for easy operation.
- **Lighting:** 2 LED Rectangle Lights for illuminated cooking area.
- **Moodlight:** Enhances kitchen ambiance.
- **Motor:** 180 Watt Metal Blower for durable performance.

3.2 Components

The Faber Artemis chimney includes the main chimney unit and necessary installation accessories. Refer to the packaging for a complete list of included components.

- Chimney Unit (Main Body)
- Ducting Kit (if applicable, for vented installation)
- Mounting Brackets and Screws
- User Manual (this document)



Image 3.1: Front view, highlighting the T-shape panel and control interface.



Image 3.2: Side view, showing the slant body design.



Image 3.3: Rear view, indicating mounting points.

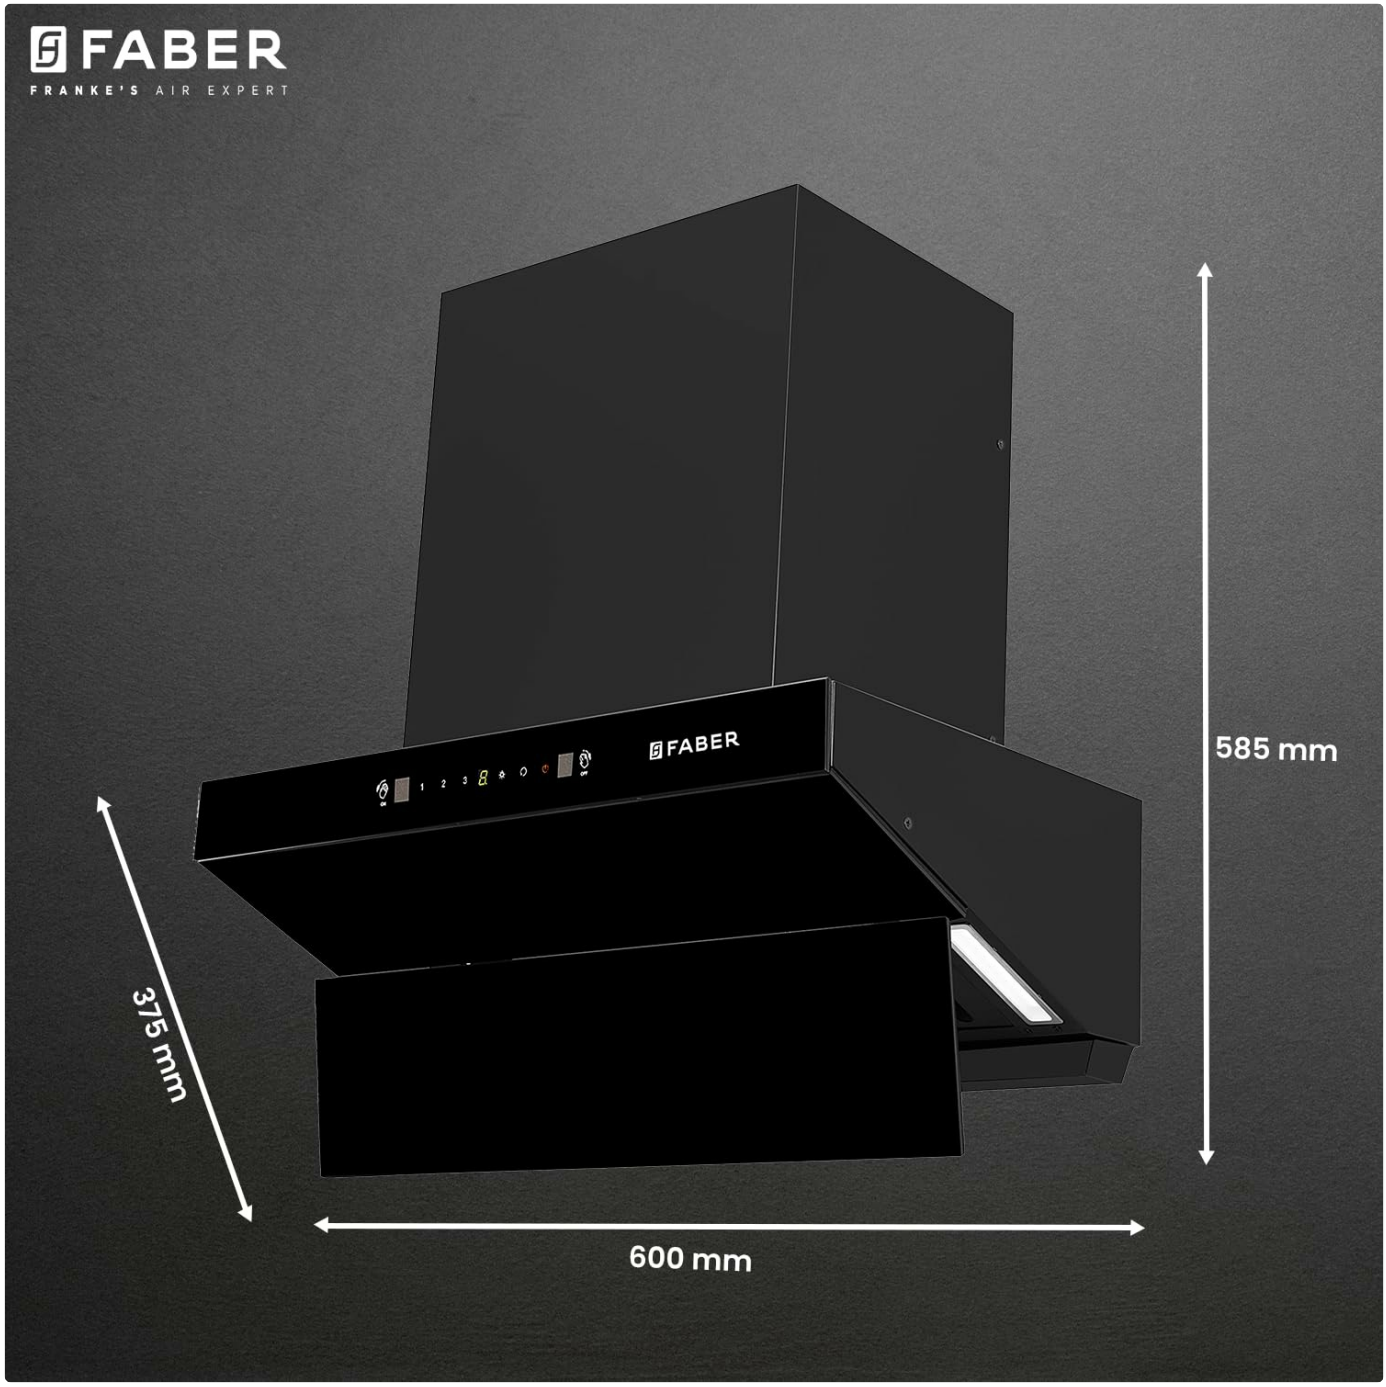


Image 3.4: Direct Flow Design, illustrating enhanced suction efficiency.



Image 3.5: Powerful Suction, demonstrating adjustable speed levels for varying smoke intensity.

4. Setup and Installation

The Faber Artemis chimney is designed for wall-mounted installation. For optimal performance and safety, professional installation is highly recommended. Faber offers paid installation services. Please contact customer care for assistance.

4.1 Pre-Installation Checks

- Verify the wall material can support the chimney's weight (approx. 15.2 kg).
- Ensure a suitable power outlet (230 Volts) is available near the installation area.
- Confirm adequate space for ducting if opting for vented installation.
- Maintain appropriate distance between the cooking surface and the chimney as per local regulations and manufacturer guidelines (typically 65-75 cm).

4.2 Installation Steps (General Guidance)

1. Mark the drilling points on the wall according to the provided template.
2. Drill holes and insert wall plugs.
3. Secure the mounting bracket to the wall.
4. Carefully lift and mount the chimney onto the bracket.
5. Connect the ducting (if applicable) to the chimney outlet and route it to the exterior.
6. Connect the power supply.
7. Test the chimney's functions.

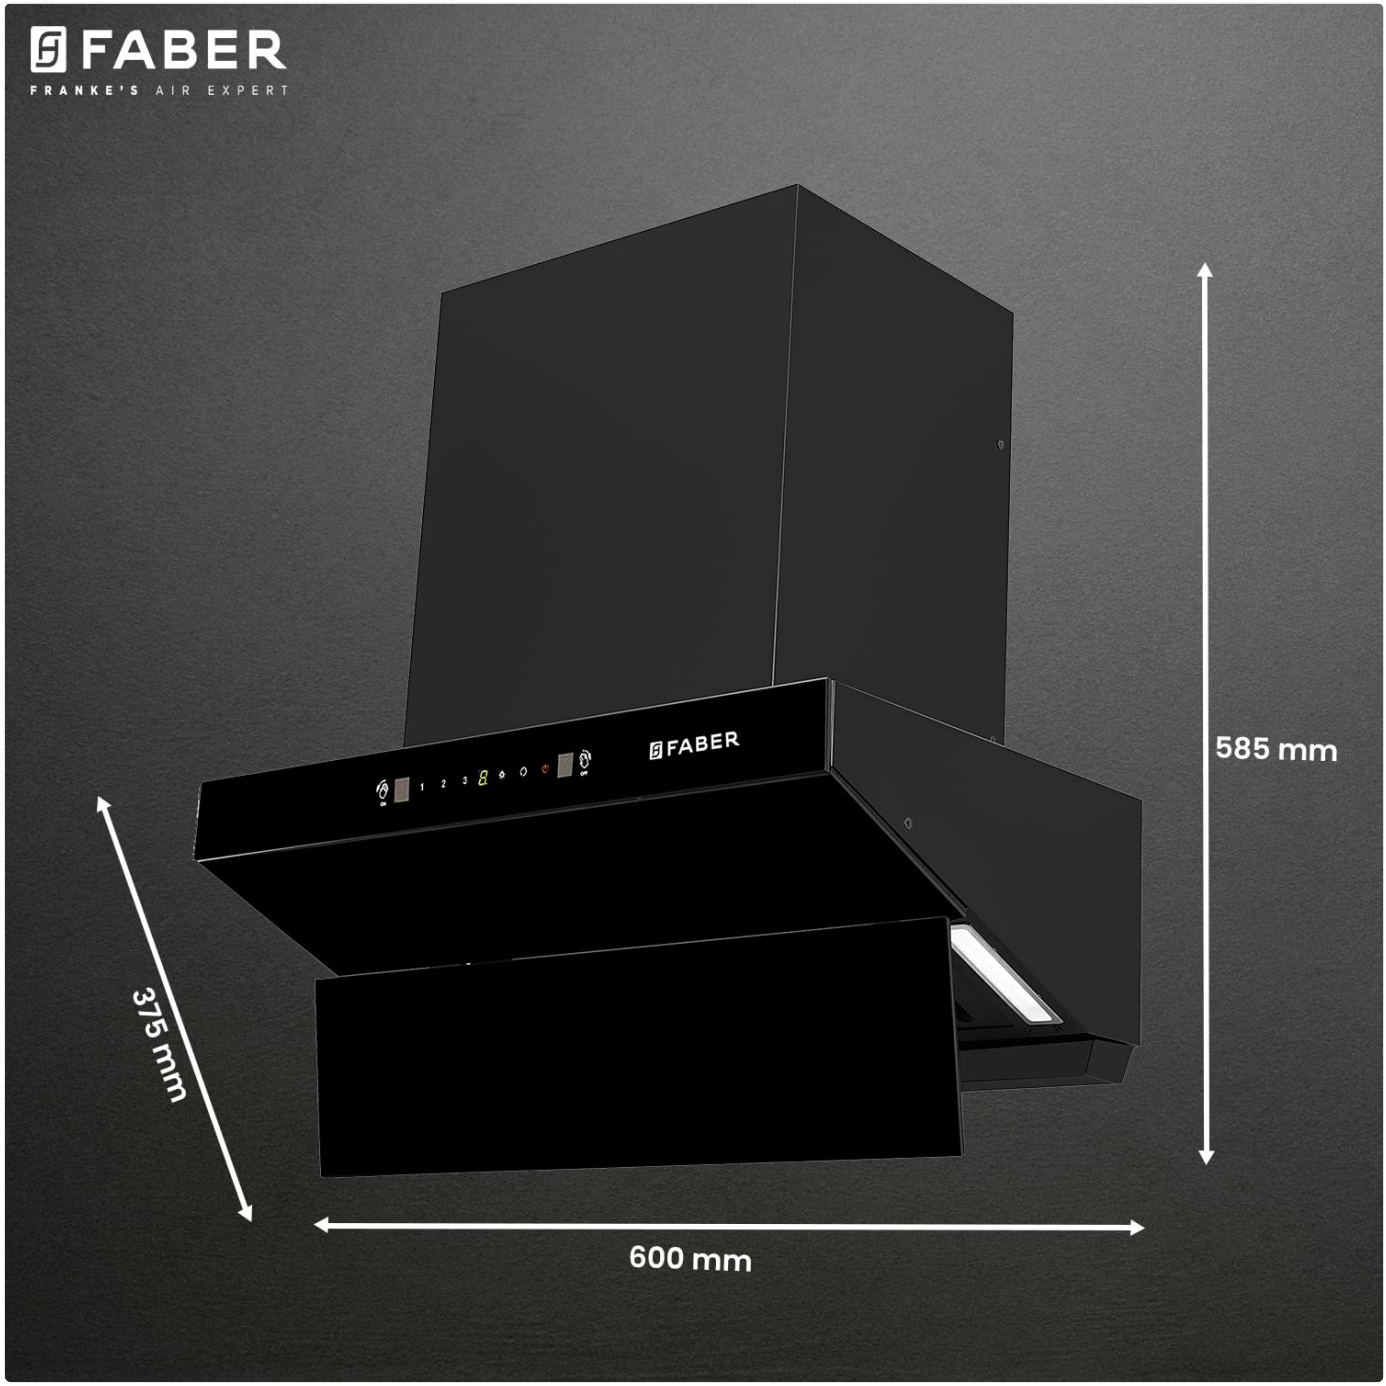


Image 4.1: Product dimensions (37.5D x 60W x 58.5H Centimeters) for installation planning.

5. Operating Instructions

The Faber Artemis chimney features an enhanced control panel with touch and gesture display for convenient operation.

5.1 Control Panel Functions



Image 5.1: Touch and Gesture Control interface.

- **Power On/Off:** Touch the power icon to turn the chimney on or off.
- **Speed Control:** The chimney offers 3 speed settings. Use the touch controls or gestures to adjust the suction power based on the intensity of cooking fumes.

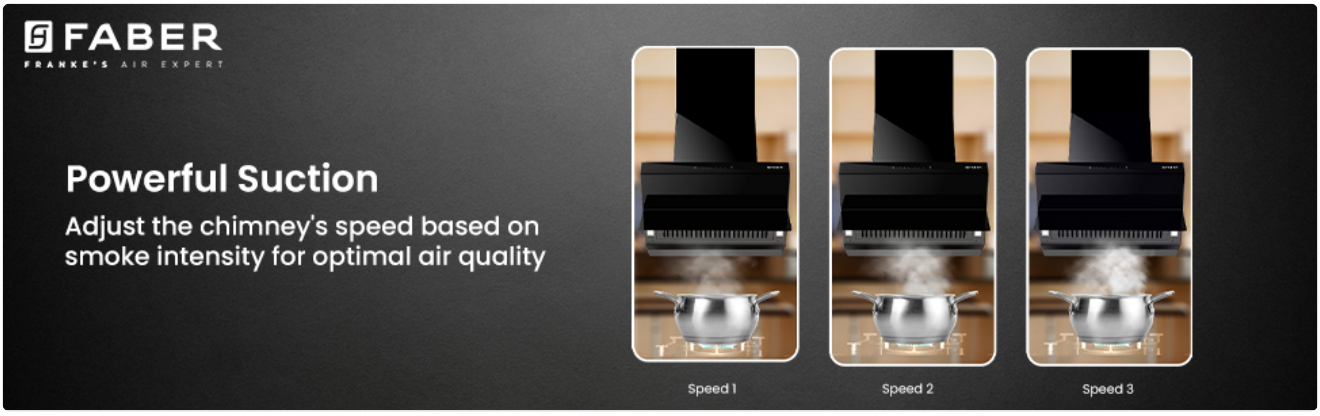


Image 5.2: Adjusting suction speed for optimal air quality.

- **Light Control:** Touch the light icon to turn the LED lights on or off. The moodlight function can also be activated via the control panel.



Image 5.3: Soft Lamp feature for ambient lighting.

- **Autoclean Activation:** Activate the autoclean function via the dedicated button. The chimney will perform a self-cleaning cycle.

5.2 Gesture Control

The chimney responds to specific hand gestures for basic operations like power on/off and speed adjustment. Refer to the

detailed gesture guide in the quick start manual for precise movements.

6. Maintenance and Cleaning

Regular maintenance ensures the longevity and efficient performance of your Faber Artemis chimney. The filterless design significantly reduces cleaning effort.



Image 6.1: Effortless Cleaning with Autoclean Technology, Filterless design, and Autoclean Alarm.

6.1 Autoclean Technology

- The autoclean function uses heat to melt and collect oil and grease particles into the built-in oil collector.
- An **Autoclean Alarm** will notify you when it's time to run the autoclean cycle.



Image 6.2: Autoclean Alarm notification.

- Regularly empty the oil collector tray. Ensure the chimney is off and cooled before removing the tray.

6.2 Filterless Design

- The filterless design means there are no mesh filters to clean or replace, simplifying maintenance.



Image 6.3: Filterless technology for reduced maintenance.

- Wipe the exterior surfaces of the chimney with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.

7. Troubleshooting

If you encounter issues with your Faber Artemis chimney, refer to the table below for common problems and solutions. For persistent issues, contact customer support.

Problem	Possible Cause	Solution
Chimney not turning on	No power supply; loose connection; tripped circuit breaker.	Check power cord, wall outlet, and circuit breaker.
Low suction power	Oil collector full; ducting obstruction; incorrect speed setting.	Empty oil collector; check ducting for blockages; increase speed setting.
Unusual noise during operation	Loose components; motor issue; foreign object in blower.	Turn off and inspect for loose parts. If noise persists, contact service.
Autoclean alarm not resetting	Autoclean cycle not completed or error.	Ensure autoclean cycle runs to completion. If alarm persists, contact service.

8. Specifications

Specification	Value
Model Number	325.0719.727
Air Flow Capacity	1200 CMPH (Cubic Meters Per Hour)
Material	Metal, Tempered Glass
Noise Level	58 dB
Mounting Type	Wall Mount

Specification	Value
Controls Type	Touch, Gesture
Voltage	230 Volts
Number of Speeds	3
Item Weight	15.2 kg (15200 Grams)
Light Source Type	LED (2 Rectangle Lights)
Wattage	180 Watts
Filter Type	Filterless
Ventilation Type	Ducted/Vented
Product Dimensions (LxWxH)	37.5 x 60 x 58.5 Centimeters
Colour	Black
Special Features	Auto Clean, Built-In Oil Collector, LED Lighting, Noise Reduction, Moodlight, Logo Illumination
Included Components	Chimney

9. Warranty and Support

Faber provides comprehensive warranty and support for your kitchen chimney.

- **Motor Warranty:** 12 Years
- **Comprehensive Warranty:** 2 Years on the entire product.
- **Customer Care Number:** 1800-209-3484
- **Manufacturer/Importer:** Franke Faber India Pvt Ltd, 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA.
- **Returns/Replacement:** 10 days Replacement by Brand (refer to purchase terms for details).

For service requests, technical assistance, or any queries, please contact the Faber customer care team using the provided number.

© 2024 Faber. All rights reserved.
This manual is subject to change without prior notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question