Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

weeonekids B0DBLMV8RC

weeonekids 24V Ride-On Toy Instruction Manual

Model: B0DBLMV8RC

1. Safety Information

Please read and follow all safety instructions carefully before assembly and operation. Adult supervision is required at all times when the vehicle is in use. Ensure all parts are securely fastened and the battery is properly connected before use. Refer to the assembly video for visual guidance.

2. What's in the Box

The package includes all components necessary for assembly, as shown in the product images, excluding the child. Please verify all parts are present upon unboxing.



Image: All components included in the package for the weeonekids 24V Ride-On Toy.

3. Setup and Assembly

Follow these steps for proper assembly of your weeonekids 24V Ride-On Toy. It is recommended to watch the full installation video before beginning.

3.1. Unboxing and Initial Inspection

Carefully open the packaging and remove all components. Inspect for any damage or missing parts. Ensure the battery is charged for 12 hours before first use.

Your browser does not support the video tag.

Video: Detailed installation guide for the children's electric car.

3.2. Seat Assembly

Attach the seat to the main body of the vehicle. Ensure it is securely fastened. The seat is adjustable for different child sizes.



Image: The wide and adjustable seat, suitable for various child sizes.

3.3. Wheel and Motor Installation

Install the four wheels and connect the drive motors. Ensure all connections are firm and secure. The vehicle features 4x75W drive motors for robust performance.



Image: Illustrates the 4 big shock absorbers and 14-inch wear-resistant wheels for various terrains.

3.4. Steering Wheel and Dashboard Setup

Attach the steering wheel and connect any necessary wiring for the dashboard functions, including music and horn buttons.

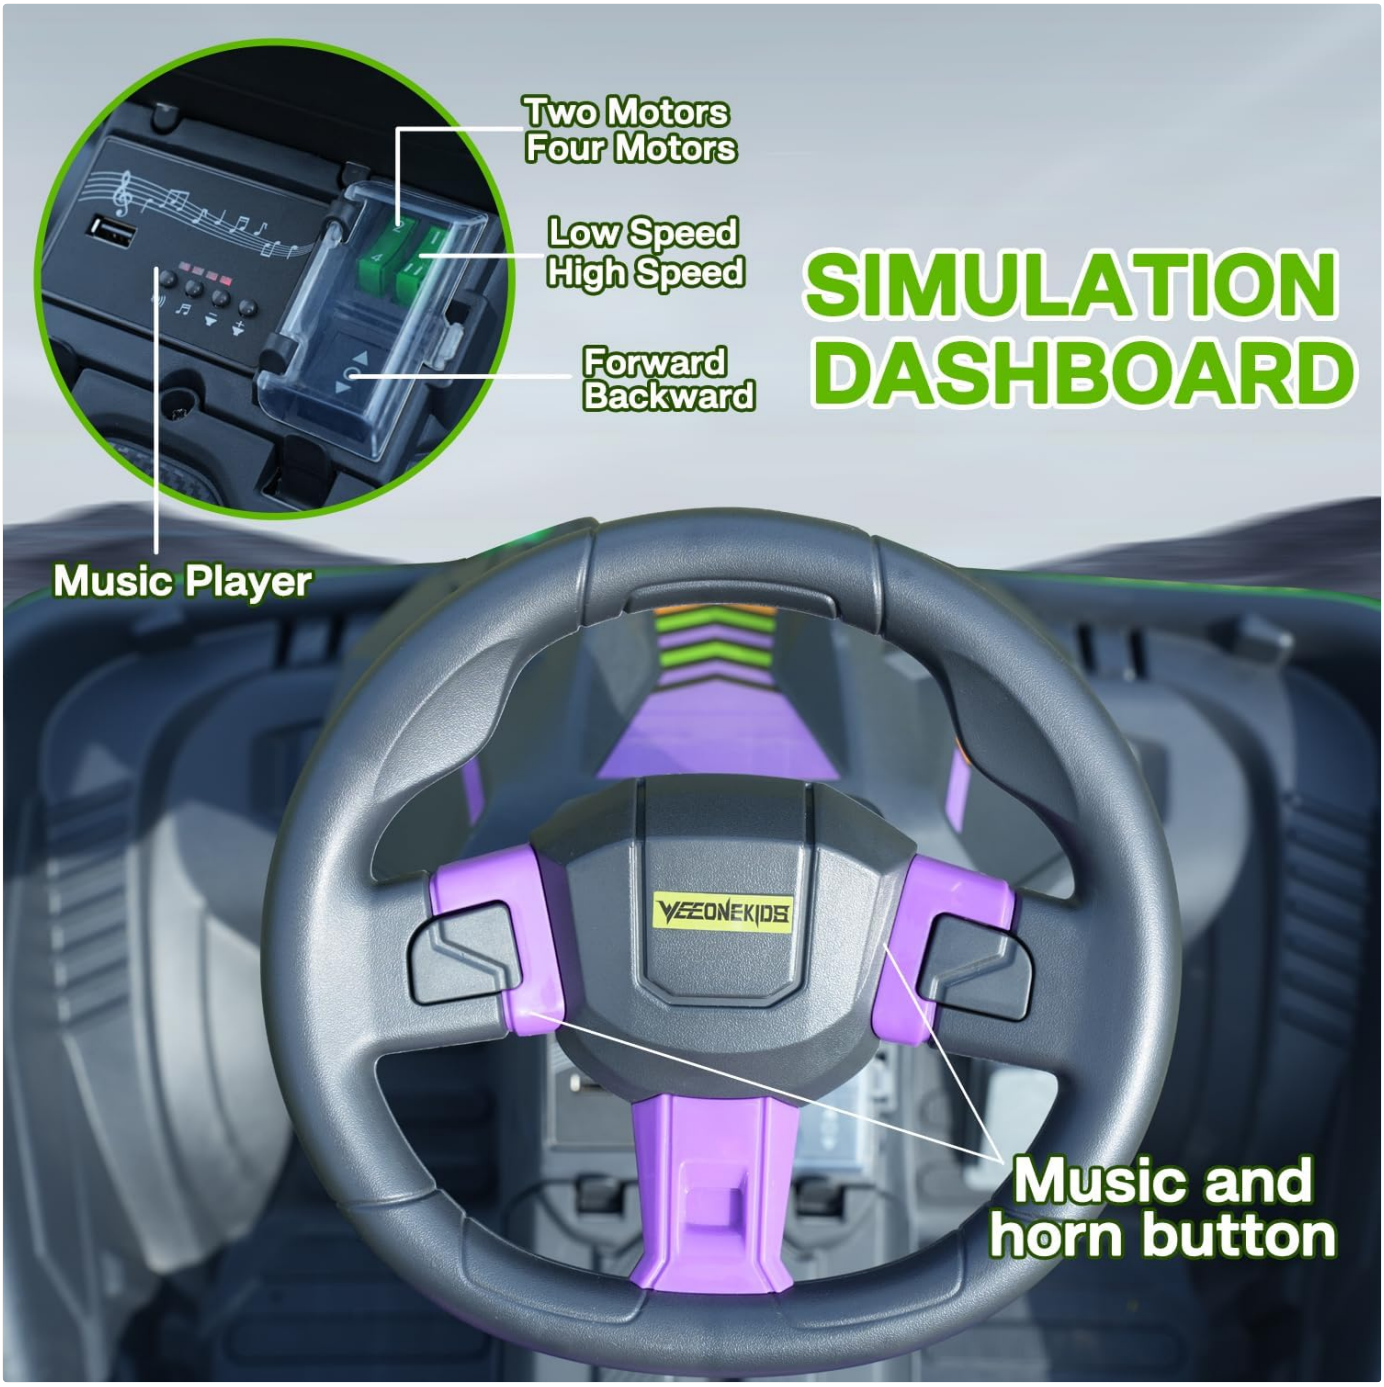


Image: The simulation dashboard featuring a music player, low/high speed selector, and forward/backward controls.

3.5. Battery Connection

Connect the 24V battery as instructed. Ensure a secure connection to prevent power interruptions. The battery should be fully charged before the first use.

4. Operating Instructions

Familiarize yourself with the controls and features before operating the ride-on toy.

4.1. Starting the Vehicle

Turn on the main power switch. Use the foot pedal for acceleration and the steering wheel for direction. The vehicle has a maximum speed of 5 miles per hour.

Your browser does not support the video tag.

Video: Children operating the electric ride-on toy in various outdoor settings.

4.2. Remote Control Operation

The included remote control allows parents to manage the vehicle's movement and speed. When under remote control, the maximum speed is limited to 2.5 miles per hour for enhanced safety. The remote features emergency brake and variable speed settings.



Image: A parent using the remote control to manage the ride-on toy, highlighting emergency brake and speed controls.

4.3. Music and Entertainment

The vehicle features a built-in music system with Bluetooth and USB connectivity. Connect your device to play preferred audio during operation.



Image: A child enjoying music while driving, illustrating Bluetooth and USB connectivity options.

5. Maintenance

Regular maintenance ensures the longevity and safe operation of your ride-on toy.

- **Battery Charging:** Charge the 24V 7AH battery fully after each use. For the first use, charge for 12 hours. Avoid overcharging.
- **Cleaning:** Wipe down the vehicle with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the vehicle in a dry, cool place away from direct sunlight and moisture.
- **Inspection:** Periodically check all screws, nuts, and electrical connections to ensure they are secure. Inspect tires for wear and tear.

6. Troubleshooting

Refer to this section for common issues and their potential solutions.

Problem	Possible Cause	Solution
Vehicle does not move.	Battery not connected or discharged. Power switch off.	Ensure battery is connected and charged. Turn on the power switch.
Short battery life.	Insufficient charging. Old battery.	Ensure battery is charged for the recommended duration. Consider battery replacement if it's old.
Steering wheel not responding.	Loose connection or damaged component.	Check steering column connections. Contact customer support if damage is suspected.
Remote control not working.	Remote batteries dead. Not paired correctly.	Replace remote control batteries. Refer to pairing instructions in the full manual.

7. Specifications

- **Product Dimensions:** 47.25 x 31.5 x 29.15 inches
- **Item Weight:** 70 pounds
- **Recommended Age:** 3 years and up
- **Max Load:** 130 lbs
- **Motors:** 4 x 75W (Total 300W)
- **Battery:** 24V 7AH
- **Max Speed:** 5 MPH (2.5 MPH with remote control)
- **Features:** Adjustable Seat, Metal Frame, Bluetooth Speaker, USB Port, 2WD/4WD options, 4 Big Shock Absorbers, 14" Wear-Resistant Wheels.

8. Warranty and Support

For warranty information, technical support, or to order replacement parts, please contact weeonekids customer service. Keep your purchase receipt for warranty claims.
You can visit the official weeonekids store for more information: weeonekids Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DBLMV8RC

More documents and user manuals: **https://manuals.plus/**