SLOTHMORE HY-6849

SLOTHMORE Back Massager User Manual

Model: HY-6849

Introduction

Thank you for choosing the SLOTHMORE Back Massager with Heat & Traction & Vibration. This manual provides essential information for the safe and effective use of your new massager. Please read it thoroughly before operation and retain it for future reference.



Figure 1: SLOTHMORE Back Massager, showing the main unit, remote control, and power adapters.

Safety Information

To ensure safe operation, please observe the following precautions:

- Do not use the massager if you have a medical condition that could be adversely affected by massage. Consult your physician before use if you have any health concerns.

- Discontinue use immediately if the massager causes any discomfort or pain.
- Always unplug the device from the power outlet when not in use or before cleaning.
- Keep the massager away from water and do not use it in wet environments.
- Ensure the remote control is stored securely in the open storage bag on the right side of the cushion seat when not in use.
- The massager is equipped with a 20-minute auto shut-off feature and overheat protection for safety.

Setup

Follow these steps to set up your SLOTHMORE Back Massager:

1. **Unpack:** Carefully remove the massager from its packaging.
2. **Placement:** Place the massager on your desired chair or seat. Ensure the surface is stable and the massager is positioned correctly for your height.
3. **Secure Attachment:**

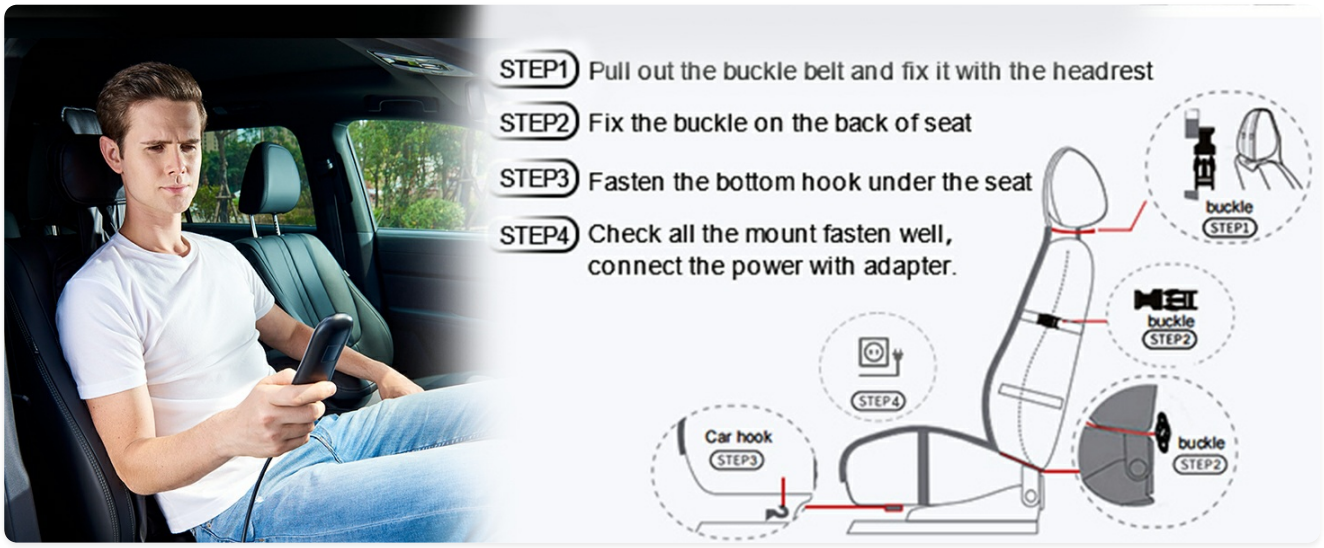


Figure 2: Installation steps for securing the massager to a chair, including buckle belts and car hook.

   - Pull out the buckle belt and fix it with the headrest (Step 1).
   - Fix the buckle on the back of the seat (Step 2).
   - Fasten the bottom hook under the seat (Step 3).
   - Check all mounts are fastened well (Step 4).
4. **Adjust Neck Pillow:** Manually adjust the flexible neck massage pillow to align with your neck for optimal comfort. This massager accommodates users between 5’1” (155 cm) and 6’1” (185 cm) in height.



Figure 3: The massager features an adjustable neck pillow and is foldable for portability. It is made of garment-grade PU leather, which is water-resistant.

5. **Power Connection:** Connect the power adapter to the massager and then plug it into a suitable power outlet. Ensure the remote control is easily accessible.

Operating Instructions

Your SLOTHMORE Back Massager offers various functions for a personalized massage experience. The remote control allows for easy adjustment of settings.



Figure 4: Detailed view of the remote controller, highlighting UL Protection, 20-minute Smart Timer, 5 Massage Modes, 3 Massage Parts, Independent Heating Switch, and 3 Massage Intensities.

1. **Power On:** Press the power button () on the remote control to turn on the massager.
2. **Select Mode:** Press the "Mode" button to cycle through the 5 available massage modes: Auto, Traction, Vibration, and Heating. Each mode offers a distinct massage experience.
3. **Choose Massage Parts:** Use the "Part" button to select specific areas for massage: Full Body, Neck, Back, or Hip.
4. **Adjust Intensity:** The massager offers 3 intensity levels (Low, Middle, High) for the air pressure and traction functions. Use the "Air Intensity" buttons to adjust.
5. **Control Vibration:** The vibration function operates independently. Use the "Vibration" button to turn it on or off.
6. **Activate Heat:** Press the "Heat" button to turn the heating function on or off. The heating pad helps reduce pressure and provides soothing warmth.



Figure 5: Overview of the massager's functions including neck massage, back stretching, lumbar traction, waist relaxation, leg massage, and back heating.

7. **Traction Function:** The massager utilizes multi-layered massage bags for traction, providing a gentle stretching sensation. This is designed to be more comfortable than traditional Shiatsu or roller-based massagers.



Figure 6: Illustration of the 3D Traction feature, showing how it stretches the back to reduce stiffness and stress.

8. **Session Duration:** The massager has a built-in 20-minute smart timer and will automatically shut off after this period for safety and to prevent overuse.
9. **Power Off:** Press the power button again to turn off the massager. Always unplug the device from the power outlet after each use.

Product Demonstration Video

Your browser does not support the video tag.

Video 1: A demonstration of the SLOTHMORE Back Massager's features, including neck stretching, lumbar traction, and leg massage. This video shows the product in use within a car and highlights its various functions.

Maintenance

Proper care and maintenance will extend the life of your massager:

- **Cleaning:** Before cleaning, always unplug the massager. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water. The PU leather material is water-resistant for easy cleaning.
- **Storage:** Store the massager in a cool, dry place when not in use. Avoid placing heavy objects on top of it. The foldable design allows for convenient storage.
- **Inspection:** Regularly inspect the power cord and the massager for any signs of damage. If any damage is found, discontinue use and contact customer support.

Troubleshooting

If you encounter any issues with your SLOTHMORE Back Massager, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Massager does not turn on.	Not plugged in; power outlet issue; remote control battery low (if applicable); power button not pressed.	Ensure power adapter is securely plugged into both the massager and a working outlet. Press the power button firmly.
No heat or insufficient heat.	Heating function not activated; overheat protection engaged.	Press the "Heat" button on the remote. Allow the unit to cool down if it has been running for an extended period.
Massage feels too strong or uncomfortable.	Intensity level too high; sensitive user.	Reduce the intensity level using the "Air Intensity" buttons. If discomfort persists, discontinue use.
Neck airbag not deploying (as per a review).	Possible malfunction or improper setup.	Ensure the neck pillow is correctly positioned and the massager is powered on. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact SLOTHMORE customer support for assistance.

Specifications

Feature	Detail
Brand	SLOTHMORE
Model Number	HY-6849
Product Dimensions	12 x 6 x 19 inches

Feature	Detail
Item Weight	3.33 Pounds (1.51 Kilograms)
Material	Faux Leather
Power Source	Corded Electric
Massage Functions	Heat, Traction, Vibration, Pressure
Massage Areas	Neck, Back, Hip, Thighs
Intensity Levels	3 (Low, Middle, High)
Auto Shut-off	20 minutes
Height Compatibility	5’1” to 6’1” (155 cm to 185 cm)

Warranty and Support

For warranty information or technical support, please contact SLOTHMORE customer service. Refer to your purchase documentation for specific warranty terms and contact details.
If you are not satisfied with this massage pad for any reason, please do not hesitate to contact us.
Manufacturer: SLOTHMORE
ASIN: B0DBPH6RN9

© 2024 SLOTHMORE. All rights reserved.
Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question