**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**BEEDECK EPH-RED-30MM**

# BEEDECK Electric Pruning Shears

**Model: EPH-RED-30MM**

## Introduction

Thank you for choosing the BEEDECK Electric Pruning Shears. This cordless power pruner is designed to make your gardening tasks easier and more efficient. Featuring a powerful brushless motor and high-quality SK5 carbon steel blades, it is capable of cutting branches up to 30mm (1.2 inches) in diameter. Please read this manual carefully before use to ensure safe and optimal operation of your device.

## Package Contents

Your BEEDECK Electric Pruning Shears kit includes the following items:

- 1 x Electric Pruning Shear
- 2 x 20V 2000mAh Lithium-Ion Batteries
- 1 x Adapter/Charger
- 1 x Pair of Replacement Blades
- 2 x Small Wrenches
- 1 x Empty Oil Bottle
- 1 x Storage Case
- 1 x User Manual




The complete kit includes the electric pruning shears, two rechargeable batteries, a charger, replacement blades, two small wrenches, an empty oil bottle, and a storage case.

## Safety Information

Always prioritize safety when operating power tools. Failure to follow safety instructions may result in injury or damage to the product.

- **Dual Safety Start Mechanism:** The shears require pressing the switch twice to activate, preventing accidental

starts.

- **Intelligent Sleep Protection:** The trimmer enters a low-power sleep mode after one minute of inactivity, conserving energy and enhancing safety. Reactivate with the dual start procedure.
- **Battery Safety:** The included 20V 2000mAh batteries feature overload and temperature protection to extend battery life and ensure safe operation.
- Keep hands and body parts away from the blades during operation.
- Wear appropriate personal protective equipment, such as gloves and eye protection.
- Do not use the shears in wet conditions or near flammable materials.
- Store the tool and batteries in a dry, secure place, out of reach of children.

## Product Overview




The shears feature a lightweight, portable body, an ergonomic handle for comfortable grip, and a long-press trigger function to adjust the cutting size up to 30mm.




Equipped with a high-power pure copper brushless motor, these shears deliver strong cutting power, fast operation, high efficiency, and extended tool lifespan.




The shears are powered by two 20V 2000mAh lithium-ion batteries, equipped with comprehensive safety features to prevent over-current, over-voltage, over-heating, over-charging, and over-discharging.

## Setup

1. **Charge Batteries:** Before first use, fully charge both 20V 2000mAh lithium-ion batteries using the provided adapter. The charging indicator light will show the charging status.
2. **Install Battery:** Slide a fully charged battery into the base of the pruning shears until it clicks securely into place.


3. **Initial Blade Check:** Ensure the blades are clean and free from debris. Apply a small amount of lubricant (from the included oil bottle) to the blades for smooth operation.

## Operating Instructions

1. **Power On:** To activate the shears, press the power switch twice. You will hear a tone, and the indicator light will turn green.
2. **Adjust Cutting Size:** The shears offer two cutting diameter settings: 20mm and 30mm. To switch between modes, press and hold the trigger for 3 seconds until a beep is heard. The blades will adjust to the selected size.
3. **Pruning:** Position the branch between the open blades and pull the trigger to make a cut. The powerful motor will cut through branches up to 30mm (1.2 inches) thick.
4. **Power Off:** To turn off the shears, press the power switch once. The indicator light will turn off. Always power off the device when not in use or when changing batteries.




The high-quality SK5 carbon steel blades are designed for cutting branches up to 30mm (1.2 inches) in diameter, featuring an anti-rust coating, an alloy steel layer, and a wear-resistant layer for durability and sharpness.

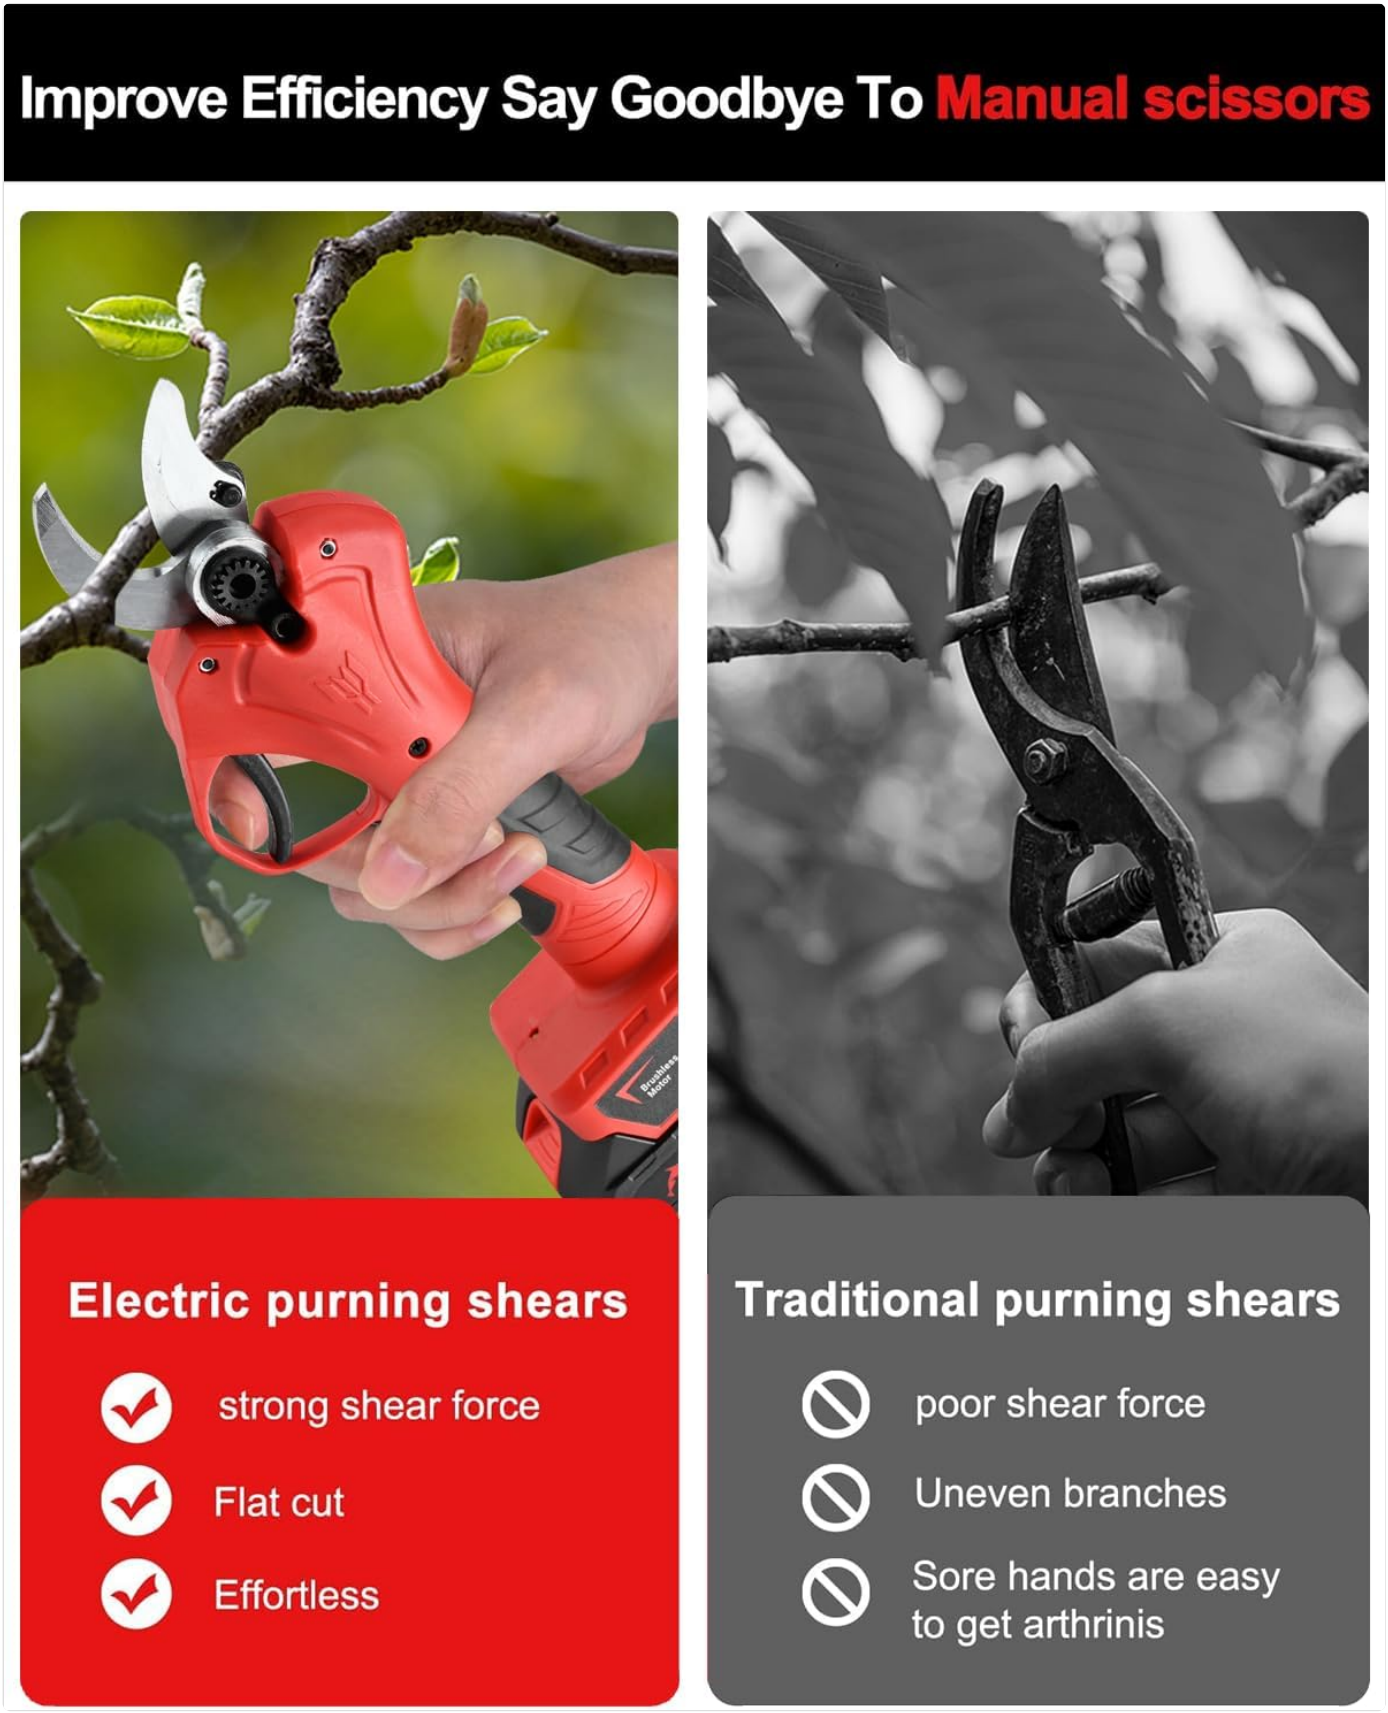


Electric pruning shears offer strong shear force, clean flat cuts, and effortless operation, significantly improving efficiency compared to traditional manual shears.

## Maintenance

- **Blade Cleaning:** After each use, clean the blades to remove sap, dirt, and debris. Use a damp cloth and dry thoroughly.
- **Blade Lubrication:** Regularly apply a few drops of lubricating oil (using the provided empty oil bottle) to the blade

pivot point and cutting edges to ensure smooth operation and prevent rust.

- **Blade Replacement:** If blades become dull or damaged, replace them using the included replacement blades and wrenches. Refer to the detailed instructions in the printed manual for this procedure.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries before recharging to prolong their lifespan.

## Troubleshooting

- **Shears Not Activating:** Ensure the battery is fully charged and properly installed. Remember to press the power switch twice to activate the device. If the issue persists, check for any obstructions around the blades.
- **Reduced Cutting Performance:** This may indicate dull or dirty blades. Clean and lubricate the blades. If necessary, replace the blades.
- **Battery Not Charging:** Verify that the charger is correctly connected to both the battery and a power outlet. Check for any damage to the charger or battery.

## Specifications

| | |
|---|---|
| **Brand** | BEEDECK |
| **Model Number** | EPH-RED-30MM |
| **Cutting Diameter** | Up to 30mm (1.2 inches) |
| **Motor Type** | Brushless Motor, 600W |
| **Battery Voltage** | 20 Volts |
| **Battery Capacity** | 2000mAh (x2 included) |
| **Blade Material** | SK5 High Carbon Steel |
| **Product Dimensions** | 11"L x 3"W |
| **Item Weight** | 5.26 pounds |

## Wide Application

The BEEDECK Electric Pruning Shears are ideal for various pruning tasks across different environments:

- Pruning trees and shrubs
- Pruning fruit trees
- Pruning grapevines
- Trimming flowers
- General garden and landscape maintenance
- Harvesting fruit
- Caring for potted plants




These versatile electric pruning shears are suitable for a wide range of applications including pruning trees and shrubs, fruit trees, grapevines, flowers, garden and landscape maintenance, harvesting fruit, and caring for potted plants.

## Warranty and Support

For warranty information, technical support, or any questions regarding your BEEDECK Electric Pruning Shears, please refer to the contact information provided with your purchase or visit the official BEEDECK website. Keep your purchase receipt as proof of purchase for warranty claims.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0DBV3PK71**

More documents and user manuals: **https://manuals.plus/**