## NutriChef NUELREKN3BLACK

# NutriChef Cordless Electric Knife User Manual

Model: NUELREKN3BLACK

## Important Safety Instructions

Please read all instructions carefully before using your NutriChef Cordless Electric Knife. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Sharp Blades:** The blades are extremely sharp. Handle with care. Always keep fingers away from the blade edges.
- **Keep Away from Children:** This appliance is not intended for use by children. Store the knife and its components out of reach of children.
- **Electrical Safety:** Do not immerse the handle or charging components in water or other liquids. Ensure hands are dry before handling the knife or charger.
- **Proper Use:** Use the knife only for its intended purpose of slicing food. Do not attempt to cut frozen items or bones, as this can damage the blades and motor.
- **Blade Insertion/Removal:** Always ensure the knife is turned off and disconnected from any power source before attaching or detaching blades.
- **Operating Mechanism:** The knife features a constant ON/OFF function with safety locks. To activate, press the top button. The knife will continue to run until the safety touch sensors on the bottom of the handle are released. Ensure a firm grip on the handle, covering both touch sensors, for continuous operation. Release your grip from the touch sensors to stop the blades. A brief delay in stopping may occur due to the safety mechanism.
- **Charging:** Use only the provided USB cable and UL charger. Do not use damaged chargers or cables.

## Product Overview and Components

Your NutriChef Cordless Electric Knife comes with the following components:

- Knife Handle (with integrated motor and battery)
- Stainless Steel Blade
- USB Charging Cable
- UL Charger
- Storage Box




Image: All components of the NutriChef Cordless Electric Knife, including the handle, detachable blade, USB cable, UL charger, and a clear storage box.




Image: The NutriChef Electric Knife in use, demonstrating effortless slicing with its cordless design.

## Assembly

Follow these steps to safely assemble the electric knife:

1. Ensure the knife handle is turned off and unplugged from any charging source.
2. Hold the blade by the plastic guard, keeping fingers away from the serrated edge.
3. Align the blade's tang with the slot in the knife handle.
4. Insert the blade firmly into the handle until it clicks into place. Ensure it is securely locked before use.
5. To remove the blade, press the blade release button (usually located near the blade insertion point) and carefully pull the blade out by its plastic guard.

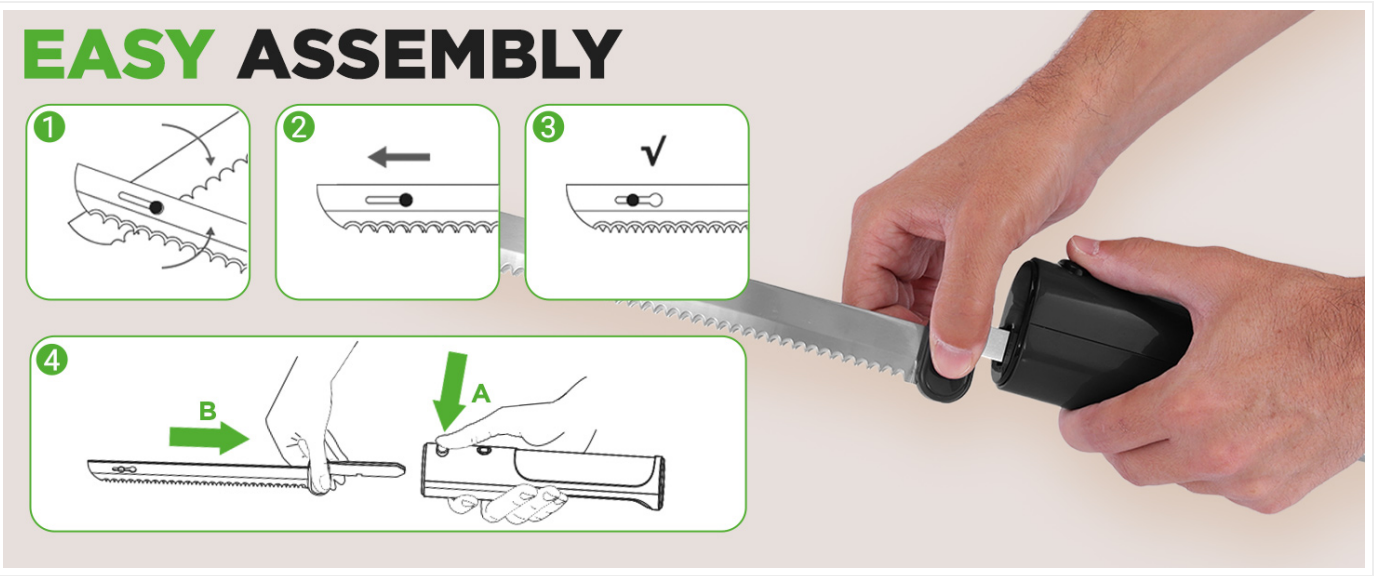



Image: A visual guide demonstrating the four steps for correctly assembling the detachable blade into the knife handle.

## Charging the Electric Knife

The NutriChef Cordless Electric Knife is powered by a rechargeable battery for convenient, cord-free operation.

- Before first use, fully charge the knife.
- Connect the USB charging cable to the Type-C port on the knife handle.
- Plug the other end of the USB cable into the provided UL charger, and then plug the charger into a standard wall outlet.
- The charging indicator light (if present) will illuminate to show charging status.
- A full charge typically takes several hours. Do not overcharge the battery.
- Unplug the charger once charging is complete.




Image: The electric knife handle being charged via its USB-C port, connected to a wall adapter.

## Operating Instructions

Ensure the blade is securely attached and the knife is fully charged before operation.

1. **Grip:** Hold the knife handle firmly with a comfortable, contoured grip. Ensure your hand covers both safety touch sensors located on the bottom of the handle.
2. **Activate:** Press the ON/OFF button located on the top of the handle. The blades will begin to oscillate. The knife is designed to stay ON without continuous pressure on the button, as long as the safety touch sensors are engaged by your grip.
3. **Slicing:** Guide the knife through the food with gentle, even pressure. Allow the oscillating blades to do the work. Do not force the knife.
4. **Stopping:** To stop the knife, release your grip from the safety touch sensors on the bottom of the handle. The blades will cease movement. Note that there may be a slight delay before the blades fully stop.
5. **Safety Lock:** The knife includes a safety lock feature to prevent accidental activation. Always engage the safety lock when the knife is not in use.

### Tips for Best Results:

- For meats, allow roasts to rest for 10-15 minutes after cooking before carving. This helps retain juices.
- Use a carving fork to steady the food while slicing.
- For bread, use a smooth, steady motion to achieve even slices.



Image: A detailed view of the knife's ergonomic handle, showing the location of the safety locks and illustrating a comfortable grip for operation.



Image: Examples of the electric knife's versatility, demonstrating its use for slicing bread, cakes, and cooked meats.

## Care and Maintenance

Proper care ensures the longevity and performance of your electric knife.

- **Cleaning Blades:** After each use, immediately remove the blade from the handle. Hand wash the stainless steel blade with mild dish soap and warm water. Dry thoroughly to prevent rust. Do not wash the blades in a dishwasher, as this can dull the edges and damage the plastic components.
- **Cleaning Handle:** Wipe the knife handle with a damp cloth. Do not immerse the handle in water.

- **Blade Sharpening:** Occasionally, oil the blades to maintain sharpness and prevent rust.
- **Storage:** Store the clean, dry knife handle and blade in the provided storage box. Keep in a safe place, out of reach of children.




Image: The electric knife handle, blade, and charging cable neatly organized within the compact storage box.

## Troubleshooting

If you encounter issues with your NutriChef Cordless Electric Knife, refer to the following common problems and solutions:

- **Knife Not Turning On:**
  - Ensure the battery is charged. Connect the knife to the charger and allow sufficient time for charging.
  - Verify the blade is correctly and securely inserted into the handle.
  - Confirm your grip is firm and both safety touch sensors on the handle are fully engaged.
- **Poor Cutting Performance:**
  - Check if the blade is clean and free of food debris.
  - Ensure the blade is properly seated and locked in the handle.
  - The knife is designed for slicing cooked meats, bread, and soft foods. Do not attempt to cut frozen items or hard bones.
- **Battery Drains Quickly:**
  - Ensure the knife is fully charged before use.
  - Battery performance can vary with usage intensity and age. For optimal battery life, avoid completely draining the battery frequently.
  - If battery life significantly diminishes, contact customer support.

## Specifications

| Feature | Specification |
|---|---|
| Brand | NutriChef |
| Model Name | NUELREKN3BLACK |
| Blade Material | Stainless Steel |
| Handle Material | Acrylonitrile Butadiene Styrene (ABS) |
| Blade Length | 8 Inches |

| | |
|---|---|
| Overall Item Length | 17.79 Inches |
| Item Weight | 1.1 Pounds |
| Power Source | Battery Powered (USB-C Charging) |
| Special Features | Button Lock, Ergonomic Handle, Lightweight, Locking Blades, Serrated Blade |
| Hand Orientation | Ambidextrous |
| UPC | 842893167565 |




Image: A diagram illustrating the overall length and key dimensions of the NutriChef Electric Knife, along with close-ups of the stainless steel blade and ABS handle.

## Warranty and Support

NutriChef products are manufactured with quality and performance in mind. For warranty information, technical support, or any questions regarding your NutriChef Cordless Electric Knife, please refer to the warranty card included with your purchase or visit the official NutriChef

website for customer service contact details.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**