ZMJH 210S

ZMJH Elongated Bidet Toilet Seat

Model: 210S-X

Introduction

Thank you for choosing the ZMJH Elongated Bidet Toilet Seat, Model 210S-X. This electric smart bidet seat is designed to provide enhanced hygiene and comfort with features such as a heated seat, warm water wash, warm air dryer, and an automatic open and close lid. This manual provides essential information for safe installation, operation, and maintenance of your new bidet toilet seat.

Safety Information

Please read all safety instructions carefully before installation and use to prevent injury or damage. Keep this manual for future reference.

- Ensure the bidet seat is connected to a grounded electrical outlet.
- Do not immerse the product in water or spray water directly onto the electrical components.
- Do not attempt to repair or disassemble the unit yourself. Contact qualified service personnel.
- Supervise children to ensure they do not play with the appliance.
- Disconnect power before cleaning or performing any maintenance.
- Ensure water supply connections are secure to prevent leaks.

Package Contents

Verify that all components are present before beginning installation:

- ZMJH Elongated Bidet Toilet Seat (Model 210S-X)
- Wireless Remote Control
- Remote Wall Mount
- Installation Hardware (mounting plate, bolts, washers, nuts)
- Water Supply Hose
- T-Valve Connector

Setup and Installation

Installation of the ZMJH bidet seat is designed to be straightforward. Professional assistance is not typically required. Ensure you have an electrical outlet near the toilet.

1. **Remove Existing Toilet Seat:** Turn off the water supply to the toilet and flush to empty the tank. Disconnect the existing water supply line from the toilet tank. Remove the old toilet seat by unscrewing the mounting bolts.
2. **Install Mounting Plate:** Place the bidet seat's mounting plate over the toilet bowl holes. Insert the mounting bolts through the plate and toilet holes, securing them from underneath with washers and nuts. Do not overtighten.
3. **Install T-Valve:** Install the T-valve connector between the toilet's fill valve and the water supply line. Ensure all connections are hand-tightened, then use a wrench for a quarter turn to prevent leaks.
4. **Connect Water Hose:** Connect one end of the provided water supply hose to the T-valve and the other end to the bidet seat's water inlet.
5. **Slide Bidet Seat into Place:** Align the bidet seat with the mounting plate and slide it forward until it clicks securely into place.
6. **Connect Power:** Plug the bidet seat's power cord into a grounded electrical outlet.
7. **Restore Water and Power:** Slowly turn on the water supply to the toilet. Check for any leaks. Turn on the electrical power.

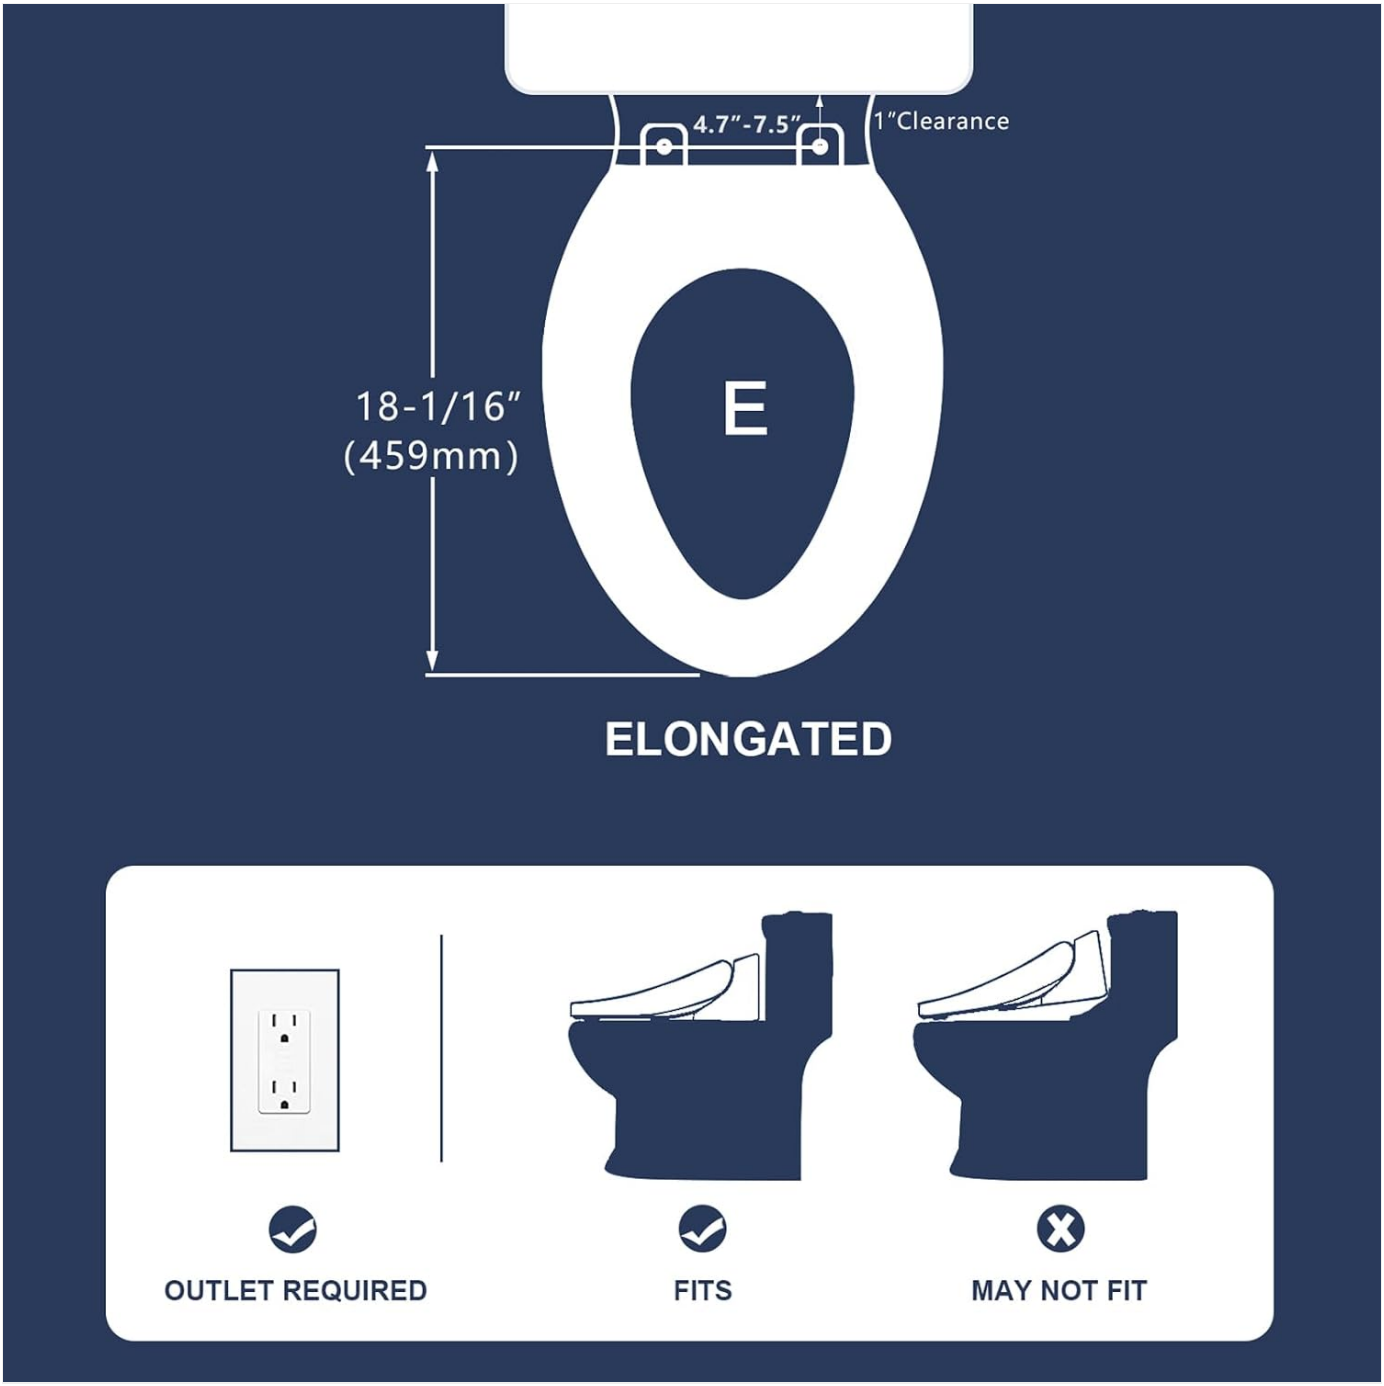

Image: Elongated toilet seat dimensions (18-1/16 inches or 459mm) and clearance requirements (4.7-7.5 inches from tank to bolt holes, 1 inch clearance from tank). An electrical outlet is required for operation. The diagram also shows which toilet bowl shapes are compatible (fits elongated) and which may not fit.

Image: A ZMJH bidet toilet seat, white in color, is shown installed on a standard white toilet. The power cord and water line are visible connecting to the back of the unit. The seat is closed, showing its sleek design.

Operating Instructions

Your ZMJH bidet toilet seat offers various functions controlled by the wireless remote or the side control knob.

Wireless Remote Control

Image: A white wireless remote control for the bidet seat. It features buttons for Rear Wash, Bidet Wash, Drying, Auto Mode, Kids Mode, Lighting, Adjustable Nozzle Position, Adjustable Water Pressure, Adjustable Water Temp, Adjustable Heated Seat, Adjustable Warm Air, Stop/Power, Turbo Wash, and ECO Mode. There are also strength/forward/backward controls.

- **Rear Wash:** Activates a posterior cleansing spray.
- **Bidet Wash (Front Wash):** Activates a feminine cleansing spray.
- **Drying:** Initiates the warm air dryer function.
- **Auto Mode:** Provides a pre-programmed sequence of wash and dry cycles.
- **Kids Mode:** Offers a gentler wash and dry cycle suitable for children.
- **Lighting:** Controls the night light feature (if available).
- **Adjustable Nozzle Position:** Moves the nozzle forward or backward for optimal cleansing.
- **Adjustable Water Pressure:** Increases or decreases the water spray intensity (3 levels).
- **Adjustable Water Temp:** Sets the water temperature (3 levels).
- **Adjustable Heated Seat:** Adjusts the seat temperature (3 levels).
- **Adjustable Warm Air:** Controls the warm air dryer temperature (3 levels).
- **Stop/Power:** Stops current operation or turns the unit on/off.
- **Turbo Wash (Vortex Wash):** Provides a stronger, more focused wash.

- **ECO Mode:** Reduces energy consumption by lowering seat and water temperatures when not in use.

Key Features and Functions

Image: A close-up view of the stainless steel nozzle extending from the bidet seat. It illustrates three functions: Rear Wash (water stream directed backward), Bidet Wash (water stream directed forward for feminine hygiene), and Self Cleaning (water spraying to clean the nozzle itself). Below, a larger image shows the nozzle in action for a "Turbo Wash" with adjustable water temperature.

- **Adjustable Washes:** The stainless steel nozzle provides dedicated Rear and Front (Bidet) washes. Water pressure and temperature are adjustable to your preference. The nozzle also performs a self-cleaning function before and after each use.
- **Hybrid Heating Technology:** Ensures a continuous supply of warm water throughout the wash cycle.
- **Heated Seat:** The seat temperature can be adjusted to three different levels for comfort.
- **Warm Air Dryer:** After washing, a warm air dryer with three adjustable temperature levels provides a comfortable drying experience.
- **Auto Open and Close Lid:** The intelligent lid automatically opens and closes as you approach or leave the toilet, offering a touchless experience.

Image: Two panels illustrating the "Auto Open And Close Lid" feature. The left panel shows a person approaching the toilet, and the bidet seat lid is automatically opening. The right panel shows the bidet seat with its lid and seat both open, with a blue light emanating from the bowl, indicating customizable proximity settings.

Image: The top panel shows a "Smart Display" on the bidet seat, indicating a temperature setting of "39°C" and a water droplet icon, allowing users to understand current settings at a glance. The bottom panel shows a "Control Knob" located on the side of the bidet seat, with icons for various functions like rear wash, feminine wash, and drying, offering easier operation.

Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your bidet toilet seat.

- **Exterior Cleaning:** Wipe the exterior surfaces of the bidet seat with a soft, damp cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that could damage the finish.
- **Nozzle Cleaning:** The stainless steel nozzle performs an automatic self-cleaning cycle. For additional cleaning, you can manually extend the nozzle (refer to remote instructions) and gently wipe it with a soft brush or cloth.
- **Filter Cleaning:** Periodically check the water inlet filter for sediment buildup. Turn off the water supply, disconnect the water hose, and clean the filter screen if necessary.
- **Long-Term Storage:** If the unit will not be used for an extended period, drain the water from the bidet seat and disconnect the power.

Troubleshooting

If you encounter issues with your bidet toilet seat, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power / Unit not turning on	Power cord unplugged, circuit breaker tripped, GFCI outlet tripped.	Ensure power cord is securely plugged in. Check and reset circuit breaker or GFCI outlet.
No water spray / Weak spray	Water supply valve closed, water inlet filter clogged, low water pressure.	Open the water supply valve fully. Clean the water inlet filter. Check household water pressure.
Water temperature not warm	Water heater setting too low, ECO mode active.	Adjust water temperature setting on the remote. Disable ECO mode if warm water is desired immediately.
Heated seat not warm	Heated seat setting too low, ECO mode active.	Adjust seat temperature setting on the remote. Disable ECO mode.
Lid not opening/closing automatically	Proximity sensor obstructed or dirty, feature disabled.	Clean the proximity sensor. Ensure the auto open/close feature is enabled via remote.
Error Code 7 displayed	Indicates a potential issue with water flow or heating element.	Check water supply and ensure it's fully open. Try lowering water heat settings. Reset the unit by unplugging and re-plugging. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact ZMJH customer support for further assistance.

Specifications

Feature	Detail
Model Number	210S-X
Type	Elongated Bidet Toilet Seat
Dimensions (L x W x H)	50.8 x 38.1 x 2.51 cm (20 x 15 x 0.99 inches)
Item Weight	4.99 kg (11 lbs)
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	White
Heated Seat	Yes, 3 adjustable temperature levels
Water Heater	Yes, Hybrid Heating Technology, 3 adjustable temperature levels
Water Pressure	3 adjustable levels
Warm Air Dryer	Yes, 3 adjustable temperature levels
Nozzle Type	Stainless Steel, Self-Cleaning
Wash Functions	Rear Wash, Front (Bidet) Wash, Turbo Wash
Lid Feature	Auto Open and Close, Slow Close

Feature	Detail
Control	Wireless Remote Control, Side Control Knob
Power Source	Requires electrical outlet (Batteries for remote: Yes, Batteries for unit: No)

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact ZMJH customer service. Keep your purchase receipt as proof of purchase for warranty claims.
Customer Service: Please visit the ZMJH official website or refer to your product packaging for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question