E GATE C212

E GATE C212 Wireless Bluetooth Speaker Instruction Manual

Model: C212

1. Introduction

Thank you for purchasing the E GATE C212 Wireless Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity.



Image: The E GATE C212 Wireless Bluetooth Speaker, showcasing its sleek design and front grille.

2. Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or humid environments.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. Contact qualified service personnel.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable or a certified Type-C cable for charging.
- Ensure proper ventilation when operating the speaker.

3. Package Contents

Verify that all items are present in your package:

- E GATE C212 Wireless Bluetooth Speaker
- Charging Cable (Type-C)
- User Manual (this document)

4. Product Overview

Familiarize yourself with the speaker's components and controls.

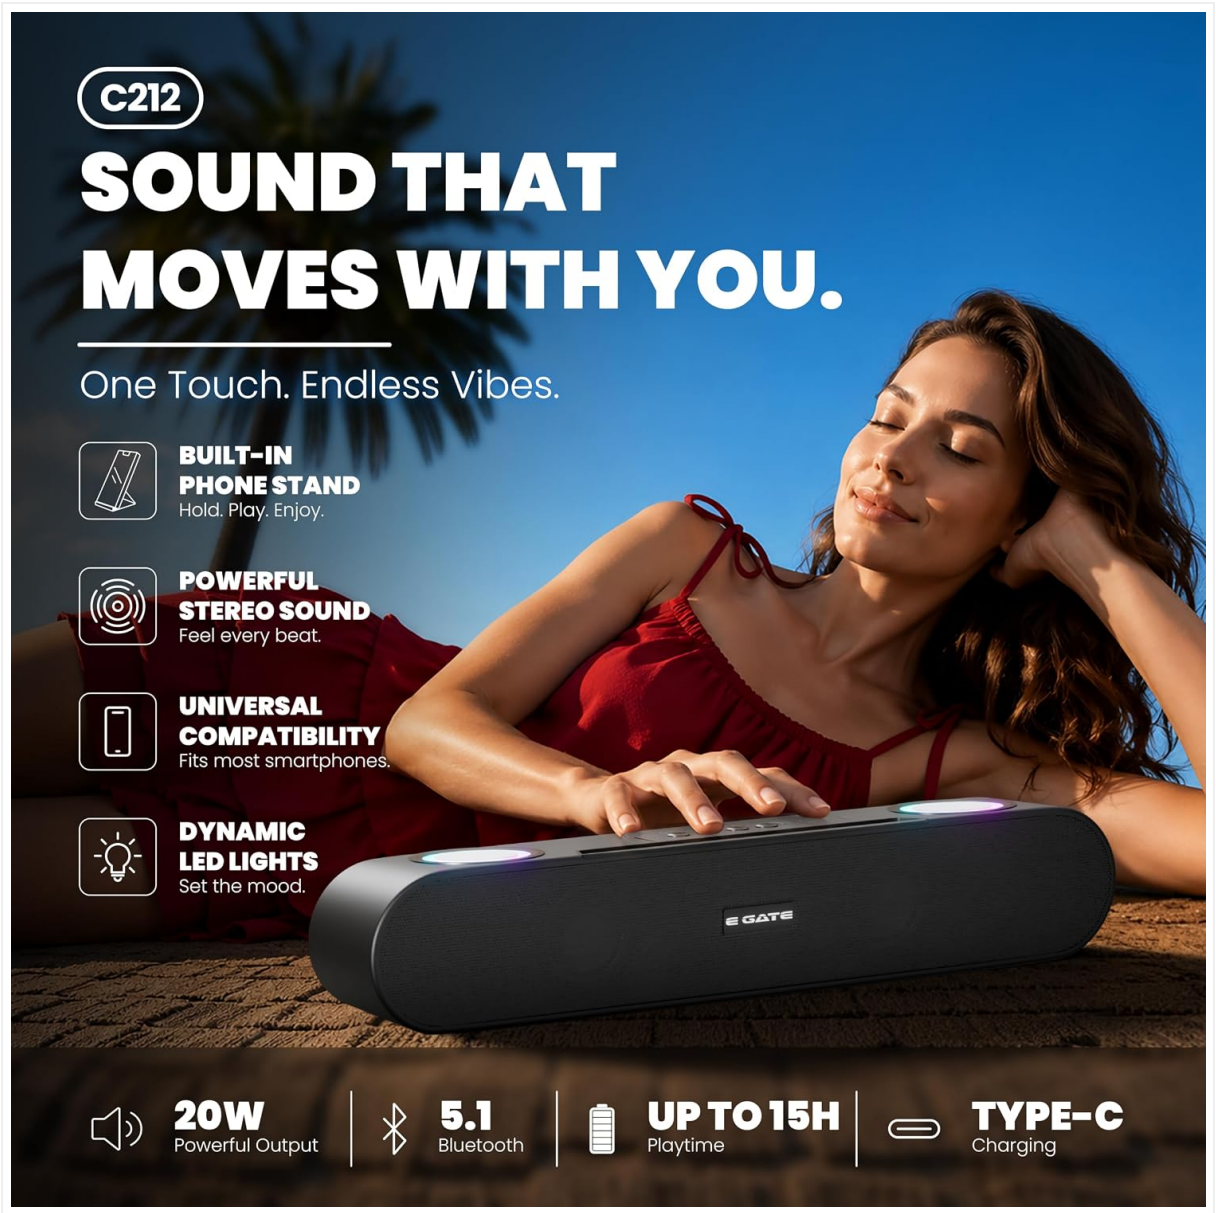


Image: Detailed view of the E GATE C212 speaker's control panel and rear ports, including AUX, TF Card slot, USB Port, and Type-C charging interface.

Control Panel:

- **Power Button:** Press and hold to power on/off. Short press to change modes.
- **Volume Up (+):** Increase volume. Long press for next track.
- **Volume Down (-):** Decrease volume. Long press for previous track.
- **Play/Pause Button:** Play/pause music. Answer/end calls.
- **LED Light Button:** Cycle through LED light modes or turn off.

Rear Ports:

- **AUX Input:** For wired audio connection.
- **TF Card Slot (MicroSD):** For playing music from a microSD card.
- **USB Port:** For playing music from a USB drive.
- **Type-C Charging Port:** For charging the speaker.

5. Setup

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port.

- The LED indicator will show charging status.
- A full charge takes approximately 3-4 hours.
- The speaker offers up to 15 hours of playback at 50% volume with LED lights off.



Image: Illustration highlighting the 2000mAh battery capacity and Type-C fast charging feature for extended playback.

5.2 Power On/Off

- To power on: Press and hold the Power button for 2-3 seconds. You will hear an audible prompt.
- To power off: Press and hold the Power button for 2-3 seconds. You will hear an audible prompt.

6. Operating Instructions

6.1 Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. Enable Bluetooth on your device (smartphone, tablet, laptop).
3. Search for "E GATE C212" in the list of available Bluetooth devices.
4. Select "E GATE C212" to connect. Once connected, you will hear a confirmation sound, and the LED will stop flashing.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

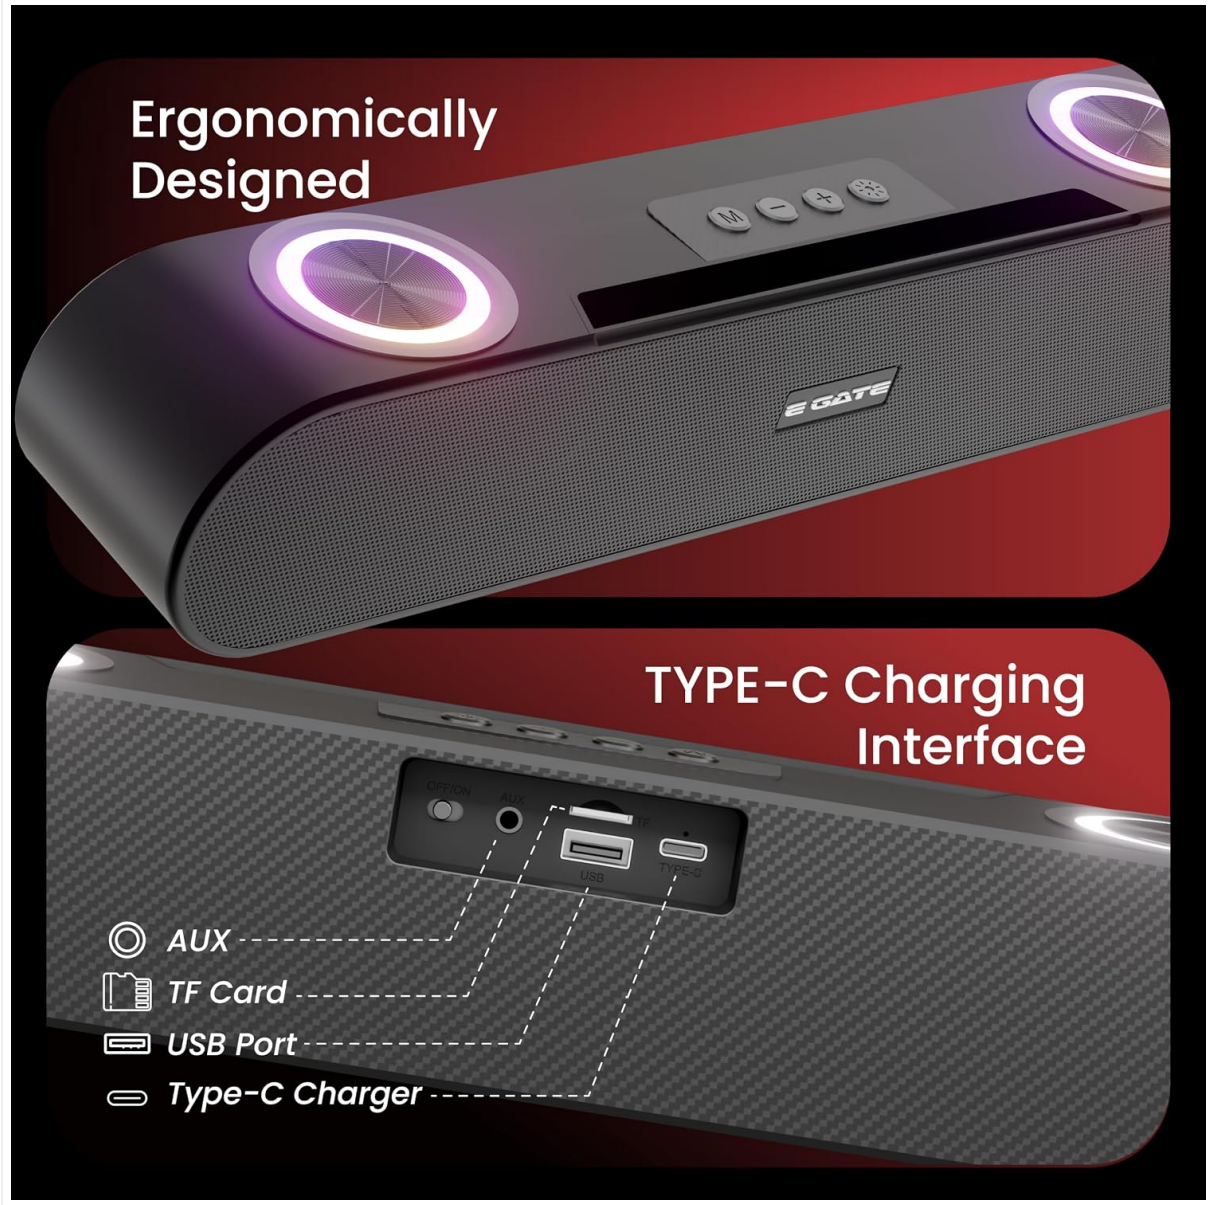


Image: The E GATE C212 speaker connected via Bluetooth 5.3 to a smartphone, demonstrating stable and limitless syncing.

6.2 True Wireless Stereo (TWS) Pairing

TWS allows you to connect two E GATE C212 speakers for a stereo sound experience.

1. Ensure both C212 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search and pair with each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in Section 6.1.



Image: Two E GATE C212 speakers wirelessly connected via TWS, illustrating the stereo sound setup.

6.3 AUX Mode

Connect an external audio device using a 3.5mm AUX cable (not included).

1. Connect one end of the 3.5mm AUX cable to the speaker's AUX input port.
2. Connect the other end to the audio output of your device.
3. The speaker will automatically switch to AUX mode or you may need to short press the Power button to cycle modes until AUX mode is selected.

6.4 USB Playback

Insert a USB flash drive containing MP3 audio files into the USB port.

1. Insert the USB drive into the speaker's USB port.
2. The speaker will automatically switch to USB mode and begin playing music, or you may need to short press the Power button to cycle modes.

6.5 MicroSD (TF Card) Playback

Insert a microSD card containing MP3 audio files into the TF Card slot.

1. Insert the microSD card into the speaker's TF Card slot.

2. The speaker will automatically switch to TF Card mode and begin playing music, or you may need to short press the Power button to cycle modes.

6.6 FM Radio

To use the built-in FM radio:

1. Short press the Power button to cycle through modes until FM Radio mode is selected.
2. Press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Volume Up (+) and Volume Down (-) buttons (short press) to switch between saved stations.

6.7 Hands-Free Calling

When connected via Bluetooth, you can manage calls directly from the speaker.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Press and hold the Play/Pause button.
- **Redial Last Number:** Double-press the Play/Pause button.

6.8 LED Light Control

The speaker features dynamic RGB LED lighting.

- Short press the LED Light button to cycle through different light modes (e.g., various patterns, solid colors).
- Press and hold the LED Light button to turn the lights off.



Image: Close-up of the E GATE C212 speaker's LED light rings, showcasing multi-color illumination.

6.9 Built-in Phone Stand

The speaker includes a built-in stand for your smartphone or tablet.

- Simply place your device into the designated slot on top of the speaker.
- This allows for hands-free viewing while enjoying audio from the speaker.



Image: The E GATE C212 speaker with a smartphone placed in its built-in stand, demonstrating hands-free media consumption.

7. Maintenance

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the ports free from dust and debris.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Charge the speaker at least once every three months to maintain battery health if not used regularly.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device Bluetooth is off; speaker is already connected to another device.	Ensure speaker is in pairing mode (flashing LED). Turn on device Bluetooth. Disconnect from other devices.
No sound.	Volume too low; incorrect mode selected; cable not connected properly (AUX).	Increase volume on both speaker and device. Ensure correct mode (Bluetooth, AUX, USB, TF, FM). Check cable connections.
Poor FM reception.	Weak signal.	Move the speaker to a location with better signal reception. Perform auto-scan again.
TWS pairing fails.	Speakers are too far apart; one speaker is already connected to a device.	Ensure speakers are close to each other. Disconnect both speakers from any Bluetooth devices before initiating TWS pairing.

9. Specifications

Feature	Detail
Model Name	C212
Brand	E GATE
Speaker Output Power	20 Watts (2x 10W drivers)
Audio Channels	2.0 Channel with Dual Passive Radiators
Connectivity Technology	Bluetooth 5.3, Auxiliary, USB, MicroSD (TF Card), FM Radio
Battery Capacity	2000 mAh
Playback Time	Up to 15 hours (at 50% volume, LED off)
Charging Interface	Type-C
Special Features	Dynamic RGB LED Lights, TWS Function, Built-in Phone Stand, Hands-Free Calling
Item Dimensions (D x W x H)	6.5D x 33W x 6.5H Centimeters
Item Weight	700 Grams

10. Warranty and Support

The E GATE C212 Wireless Bluetooth Speaker comes with a**1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your purchase receipt as proof of purchase.

For warranty claims, technical support, or any inquiries, please contact E GATE customer service. Contact details can typically be found on the official E GATE website or on your product packaging.

Manufacturer: Egate Infotel Pvt Ltd, 503, SG Alpha Tower-II, Sector-9 Vasundhara, Ghaziabad, Uttar Pradesh - 201012.

© 2024 E GATE. All rights reserved.