Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Uvital UV-1000

Uvital Big Button Corded Landline Phone

Model: UV-1000

Instruction Manual

Introduction

Thank you for choosing the Uvital Big Button Corded Landline Phone. This phone is designed for ease of use, particularly for seniors and individuals with visual or hearing impairments. It features large, high-contrast buttons, an amplified ringer, and convenient one-touch dialing options. Please read this manual carefully to ensure proper setup and operation of your new phone.

Product Overview

The Uvital Big Button Phone is a corded landline telephone with several features designed for accessibility and convenience.



Image: Front view of the Uvital Big Button Corded Landline Phone, showing the large keypad and three photo memory buttons.

Key Features:

- **Large, High-Contrast Buttons:** Easy to see and press, reducing dialing errors.
- **Amplified Ringer:** An 84 dB loud ringer with a visual flashing light ensures incoming calls are not missed.
- **Speakerphone Function:** Allows for hands-free conversations with adjustable volume.
- **Three One-Touch Memory Buttons:** Customizable buttons for quick dialing of important contacts.
- **Hearing Aid Compatible:** Designed to meet TIA-1083 standards for reduced background noise.
- **No External Power Required:** Operates directly from the telephone line.

Setup

Follow these steps to set up your Uvital Big Button Phone:

1. **Connect the Handset:** Plug one end of the coiled handset cord into the left side of the phone base and the other end into the handset.

2. **Connect to Telephone Line:** Plug one end of the straight telephone line cord into the port labeled 'TEL-LINE' on the back of the phone base. Plug the other end into your wall telephone jack.
3. **Adjust Volume Settings:** Locate the volume switches on the back of the phone base.
    - **Speaker Volume (1):** Adjust the 'SPEAKER VOLUME' switch to LO or HI for speakerphone volume.
    - **Ringer Volume (2):** Adjust the 'RINGER' switch to OFF, LO, or HI for incoming call volume.
    - **Handset Volume (3):** Adjust the 'HANDSET' switch to LO or HI for earpiece volume during calls.



Image: Rear view of the phone base highlighting the adjustable switches for speaker volume, ringer volume, and handset volume.

Operating Instructions

Making a Call:

1. Lift the handset or press the**SPEAKER** button.
2. Dial the desired phone number using the large keypad buttons.

3. Wait for the call to connect.

Receiving a Call:

1. When the phone rings and the visual ringer flashes, lift the handset or press the **SPEAKER** button to answer.
2. To end the call, place the handset back on the cradle or press the **SPEAKER** button again if using speakerphone.



Image: Close-up of the phone showing the red visual ringer light flashing, indicating an incoming call.

Using the Speakerphone:

1. During a call, press the **SPEAKER** button to activate hands-free mode. The indicator light will illuminate.
2. To switch back to the handset, simply lift the handset.
3. To end a speakerphone call, press the **SPEAKER** button again.



Image: A close-up of the phone's speaker and microphone area, with the speaker button highlighted, demonstrating the effortless speakerphone feature.

Setting One-Touch Memory Buttons:

The phone has three customizable memory buttons (M1, M2, M3) for speed dialing. You can insert photos of contacts into these buttons for easy identification.

1. Lift the handset or press the **SPEAKER** button.
2. Press the **STORE** button.
3. Dial the phone number you wish to save (e.g., 555-123-4567).
4. Press one of the three memory buttons (M1, M2, or M3) to save the number to that button.
5. To dial a saved number, simply lift the handset or press **SPEAKER**, then press the corresponding memory button (M1, M2, or M3).



Image: Close-up of the three photo memory buttons, labeled for Family, Friend, and Emergency numbers, demonstrating the one-touch dialing feature.

Maintenance

To ensure the longevity and proper functioning of your Uvital phone:

- Clean the phone regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Keep the phone away from excessive moisture, direct sunlight, and extreme temperatures.
- Ensure all cords are securely connected and not tangled or pinched.

Troubleshooting

If you experience issues with your Uvital phone, please refer to the following common problems and solutions:

Problem	Possible Solution

Problem	Possible Solution
No dial tone or cannot make/receive calls.	• Ensure the telephone line cord is securely plugged into both the phone base and the wall jack. • Test the phone with a different telephone line cord. • Try connecting another working phone to the wall jack to verify the line is active.
Ringer is too quiet or not ringing.	• Check the 'RINGER' switch on the back of the phone and set it to 'LO' or 'HI'. • Ensure the visual ringer light is functioning.
Cannot hear caller or caller cannot hear me.	• Adjust the 'HANDSET' volume switch on the back of the phone to 'HI'. • If using speakerphone, adjust the 'SPEAKER VOLUME' switch to 'HI'. • Ensure the handset cord is securely connected.
Buttons are sticking or unresponsive.	• Gently clean around the buttons with a soft, dry cloth. • If the issue persists, contact customer support.

Specifications

- **Brand:** Uvital
- **Model:** UV-1000
- **Telephone Type:** Corded
- **Material:** Plastic
- **Power Source:** Telephone Line Powered (No external power adapter required)
- **Dialer Type:** Single Keypad
- **Compatible Devices:** PSTN telephone lines
- **Multiline Operation:** Single-Line Operation
- **Item Weight:** Approximately 1.61 pounds (0.73 kg)
- **Dimensions (Approximate):**
  - Handset: 7.4 inches (length) x 1.7 inches (width)
  - Telephone Base: 8 inches (length) x 6 inches (width)
  - Handset Cord: 1.5 feet (unstretched) to 13 feet (stretched)

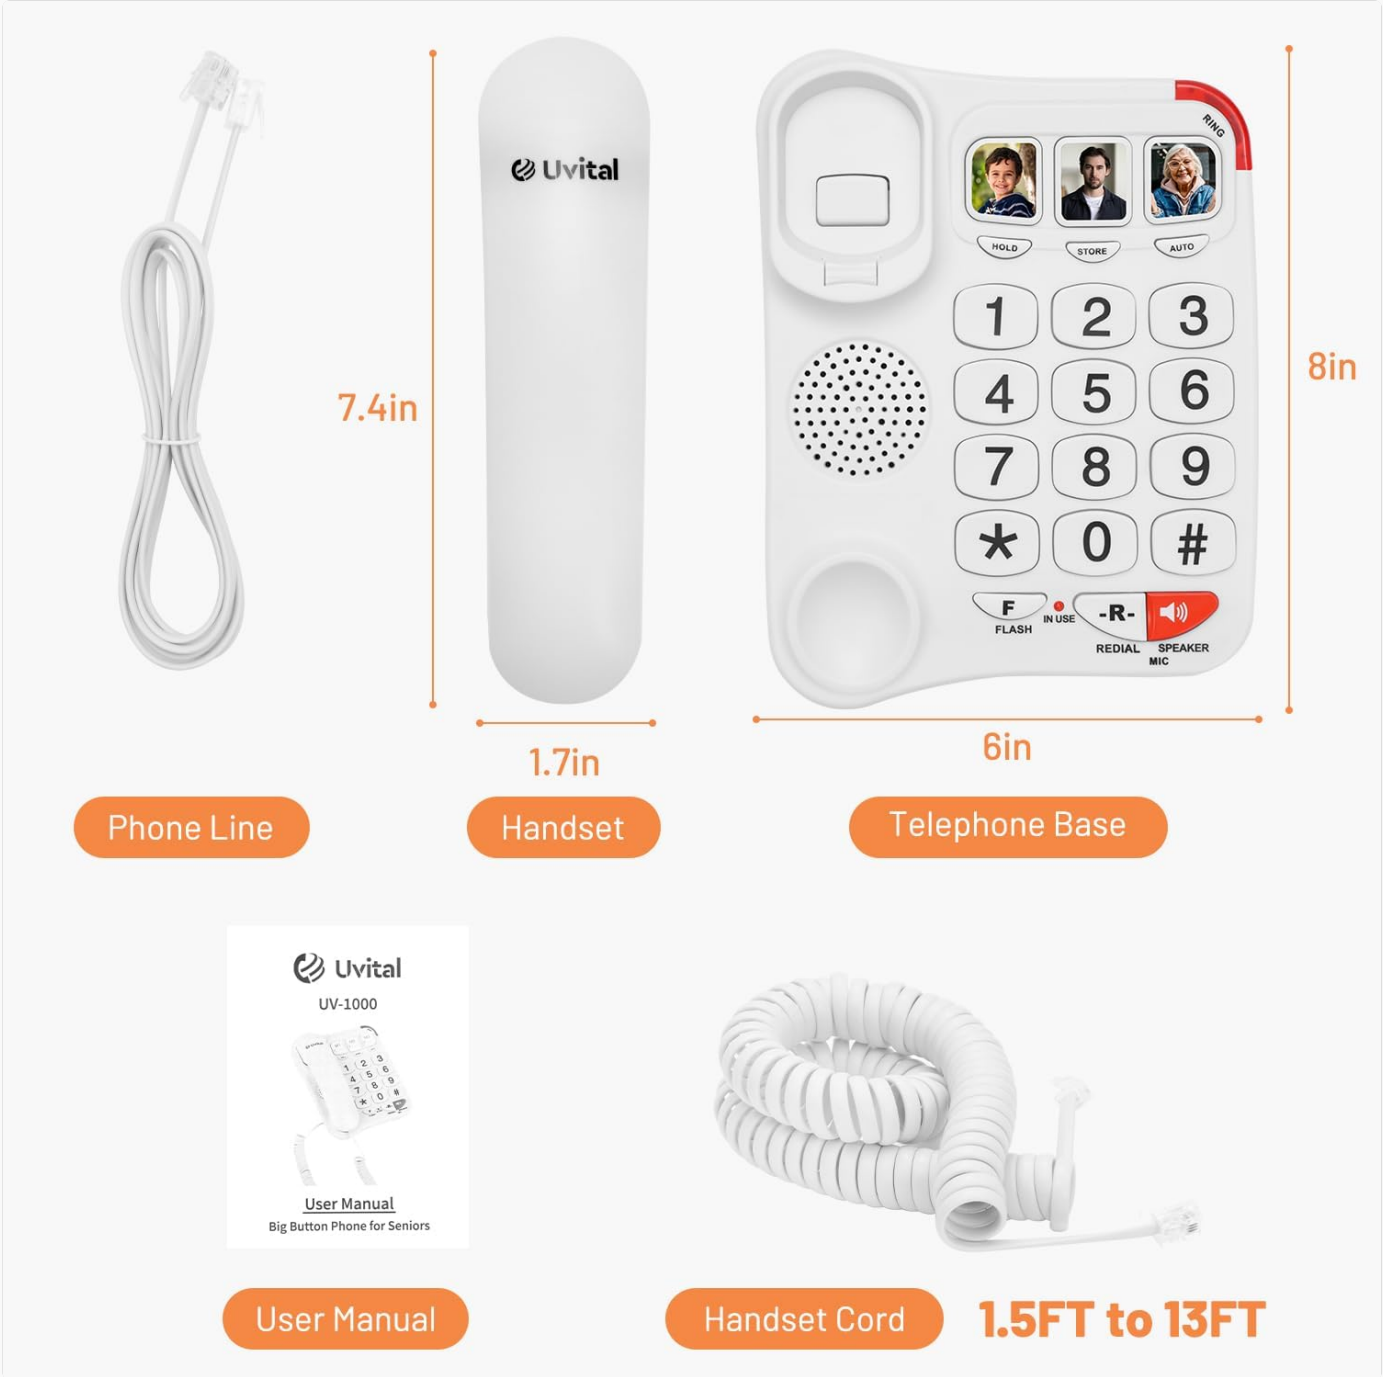


Image: Diagram showing the dimensions of the phone's handset and base, along with the length of the handset cord and a depiction of the user manual.

Warranty and Support

For warranty information or technical support, please contact Uvital customer service. Refer to the product packaging or the Uvital website for the most current contact details.

© 2024 Uvital. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DCB7K26M

More documents and user manuals: **https://manuals.plus/**