Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic P13 Pro

Proscenic P13 Pro Cordless Vacuum Cleaner

User Manual

Introduction

This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your Proscenic P13 Pro Cordless Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference.

What's in the Box

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.

- Main Motor (includes Dust Cup)
- Telescopic Tube
- Battery
- Electric Floor Brush
- Long Crevice Nozzle
- 2-in-1 Dusting Brush
- HEPA Filters (3 included)
- Power Adaptor
- Wall Mount with Screws
- Cleaning Gadget
- User Manual



Image: The Proscenic P13 Pro Cordless Vacuum Cleaner shown with its main body, telescopic tube, floor brush, battery, and various cleaning attachments including the crevice tool and dusting brush, along with spare filters.

Product Overview

The Proscenic P13 Pro is a versatile cordless stick vacuum cleaner designed for efficient home cleaning. Key features

include:

- **Powerful Suction:** Delivers up to 45 Kpa / 550W suction for effective cleaning on various surfaces.
- **Long Runtime:** Equipped with 2,500 mAh batteries providing up to 50 minutes of runtime on a single charge.
- **Anti-Tangle Floor Brush:** Features a V-shaped brush design to lift and detangle long hair and pet hair, preventing wraps.
- **Green LED Headlights:** Integrated green LED lights on the floor brush illuminate fine dust particles, making them visible for thorough cleaning.
- **LED Touch Display:** A smart LED screen displays battery level, suction performance, brush stuck alerts, and suction blockage alerts, allowing for easy mode adjustment.
- **Flexible Floor Brush:** Offers 180° swivel and 90° up and down movement for enhanced maneuverability around obstacles and under furniture.
- **Convertible Handvac:** Easily transforms into a handheld vacuum with various attachments for cleaning sofas, cars, keyboards, and high places.

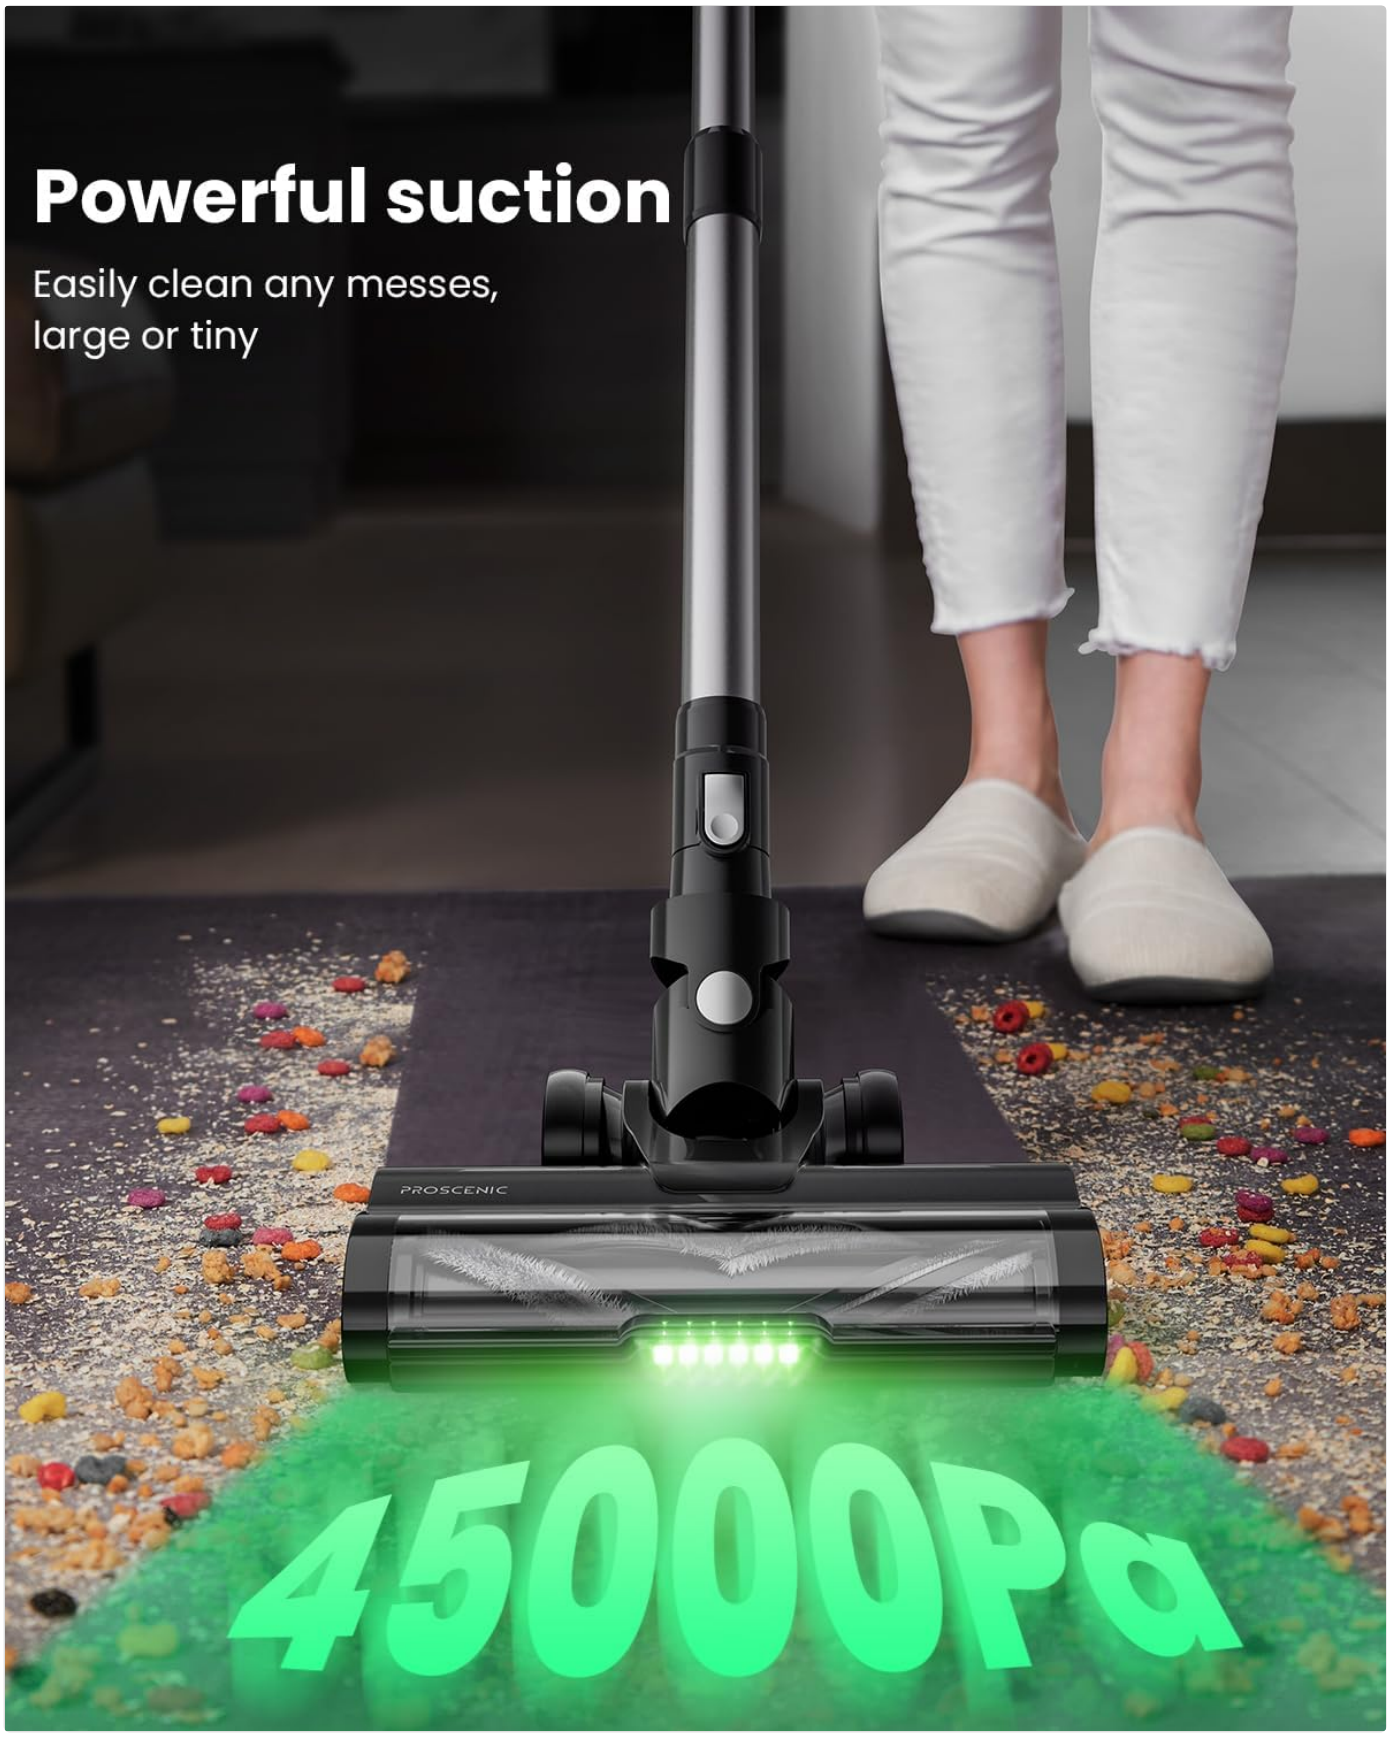


Image: The vacuum cleaner head demonstrating its powerful 4500Pa suction capability on a floor with debris.

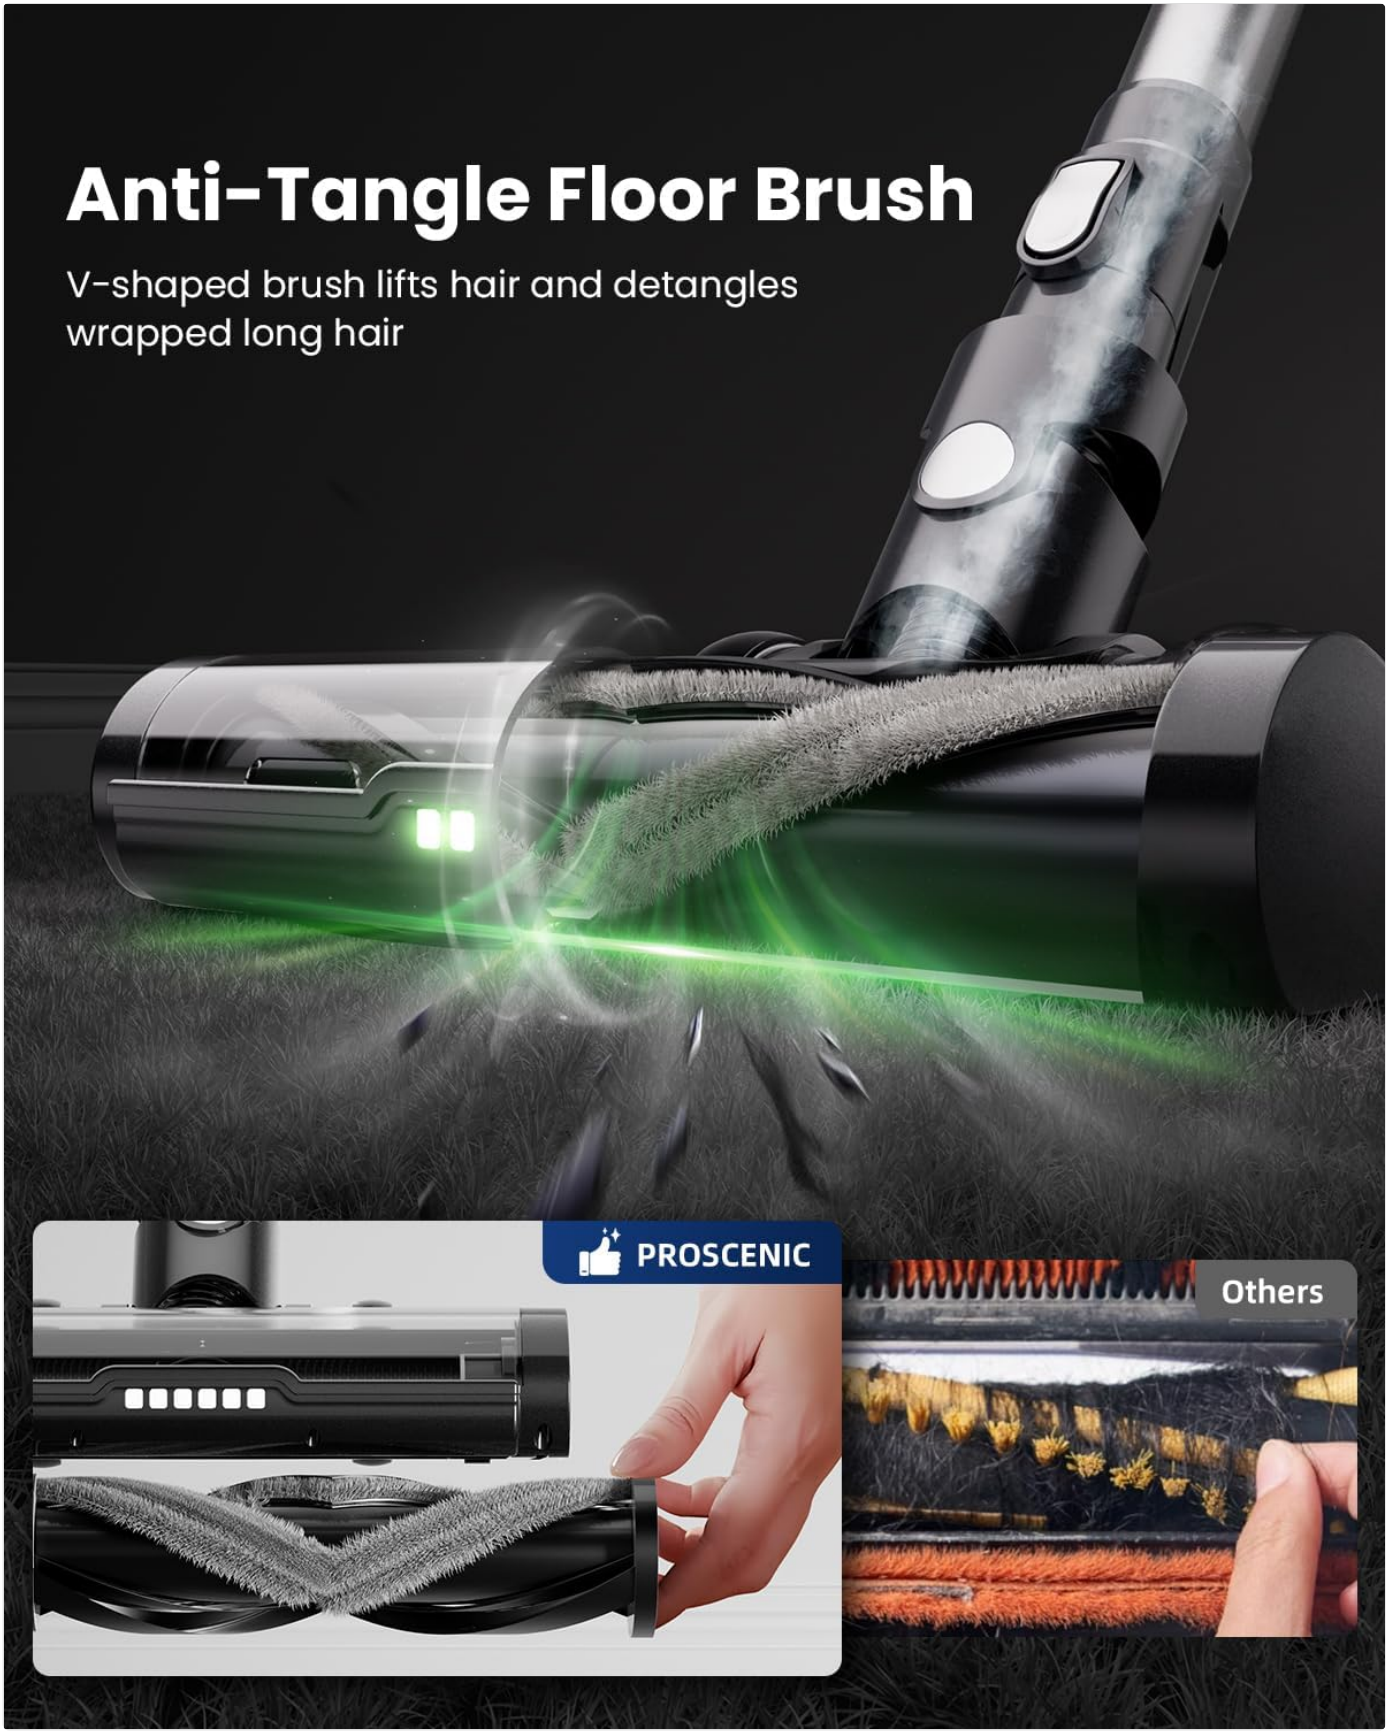


Image: Close-up of the anti-tangle V-shaped brush roll designed to prevent hair from wrapping around it.

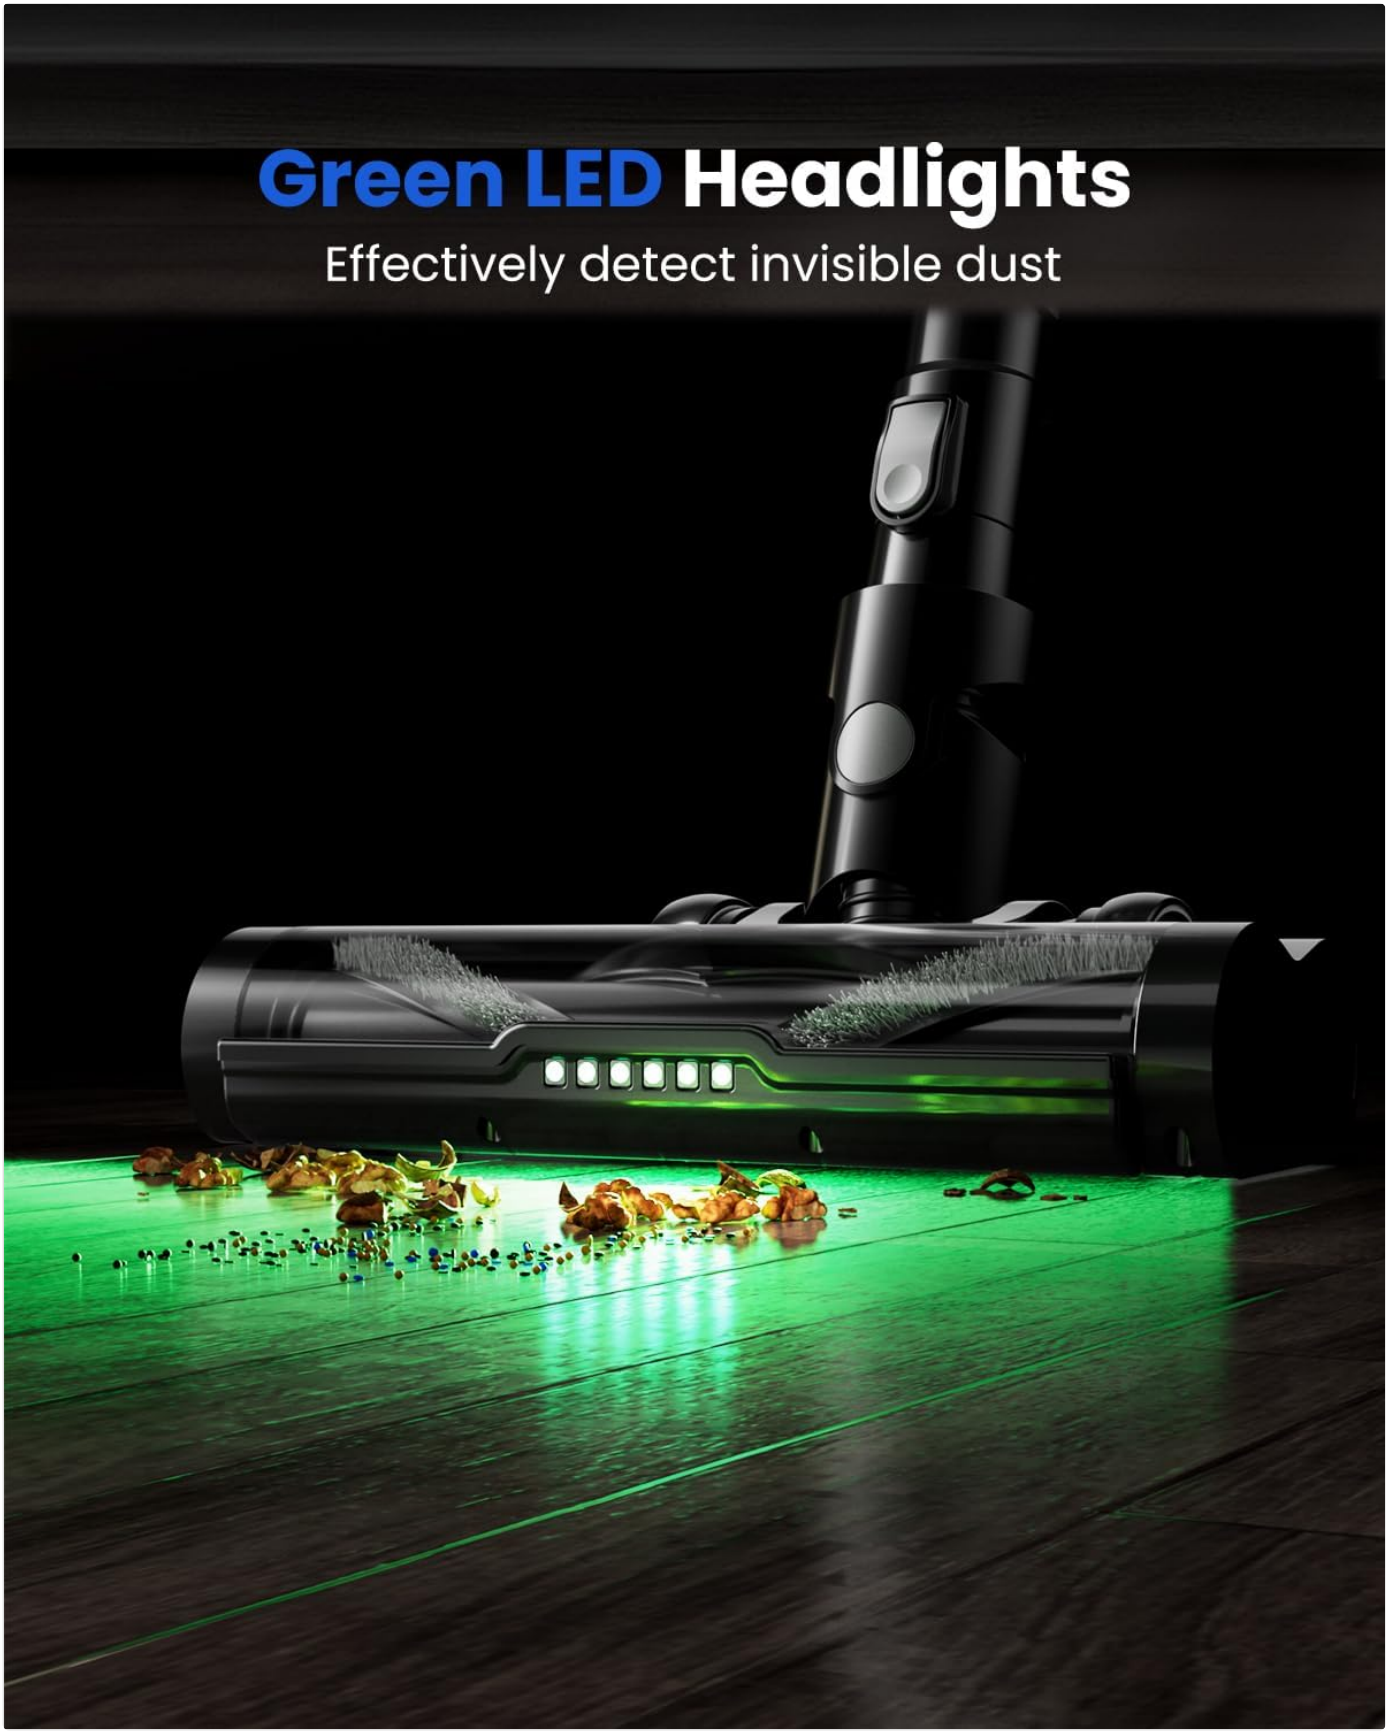


Image: The green LED headlights on the vacuum head illuminating dust particles on a dark floor, making them visible.

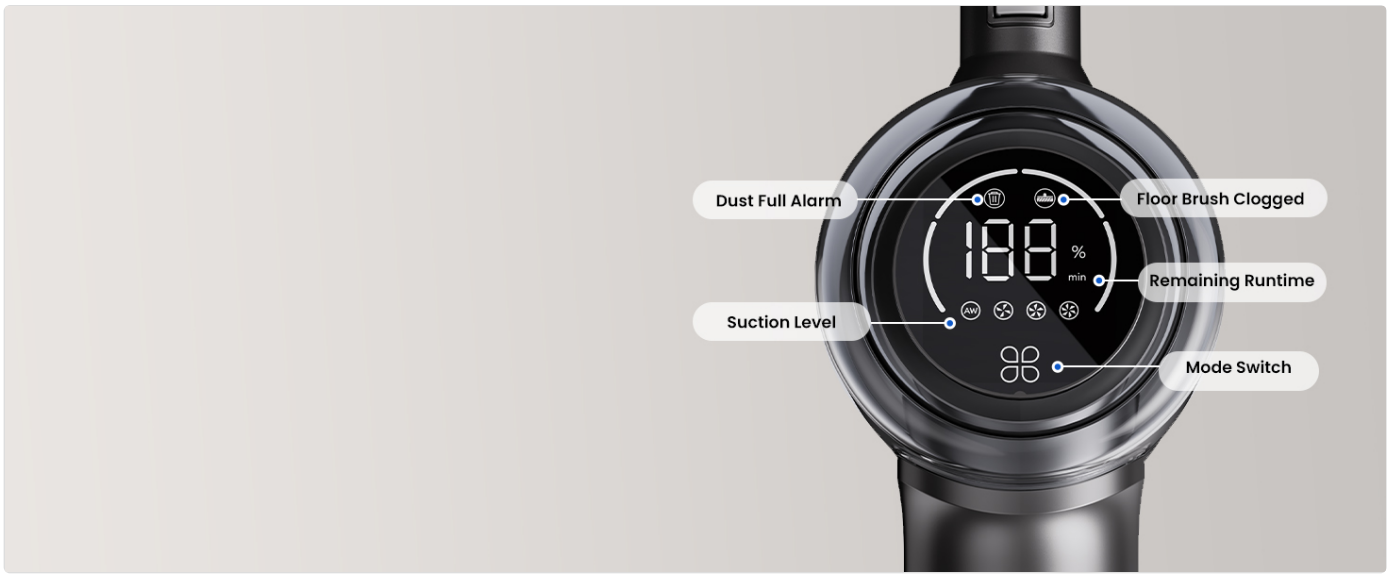


Image: A detailed view of the vacuum's LED touch display, indicating battery percentage, suction level, and alerts.

Setup

Follow these steps to assemble and prepare your vacuum cleaner for first use.

1. **Assemble the Main Unit:** Connect the telescopic tube to the main motor unit and then attach the electric floor brush to the other end of the telescopic tube. Ensure all connections click securely into place.
2. **Install the Battery:** Insert the battery pack into the designated slot on the main motor unit until it locks. The battery is detachable for flexible charging.
3. **Initial Charging:** Before first use, fully charge the battery. Connect the power adaptor to the charging port on the main unit or directly to the detached battery, then plug it into a power outlet. The LED display will indicate charging status. A full charge typically takes 4 hours.
4. **Wall Mount Installation (Optional):** Use the provided wall mount and screws to install a convenient storage and charging station. Ensure it is mounted on a sturdy surface.



Image: Illustration of the detachable battery being inserted into the main vacuum unit.



Image: The Proscenic P13 Pro vacuum cleaner stored and charging on its wall-mounted dock.

Operating Instructions

Learn how to effectively use your Proscenic P13 Pro for various cleaning tasks.

1. **Power On/Off:** Press the power button on the main unit to turn the vacuum on or off.
2. **Adjust Suction Power:** Use the 'Mode Switch' button on the LED touch display to cycle through the 3 available suction levels (Eco, Standard, Max) to suit different cleaning needs.
3. **Using the Floor Brush:** The electric floor brush is suitable for both hard floors and carpets. The green LED headlights will automatically illuminate to reveal hidden dust. The flexible design allows for easy maneuvering around furniture.
4. **Using Attachments:**
    - **Long Crevice Nozzle:** Ideal for narrow gaps, corners, and edges.
    - **2-in-1 Dusting Brush:** Use the brush for delicate surfaces like keyboards or upholstery, and the nozzle for general dusting.
    - **Telescopic Tube:** Can be used with attachments to reach high areas like ceilings or curtains.
5. **Handheld Mode:** Detach the telescopic tube and floor brush to use the main unit with attachments as a handheld vacuum for cars, furniture, or stairs.



Image: The flexible floor brush head illustrating its 180-degree swivel and 90-degree vertical movement for enhanced cleaning reach.



Image: A collage showing the vacuum in stick mode, as a handheld with the 2-in-1 brush, with the crevice tool, and with the telescopic tube for high cleaning.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. **Emptying the Dustbin:** When the dust full alarm appears on the LED display, or when the dustbin is full, press the

one-button release to empty the contents into a trash bin.

2. **Cleaning Filters:** The vacuum uses HEPA filters. Regularly remove and clean the filters. Tap off loose dust, and if necessary, rinse them under running water. Ensure filters are completely dry before reinserting to prevent damage to the motor.
3. **Cleaning the Anti-Tangle Brush:** Periodically check the floor brush for tangled hair or debris. Use the provided cleaning gadget or scissors to remove any wrapped hair from the V-shaped brush roll.
4. **Wipe Down Surfaces:** Use a soft, damp cloth to wipe the exterior of the vacuum cleaner. Do not use harsh chemicals or abrasive cleaners.



Image: A user demonstrating the one-button emptying mechanism of the 1.2L dustbin, releasing collected debris into a waste bin.



Image: A hand holding a HEPA filter under running water for cleaning.



Image: An exploded diagram illustrating the multi-stage filtration system, including the cyclone system, stainless steel mesh, sponge filter, and HEPA filters.

Troubleshooting

Refer to this section for solutions to common issues you might encounter.

- **Vacuum Not Turning On:**
  - Check if the battery is properly installed and charged.
  - Ensure the power button is pressed firmly.
- **Reduced Suction Power:**
  - Empty the dustbin if it is full.
  - Clean or replace the HEPA filters.
  - Check for blockages in the telescopic tube, floor brush, or attachments. The LED display may show a 'suction blockage alert'.
- **Brush Roll Not Spinning:**
  - Check for tangled hair or debris in the brush roll and clean it. The LED display may show a 'brush stuck alert'.
  - Ensure the floor brush is correctly attached to the telescopic tube.
- **Battery Not Charging:**
  - Verify the power adaptor is securely connected to both the vacuum/battery and the power outlet.

- Ensure the power outlet is functional.

Specifications

Feature	Specification
Brand	Proscenic
Model Name	P-US-P13 Pro
Suction Power	Up to 45 Kpa / 550W
Battery Capacity	2,500 mAh Lithium-Ion
Runtime	Up to 50 minutes
Charging Time	4 Hours
Dust Cup Capacity	1.2 Liters
Filter Type	HEPA Filter
Noise Level	78 dB
Number of Power Levels	3
Product Dimensions	9.1"L x 5"W x 14"H
Item Weight	6.8 pounds
Color	Black

Warranty and Support

Proscenic is committed to providing quality products and customer service.

- **24/7 Rapid Responding Service Team:** Dedicated support available around the clock.
- **30-Day Money-Back Service:** For returns within 30 days of purchase.
- **Up to 24-Month Warranty:** Product warranty covering manufacturing defects.
- **Fast Shipping from Local Warehouses:** Efficient delivery service.

For further assistance, please visit the official Proscenic website or contact their customer support directly. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DCBKKYQ9

More documents and user manuals: **https://manuals.plus/**