Rupital Z17-FUTI

Rupital 71" Selfie Stick Quadripod User Manual

Model: Z17-FUTI

Introduction

This user manual provides detailed instructions for the safe and effective operation of your Rupital 71" Selfie Stick Quadripod. This versatile device functions as both an extendable selfie stick and a stable tripod, designed for capturing photos and videos with smartphones and compatible cameras. Please read this manual thoroughly before use and retain it for future reference.

Safety Information

- Do not expose the device to extreme temperatures, moisture, or corrosive substances.
- Ensure all sections are securely locked before attaching a device or extending the stick.
- Do not overload the device beyond its intended weight capacity.
- Keep out of reach of children.
- Avoid using in strong winds or on uneven surfaces when in tripod mode to prevent tipping.
- Handle the remote control with care; avoid dropping or submerging in water.

Package Contents

Verify that all items are present in the package:

- Rupital 71" Selfie Stick Quadripod
- Wireless Bluetooth Remote Control
- User Manual (this document)

Product Overview

Familiarize yourself with the components of your Rupital Selfie Stick Quadripod.



Figure 1: The Rupital Selfie Stick Quadripod shown in its compact selfie stick configuration (left) and fully extended tripod configuration (center), with a detached remote control (right). This image illustrates the dual functionality of the device.

- **Phone Clamp/Mount:** Securely holds smartphones (6.5 cm to 10 cm width) and features a 1/4 inch screw mount for cameras.
- **360° Rotatable Ball Head:** Allows for flexible positioning and angle adjustments.
- **Telescopic Rod:** Multi-section extendable aluminum alloy pole.
- **Tripod Legs:** Foldable legs that provide stability when used as a tripod.

- **Handle/Base:** Ergonomic grip that houses the folded tripod legs and the remote control.
- **Wireless Remote Control:** Detachable Bluetooth remote for remote photo/video capture.

Setup

1. Unfolding the Quadripod

1. Hold the handle firmly.
2. Gently pull the bottom part of the handle outwards to release the integrated tripod legs.
3. Spread the three legs evenly until they form a stable base.
4. To extend the telescopic rod, pull the top section upwards. Each section will lock into place as it extends. Extend to your desired height.

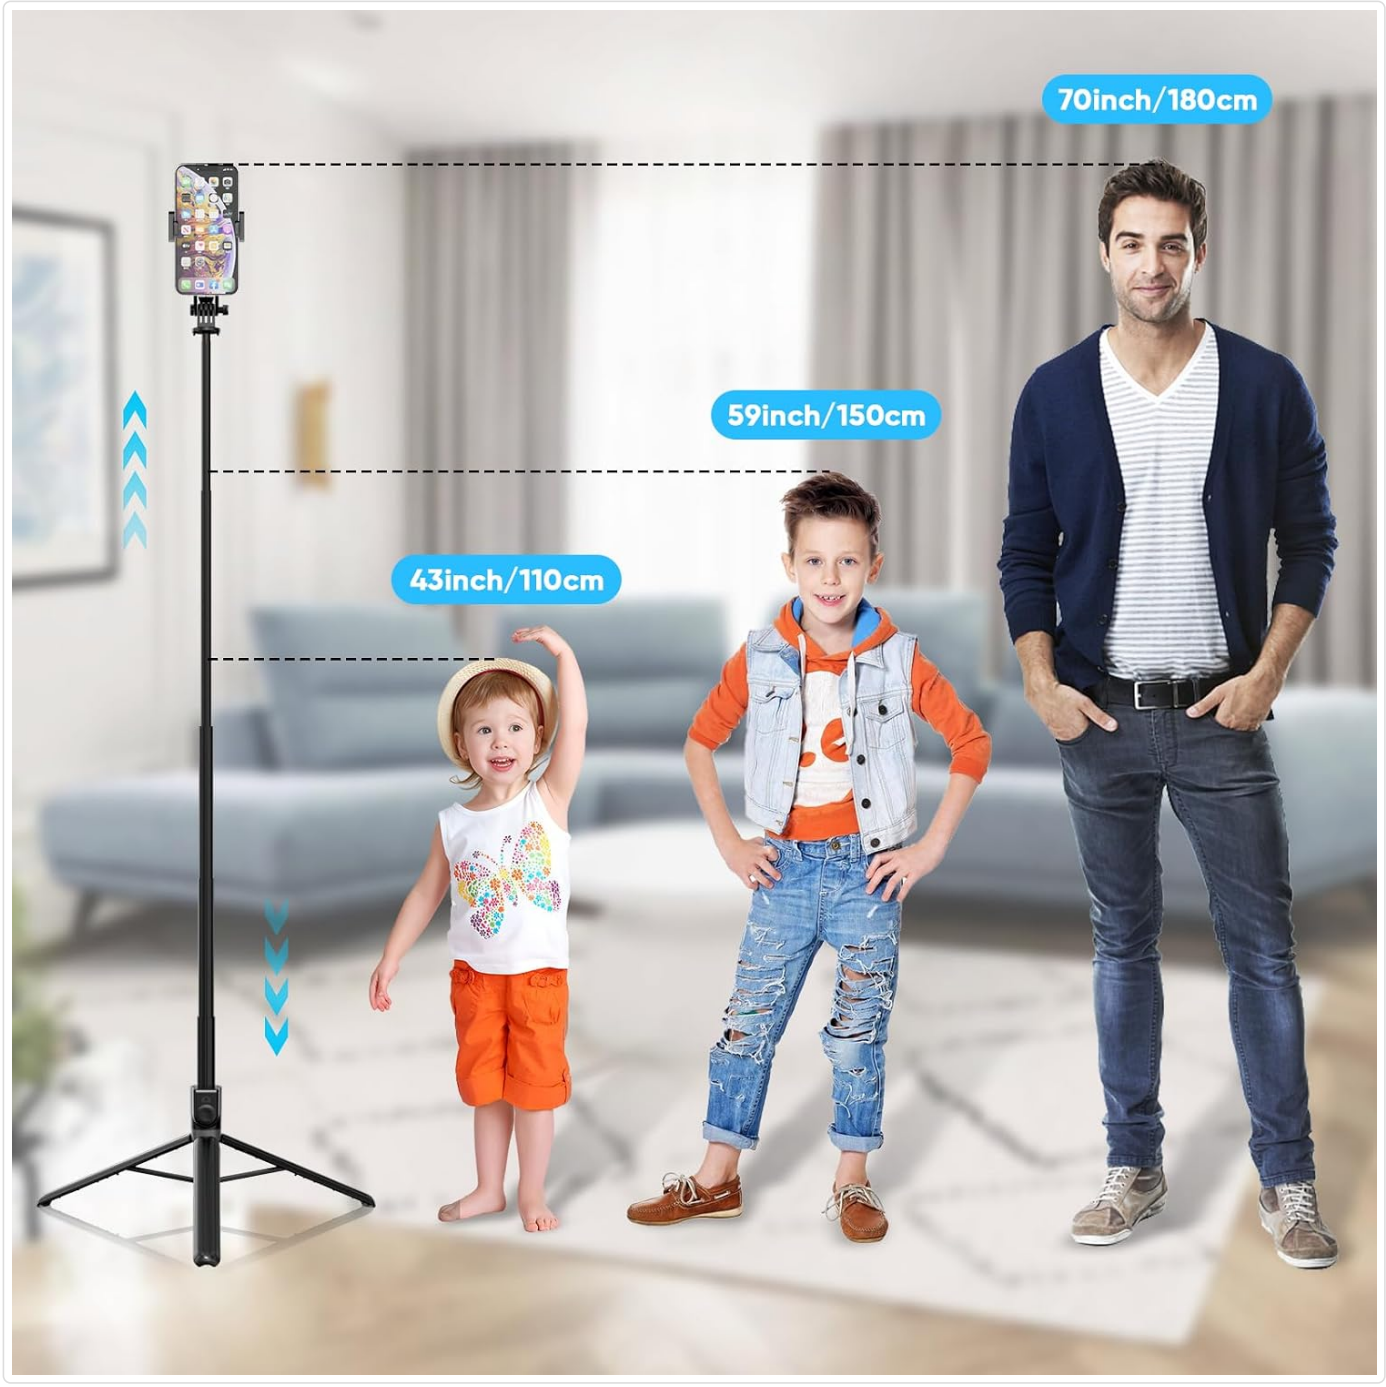


Figure 2: The adjustable height feature of the quadripod, illustrating its range from 43 inches (110 cm) to 70 inches (180 cm) suitable for various user heights and shooting perspectives.

2. Attaching Your Device

- **For Smartphones:**
    a. Gently pull open the spring-loaded phone clamp.
    b. Carefully insert your smartphone into the clamp, ensuring it is centered and securely held by the soft rubber grips.
    c. The clamp accommodates phones with a width between 6.5 cm and 10 cm.
- **For Cameras (GoPro, Digital Cameras, Webcams):**
    a. Remove the phone clamp if it is attached (it may be integrated or detachable depending on the model).
    b. Locate the 1/4 inch screw mount on the ball head.
    c. Align your camera's tripod mount with the screw and rotate your camera clockwise until it is securely fastened.



Figure 3: The versatility of the device, allowing 360° rotation for various angles and compatibility with smartphones, digital cameras, and GoPro devices.

3. Pairing the Wireless Remote Control

1. Locate the wireless remote control, typically stored in a groove on the handle. Slide it out to detach.

2. Turn on the remote control (usually by pressing and holding a button until an indicator light flashes).
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select the device named "AB Shutter3" or similar (refer to remote for specific name) to pair.
5. Once paired, the indicator light on the remote will stop flashing and remain solid or turn off.
6. The remote control has an operating range of up to 10 meters (33 feet).

Operating Instructions

1. Adjusting Height and Angle

- **Telescopic Rod:** Gently pull or push the telescopic sections to adjust the height. Ensure each section is fully extended or retracted for stability. The height can be adjusted from 13.11 inches (33.3 cm) to 70.86 inches (180 cm).
- **Ball Head Rotation:** Loosen the knob on the ball head to adjust the angle of your device. Tighten the knob to secure the desired angle. The ball head allows for 360° horizontal rotation.
- **Bracket Arm Flip:** The bracket arm holding the phone clamp can flip 270° to switch between horizontal (landscape) and vertical (portrait) screen orientations.

2. Using as a Selfie Stick

- Ensure the tripod legs are fully folded and secured within the handle.
- Extend the telescopic rod to your desired length.
- Hold the handle firmly and position your device for the shot.
- Use the detached wireless remote control to capture photos or start/stop video recording.

3. Using as a Tripod

- Fully extend and spread the tripod legs to create a stable base.
- Place the quadripod on a flat, stable surface.
- Adjust the telescopic rod to the desired height.
- Use the wireless remote control to capture photos or videos from a distance.



Figure 4: Examples of the quadripod's use in diverse settings, including indoor meetings, outdoor adventures, and social gatherings, demonstrating its adaptability.

Maintenance

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Fold the quadripod completely and store the remote control in its designated slot. Keep in a cool, dry place away from direct sunlight.
- **Battery:** The remote control uses a replaceable button cell battery. Replace when the remote's range or responsiveness decreases.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Remote control not pairing.	Remote is off, battery is low, or not in pairing mode.	Ensure remote is on and in pairing mode. Check/replace battery. Restart phone's Bluetooth.
Quadripod is unstable.	Legs not fully spread, surface is uneven, or overloaded.	Ensure legs are fully extended and locked. Use on a flat, stable surface. Do not exceed weight capacity.
Telescopic rod not extending/retracting smoothly.	Dust/debris in sections, or sections are jammed.	Clean sections with a soft, dry cloth. Do not force.
Phone clamp not holding device securely.	Device is outside compatible width range, or clamp is damaged.	Ensure device width is between 6.5 cm and 10 cm. Inspect clamp for damage.

Specifications

Feature	Detail
Model Number	Z17-FUTI
Material	Aluminum Alloy
Folded Length	13 inches (33.3 cm)
Minimum Height (Tripod)	13.11 inches (33.3 cm)
Maximum Height	70.86 inches (180 cm)
Number of Leg Sections	6
Item Weight	0.86 pounds (320 grams / 9.6 ounces)
Phone Clamp Width	6.5 cm to 10 cm (2.56 to 3.94 inches)
Compatibility	Smartphones (iPhone, Samsung, Huawei, etc.), Digital Cameras, Action Cameras (GoPro), Webcams (via 1/4 inch screw mount)
Remote Control Range	Up to 10 meters (33 feet)

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Rupital website. Keep your purchase receipt as proof of purchase.

© 2025 Rupital. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question