HOTO Air Pump Pocket

HOTO Mini Bike Tire Pump Instruction Manual

Model: Air Pump Pocket

Introduction

Thank you for choosing the HOTO Mini Bike Tire Pump. This compact and powerful electric air pump is designed to provide convenient and accurate inflation for a variety of items, from bicycle tires to sports balls. Its intelligent features and portable design make it an essential tool for cyclists and outdoor enthusiasts.

Key features include a 150 PSI maximum pressure, rapid inflation capabilities, a 2000 mAh high-capacity lithium battery, automatic shut-off for precise inflation, and a user-friendly flick-to-start design with memory functions.

What's in the Box

Please ensure all components are present before first use:

- 1 x HOTO Air Pump Pocket
- 1 x American Air Valve
- 1 x Presta Valve Adapter
- 1 x Needle Valves Adapter
- 1 x Quick-connection Valve Adapter
- 1 x Type-C Cable
- 1 x Soft Rubber Band



Image: The HOTO Mini Bike Tire Pump shown with all its included accessories, such as various valve adapters and charging cable.

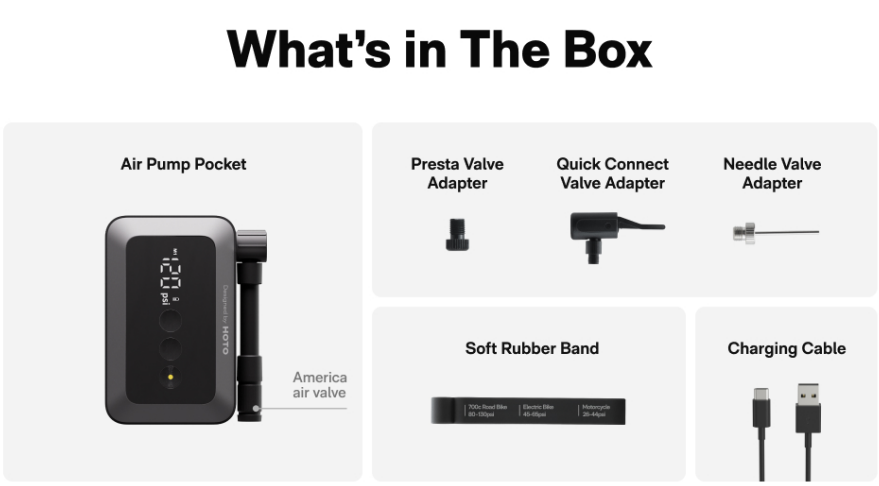


Image: A visual breakdown of the contents of the HOTO Air Pump Pocket box, including the pump, adapters, cable, and rubber band.

Setup and Operating Instructions

1. Powering On (Flick-to-Start)

The HOTO Mini Bike Tire Pump features an intuitive flick-to-start design. Simply pull out the high-pressure air hose from its storage slot to power on the device. The digital display will illuminate.



Image: A hand demonstrating the 'flick-to-start' action by pulling out the air hose, which powers on the pump.



Image: A visual guide illustrating how to turn on the HOTO pump by flicking out the hose, with angles indicating its rotatable design.

2. Connecting the Air Nozzle

The pump supports both Schrader and Presta valves. The hose features a Schrader valve connection by default. For Presta valves, use the included Presta valve adapter.

- **For Schrader Valves:** Directly connect the quick-connect air nozzle to the Schrader air nozzle on your tire.
- **For Presta Valves:** First, screw the Presta valve adapter onto the Presta valve on your tire. Then, connect the quick-connect air nozzle to the adapter.

How to Use Presta Air Nozzle

First Please connect the Presta air nozzle adapter to the tire air nozzle!



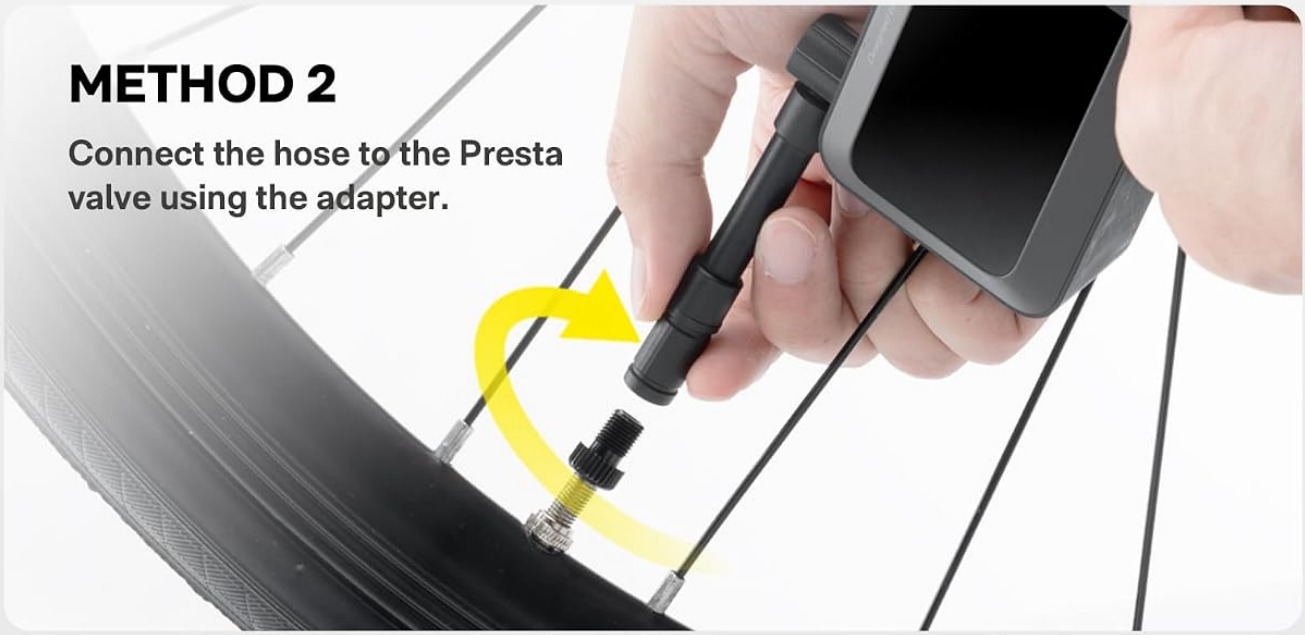


Image: A step-by-step visual guide on how to connect the Presta air nozzle adapter to the tire and then attach the pump's hose.



Image: The HOTO pump with its quick-release Schrader adapter, highlighting the ease of connection.

3. Adjusting Pressure and Starting Inflation

Use the '+' and '-' buttons on the display to set your desired PSI. The pump features a memory function that remembers your last two pressure settings (M1 and M2). Long press the mode button (yellow dot) to switch between M1 and M2 presets.

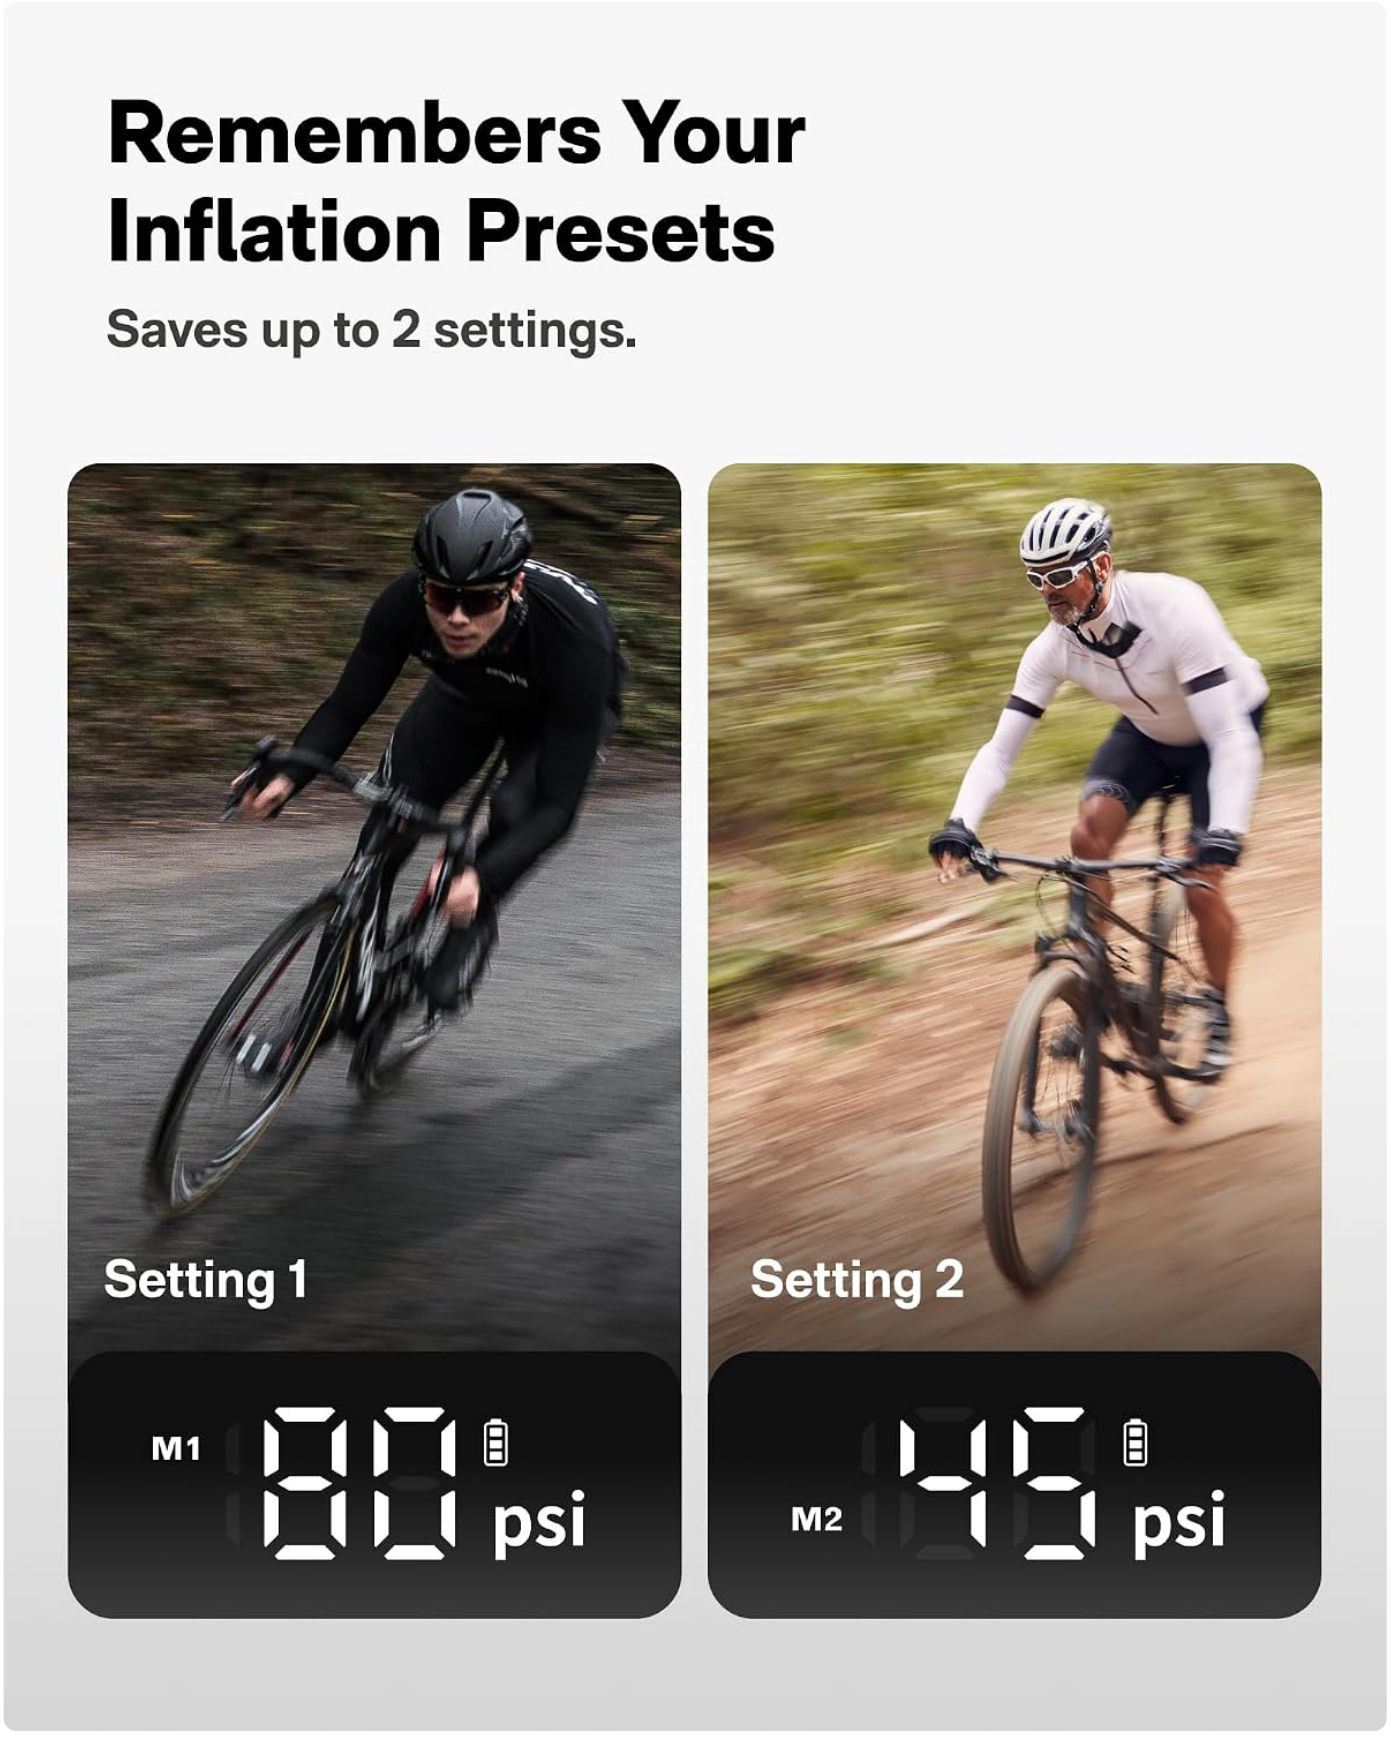


Image: The HOTO pump's digital display showing two memory settings (M1 and M2) for different PSI values, allowing quick selection.

Once connected and the desired pressure is set, press the Start/Mode button (yellow dot) to begin inflation. The pump will automatically stop once the target pressure is reached.



Image: A hand pressing the start button on the HOTO pump, indicating the beginning of the inflation process.



Image: The HOTO pump attached to a bike tire, showing its automatic shut-off feature once the preset PSI is reached.

4. Versatile Use

The HOTO Mini Bike Tire Pump is suitable for various inflation needs:

- **Bicycles:** Road bikes, mountain bikes, city bikes, e-bikes.
- **Motorcycles:** For quick top-ups on the go.
- **Sports Balls:** Footballs, basketballs, volleyballs, etc. (using the needle adapter).



Image: The HOTO pump being used to inflate tires on different types of bicycles, including road, mountain, city, and e-bikes.

Flick Design

Our design is intuitive, making the setup of the tire pump a breeze.



Image: A person kneeling to inflate a motorcycle tire using the HOTO pump, demonstrating its use for motorcycle excursions.

Fit in Pocket

The pump is small enough to fit in your pocket, making it an ideal companion for road trips.



Image: The HOTO pump inflating a basketball, with a soccer ball nearby, illustrating its capability for sports balls.

Performance

The HOTO Mini Bike Tire Pump offers impressive inflation speed and battery life:

- Inflates a 700 x 23C road bike tire from 80-100 PSI in just 25 seconds.
- Inflates a flat 700 x 23C road bike tire (0-80 PSI) in about 60 seconds.
- Built-in 2000 mAh high-capacity lithium battery can inflate eight flat tires or eighteen low-pressure tires after a full charge.



Image: The HOTO pump rapidly inflating a bike tire, highlighting its 25-second inflation time for 60-80 PSI.

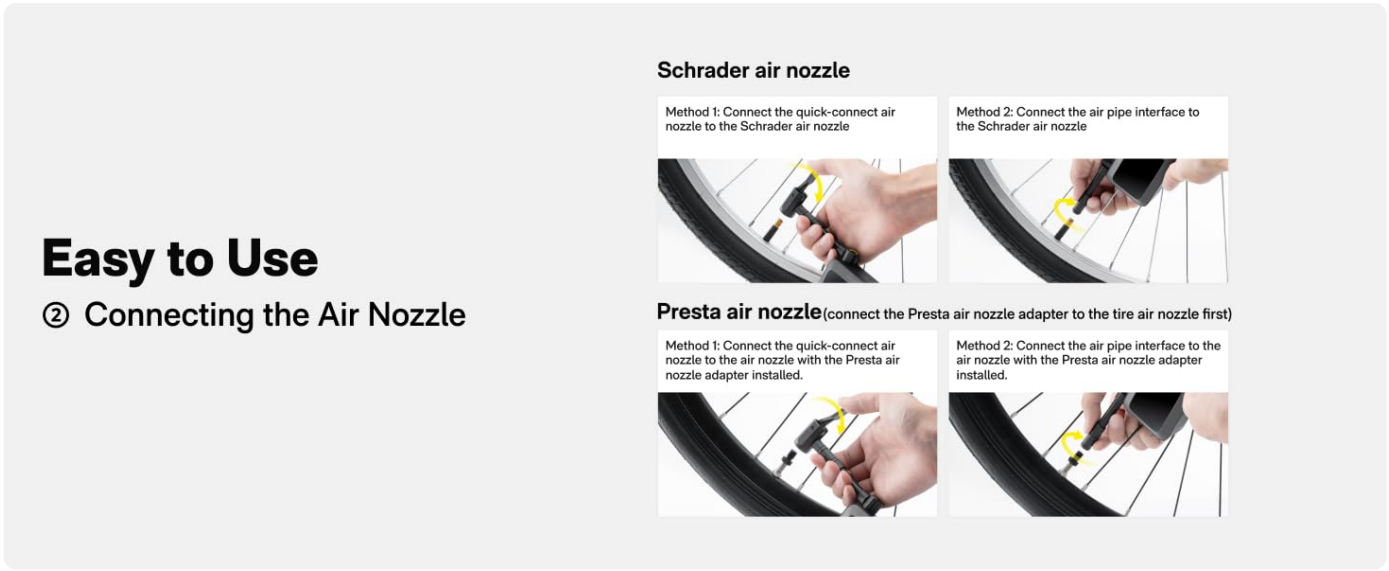


Image: A detailed table outlining the inflation performance of the HOTO pump for different tire types and pressure ranges.

Image: A visual representation of the HOTO pump's 2000 mAh battery capacity, indicating it can inflate 8 flat tires or 18 low-pressure tires.

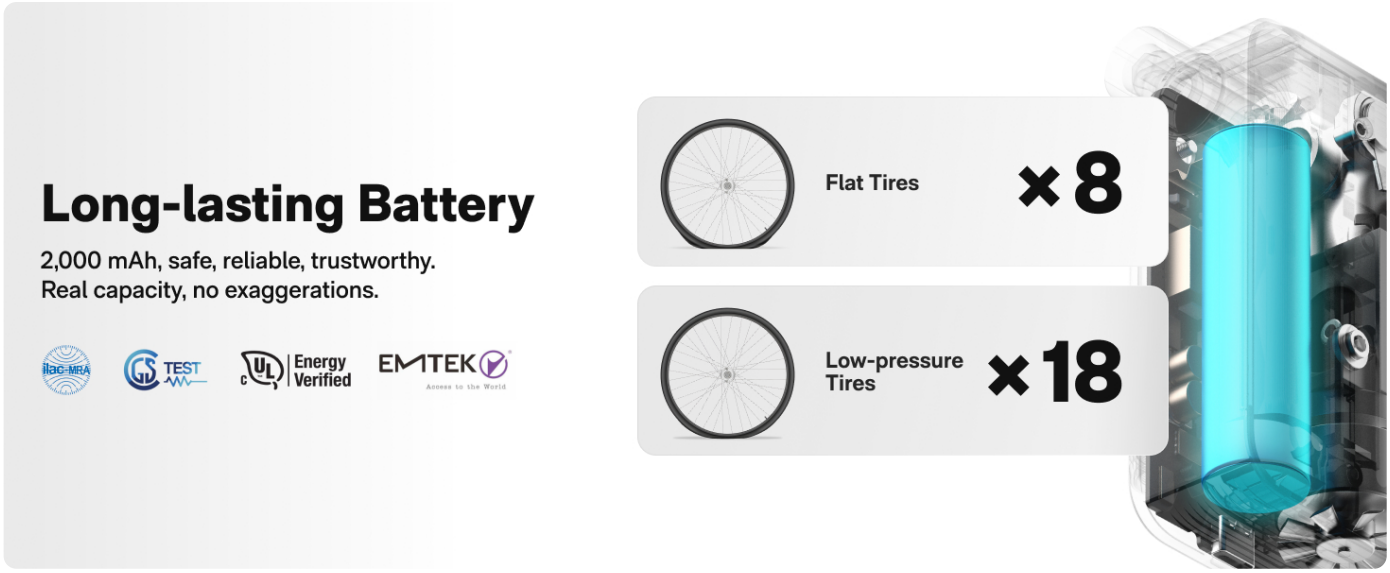


Image: An X-ray view of the HOTO pump highlighting its brushless motor, which contributes to lower noise, less heat, and higher efficiency.

Official Product Videos

Video: This official HOTO TOOLS US video demonstrates how to use the HOTO Pocket Air Pump, covering basic operations and features.

Video: An official HOTO TOOLS US video showcasing the ease of use of the HOTO Mini Bike Pump, highlighting its user-friendly design.

Maintenance

To ensure the longevity and optimal performance of your HOTO Mini Bike Tire Pump, follow these maintenance guidelines:

- **Cleaning:** Wipe the pump's exterior with a soft, dry cloth after each use to remove dust and debris. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the pump in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the air hose is properly folded and secured to prevent accidental power-on.
- **Charging:** Recharge the battery regularly, even if not in frequent use, to maintain battery health. Avoid completely draining the battery before recharging.
- **Adapter Care:** Keep all valve adapters clean and free from obstructions. Store them in a designated spot to prevent loss.

Troubleshooting

If you encounter issues with your HOTO Mini Bike Tire Pump, try the following:

- **Pump Not Turning On:** Ensure the air hose is fully extended from its storage slot. Check if the battery is charged;

connect to a power source using the Type-C cable.

- **Pump Not Inflating:** Verify that the air nozzle is securely connected to the tire valve. Ensure the target PSI is set above the current tire pressure. Check for any blockages in the air hose or adapters.
- **Inaccurate Pressure Reading:** Ensure the air nozzle is tightly sealed to the valve. If readings are consistently off, try resetting the device by powering it off and on.
- **Slow Inflation:** Check the battery level; low battery can affect performance. Ensure the air hose is not kinked or obstructed.

If problems persist after troubleshooting, please contact HOTO customer support for assistance.

Specifications

Specification	Value
Brand	HOTO
Model Name	Air Pump Pocket
Color	Black
Material	Plastic, Acrylonitrile Butadiene Styrene
Item Weight	8.96 ounces
Product Dimensions	2.28"L x 1.5"W x 3.66"H
Power Source	Battery Powered
Maximum Pressure	150 PSI (10.34 Bars)
Operation Mode	Automatic
Battery Capacity	2000 mAh

© 2025 HOTO. All rights reserved.
For support, please visit the official HOTO website or contact customer service.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question