Signature Design by Ashley 6930582

User Manual

Signature Design by Ashley Tip-Off Classic Wall Hugger Power Recliner

Model: Tip-Off Power Recliner (6930582)

1. Introduction

Thank you for choosing the Signature Design by Ashley Tip-Off Classic Wall Hugger Power Recliner. This recliner is designed for ultimate comfort and convenience, featuring an extra-deep seat, one-touch power controls for adjusting the recline and headrest, and integrated USB ports. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner.



Figure 1.1: The Signature Design by Ashley Tip-Off Classic Wall Hugger Power Recliner in Light Brown. This image shows the recliner in its upright position, highlighting its plush upholstery and overall design.

2. Important Safety Information

Please read and understand all safety instructions before assembling or operating this product. Failure to follow these instructions may result in injury or damage.

- **WARNING:** Always assemble the recliner according to the provided instructions.
- **WARNING:** Do not exceed the maximum weight capacity.
- **WARNING:** Be cautious when adjusting the reclining position to prevent falls or instability.
- Keep children and pets away from the moving parts of the recliner.
- Ensure the power cord is not pinched or damaged.
- Do not allow liquids to spill on the power controls or electrical components.

3. Assembly Instructions

The Signature Design by Ashley Tip-Off Power Recliner requires some assembly. Easy-to-follow instructions and all necessary hardware are included in the packaging. Additional tools (not included) may be necessary for certain steps.

General Assembly Steps:

1. Unpack all components and verify against the parts list provided in your assembly guide.
2. Attach the backrest to the base of the recliner. Ensure it clicks securely into place.
3. Connect any necessary electrical cables for the power recline and USB ports.
4. Place the recliner in its desired location, ensuring at least 5 inches of clearance from the wall for the wall-hugger mechanism.
5. Plug the power cord into a suitable electrical outlet.

Refer to the detailed assembly guide included with your product for specific step-by-step instructions and diagrams.

4. Operating Instructions

Your power recliner is designed for ease of use with intuitive controls.

Power Recline and Adjustable Headrest:

- Locate the one-touch power control panel on the side of the recliner.
- Use the buttons to smoothly adjust the reclining position to your preference. The recliner offers infinite reclining positions.
- The Easy View adjustable headrest can be independently positioned for optimal neck and head support.



Figure 4.1: Close-up view of the power control panel, showing buttons for recline adjustment and the integrated USB port.

USB Charging Ports:

- The recliner features a zero-draw USB port, located on the control panel, allowing you to charge your electronic devices conveniently.
- Connect your device's USB charging cable to the port.



Figure 4.2: The recliner shown in a partially reclined state, demonstrating the extended footrest and the comfort it provides.

5. Maintenance and Care

Proper care will extend the life and appearance of your recliner.

- **Cleaning:** Spot clean only. Use a clean, damp cloth and a mild soap solution for spills. Blot gently; do not rub. Test any cleaning solution on an inconspicuous area first.
- **Dusting:** Regularly dust the upholstery with a soft brush or vacuum with a brush attachment to prevent dirt buildup.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the upholstery.
- **Moving the Recliner:** When moving the recliner, lift it rather than dragging it to prevent damage to the legs and frame.
- **Electrical Components:** Periodically check the power cord and connections for any signs of wear or damage. Disconnect from power before cleaning or inspecting electrical parts.

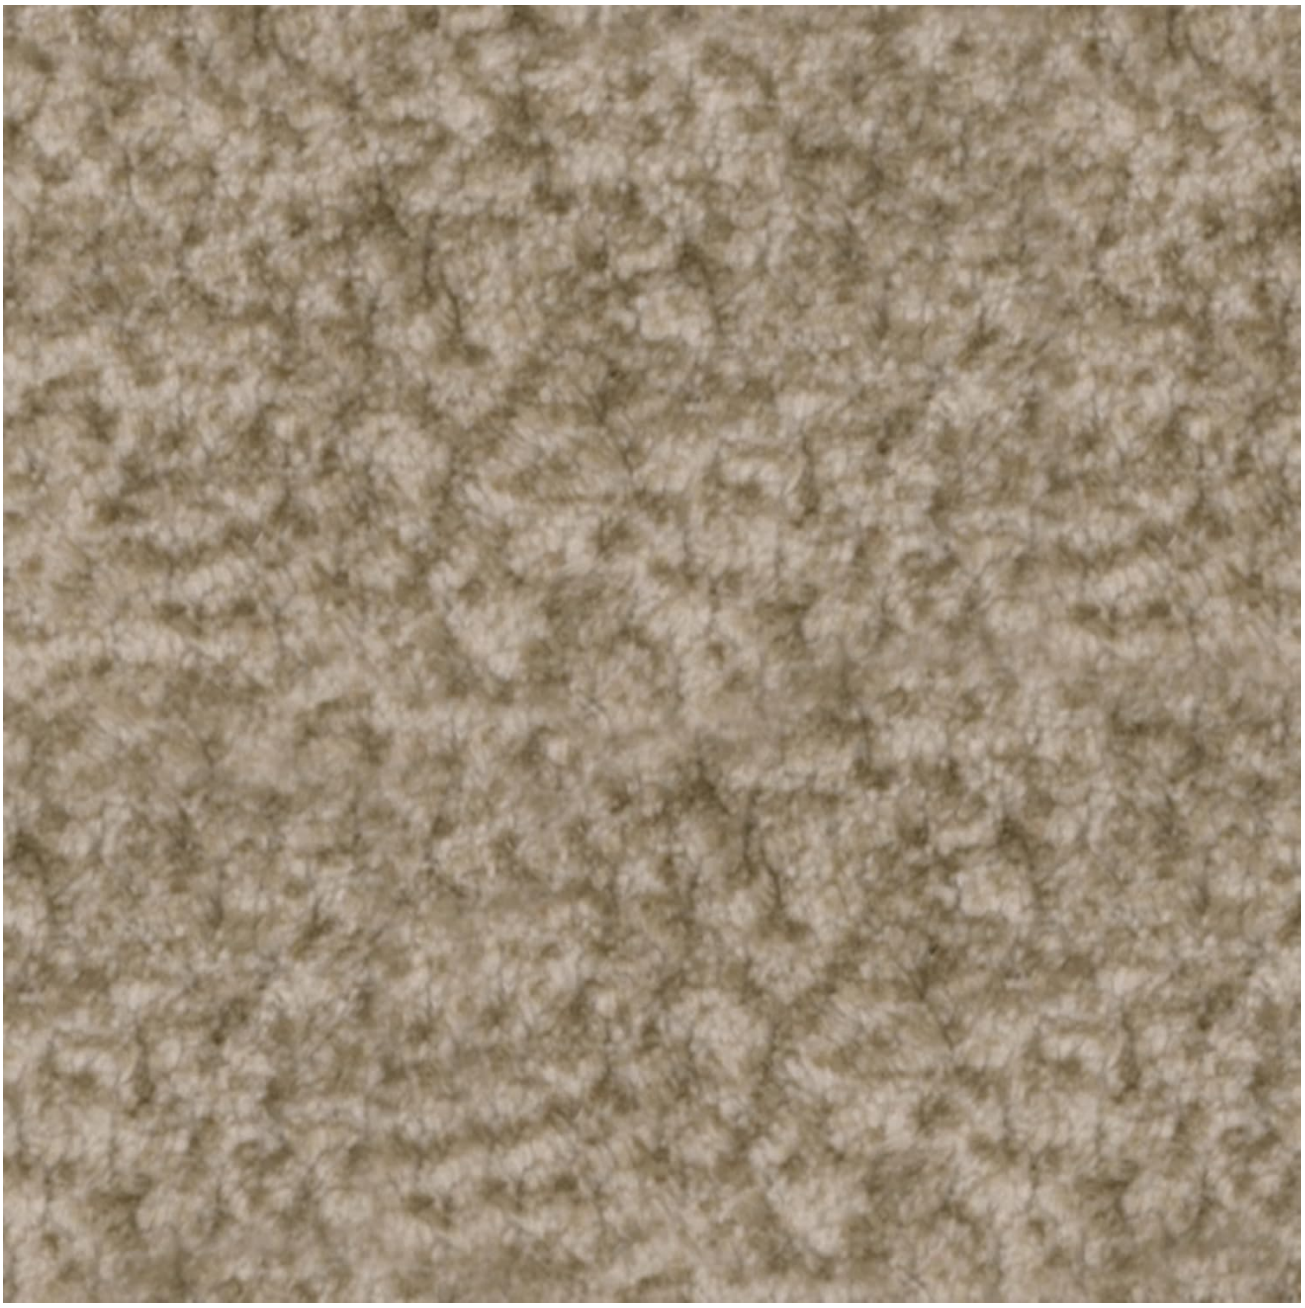


Figure 5.1: Detailed view of the light brown polyester upholstery, showing the texture and stitching.

6. Troubleshooting

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not operate.	Power cord unplugged or loose connection.	Ensure power cord is securely plugged into the wall outlet and the recliner. Check for tripped circuit breakers.
Recliner makes unusual noises.	Loose hardware or mechanism friction.	Check all bolts and screws and tighten if necessary. Apply a silicone-based lubricant to moving metal parts if squeaking persists.
USB port not charging.	Device cable issue or power supply problem.	Try a different USB cable or device. Ensure the recliner is powered on.

If the problem persists after attempting these solutions, please contact customer support.

7. Product Specifications

Feature	Detail
Brand	Signature Design by Ashley
Model Name	Tip-Off Power Recliner
Model Number	6930582
Color	Light Brown
Product Dimensions (D x W x H)	42"D x 52"W x 45"H
Fully Reclined Length	71"
Minimum Wall Clearance	5"
Item Weight	159 Pounds
Material Type	Engineered Wood, Polyester, Wood
Frame Material Type	Metal
Seat Material / Fill Material	Foam
Back Style	Solid Back
Arm Style	Pillow-Top
Reclining Position Count	Infinite Position
Additional Features	Reclining, Arm Rest, Foot Rest, USB Port
Recommended Uses	Office, Relaxing, Reading, Gaming
Room Type	Office, Game Recreation Room, Living Room, Study Room
Indoor/Outdoor Usage	Indoor
Product Care Instructions	Spot Clean
Manufacturer	Ashley Furniture Industries
UPC	024052880298

8. Warranty and Support

For warranty information, product support, or to purchase replacement parts, please contact Signature Design by Ashley customer service. Keep your purchase receipt and model number handy for faster service.

You can find more information and contact details by visiting the officialSignature Design by Ashley Store.

© 2025 Signature Design by Ashley. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question