WAMPAT W15F2191C-CAF

WAMPAT Floating TV Stand (Model W15F2191C-CAF) Instruction Manual

Model: W15F2191C-CAF | Brand: WAMPAT

Assembly	**Operation**	**Introduction Maintenance**	**Safety Information Troubleshooting**	**Setup & Specifications**	**Warranty & Support**

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your WAMPAT Floating TV Stand, Model W15F2191C-CAF. This modern floating TV shelf with storage cabinet is designed to accommodate TVs up to 80 inches and features a built-in charging station. Please read these instructions carefully before beginning assembly and retain them for future reference.

Figure 1: Assembled WAMPAT Floating TV Stand in Oak finish.

2. SAFETY INFORMATION

- Ensure the wall chosen for installation can safely support the combined weight of the TV stand and your television.
- **DO NOT INSTALL** this TV stand on cavity walls or gypsum board walls. It is designed for concrete, wooden, and brick walls only.
- Follow all assembly instructions precisely to prevent injury or damage to the product.
- Do not exceed the maximum load capacity of 81 lbs (36.7 kg).
- Keep small parts and packaging materials away from children to prevent choking hazards.
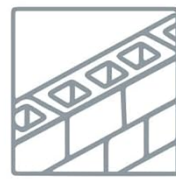- Periodically check all connections and fasteners to ensure they remain secure.

Concrete Wall ✓   Brick Wall ✓   Wooden Wall ✓   Hollow Wall ✗

Figure 2: Wall compatibility for installation. Ensure your wall type is suitable.

3. SETUP & ASSEMBLY

Assembly of the WAMPAT Floating TV Stand typically takes approximately 31 minutes with the provided tools and detailed instructions. Please ensure all parts are present before beginning. Refer to the assembly video below for a visual guide.

3.1 Assembly Video Guide

Your browser does not support the video tag.

Video 1: Official WAMPAT Floating TV Stand Assembly Guide. This video provides a step-by-step visual walkthrough of the entire assembly process for the TV stand.

3.2 Step-by-Step Assembly Overview

1. **Prepare Panels:** Insert dowels and cam locks into the main panels as indicated in the detailed instructions.
2. **Assemble Base Structure:** Attach the side and internal support panels to the main base panel using cam locks and screws.

3. **Install Mounting Brackets:** Secure the wall mounting brackets to the back of the assembled base structure.
4. **Integrate Power Strip:** Install the built-in power strip and cable management grommet into the designated openings on the top panel.
5. **Attach Top Panel:** Carefully align and attach the top panel to the assembled base structure, ensuring all dowels and cam locks engage correctly.
6. **Prepare Doors:** Attach hinges and handles to the cabinet doors.
7. **Install Doors:** Mount the prepared doors onto the cabinet structure, adjusting hinges as necessary for proper alignment.
8. **Wall Mounting:** With assistance, lift the assembled TV stand and securely mount it to your prepared wall using appropriate hardware (not included, as wall types vary). Ensure it is level and firmly attached.

Note: Always refer to the included paper instructions for specific part numbers and detailed diagrams during assembly.

4. OPERATION

4.1 Storage Cabinet Usage

The floating TV stand features multiple storage compartments, including cabinets with doors. These are ideal for storing media devices, remote controls, and other living room essentials, keeping your space tidy and organized.

Figure 3: Detail of a cabinet door knob.

4.2 Integrated Charging Station

A built-in power strip with 5 outlets is provided for convenient charging of your TV, DVD player, phone, and other electronic devices. Utilize the integrated wire management features to keep cords organized and prevent tangling.

Figure 4: Built-in power strip for convenient charging.

Figure 5: Cable management grommet for organized wiring.

5. MAINTENANCE

5.1 Cleaning Instructions

The engineered wood surface of your TV stand is designed for easy cleaning. Use a soft, damp cloth to wipe away dust and spills. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish. Dry immediately with a clean cloth.

Figure 6: Waterproof surface for easy cleaning.

5.2 General Care

- Avoid placing hot items directly on the surface; use coasters or protective pads.
- Keep the stand away from direct sunlight and extreme temperature changes to prevent warping or fading.
- Regularly check all screws and fasteners to ensure they are tight and secure.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand feels unstable after installation.	Improper wall type or insufficient anchoring. Fasteners not fully tightened.	Ensure installation is on a solid wall (concrete, brick, wood studs). Re-tighten all mounting screws. If unsure, consult a professional.
Parts do not align during assembly.	Incorrect orientation of parts or manufacturing defect.	Double-check part numbers and orientation against the instruction manual. If parts are defective or misaligned, contact customer support.
Cabinet doors do not close properly or are misaligned.	Hinges not adjusted correctly or installed improperly.	Adjust the door hinges using a screwdriver. Most hinges allow for minor adjustments in multiple directions. Refer to hinge adjustment guides if needed.
Missing or damaged parts.	Packaging error or shipping damage.	Do not proceed with assembly. Contact WAMPAT customer support immediately for replacement parts.

7. SPECIFICATIONS

Feature	Detail
Model Number	W15F2191C-CAF
Brand	WAMPAT
Material	Engineered Wood
Color	Oak
Assembled Length	71 inches (1800mm)

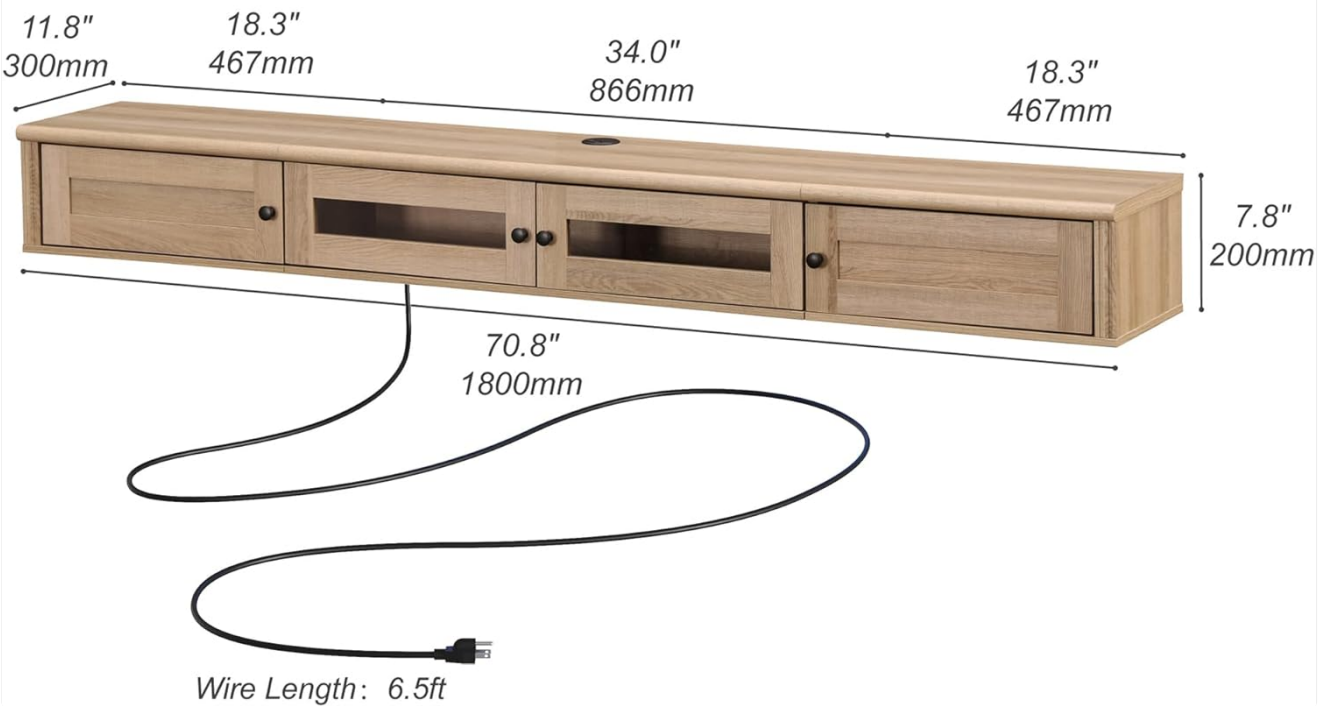| Feature	Detail
Assembled Width	11.8 inches (300mm)
Assembled Height	7.8 inches (200mm)
Item Weight	39.6 pounds (17.96 kg)
Maximum Load Capacity	81 lbs (36.7 kg)
Special Feature	Waterproof, Built-in Power Strip (5-outlets)
Wall Compatibility	Concrete wall, Wooden wall, Brick walls (*Not for cavity wall or gypsum board wall*)

Figure 7: Product dimensions and wire length.

8. WARRANTY & SUPPORT

8.1 Product Warranty

Specific warranty details for the WAMPAT Floating TV Stand (Model W15F2191C-CAF) are provided by the manufacturer or seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for comprehensive warranty information.

Optional protection plans may be available for purchase separately. These plans offer extended coverage beyond

the standard manufacturer's warranty. Consult your retailer for details on available protection plans.

8.2 Customer Support

For any questions, missing parts, or assistance with assembly or operation, please contact WAMPAT customer support. Refer to your product packaging or the seller's information for the most current contact details.
You can also visit the official WAMPAT store on Amazon for more product information and support:**[WAMPAT Store](#)**