Aquasonic FLOS ICON

AquaSonic Icon Water Flosser User Manual

Model: FLOS ICON

Introduction

Thank you for choosing the AquaSonic Icon Water Flosser. This cordless, rechargeable oral irrigator is designed to provide superior and gentle oral care, cleaning teeth more effectively than traditional string floss. Its advanced technology and customizable flossing modes contribute to a fresher, healthier smile. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device.

Important Safety Information

Please read all safety instructions before using the device.

- Do not use if you have a heart condition, are pregnant, or have any other medical condition that may be affected by water pressure. Consult your healthcare professional if unsure.
- Keep out of reach of children.
- Do not submerge the entire device in water. The device is waterproof for normal use but should not be fully immersed.
- Charge only with the provided charging cord. Using unauthorized chargers may damage the device or pose a safety risk.
- Do not use the device while it is charging.
- Always unplug the charger after use and before cleaning.

Product Overview

Familiarize yourself with the components of your AquaSonic Icon Water Flosser.



Figure 1: AquaSonic Icon Water Flosser with its packaging and USB charging cable. This image displays the blush-colored device, a single jet tip, and the included charging cord, highlighting the product's sleek design and readiness for use.



Figure 2: Internal view of the AquaSonic Icon Water Flosser, illustrating its modern design and technology. This image highlights the powerful rechargeable battery, 360° rotating tip, textured non-slip grip, and leak-proof, easy-to-fill water tank, showcasing the device's advanced features.



Figure 3: AquaSonic Icon Water Flosser demonstrating its easy-to-use features. This image shows the simple two-button operation, the accessible charging port, and the removable tank designed for easy cleaning and quick filling, emphasizing user convenience.

Key Components:

- **Water Tank:** Detachable and easy to fill.
- **Jet Tip:** Rotatable 360 degrees for comprehensive cleaning.
- **Power Button:** Turns the device on/off.
- **Mode Button:** Cycles through flossing modes.
- **Mode Indicators:** LEDs for Normal, Soft, and Pulse modes.
- **Charging Port:** Located at the bottom of the device.

Setup and First Use

1. Charging the Device:

Before first use, fully charge your AquaSonic Icon Water Flosser. A full charge typically takes approximately 4 hours and provides over 90 days of flossing on a single charge.

1. Connect the provided USB charging cable to the charging port at the bottom of the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
3. The battery indicator lights will illuminate during charging and turn off when fully charged.

2. Attaching the Jet Tip:

- Insert the jet tip into the opening at the top of the flosser handle until it clicks into place.
- To remove, press the tip release button (usually on the back of the device) and pull the tip out.

3. Filling the Water Tank:

- Open the water tank door located on the side of the device.
- Fill the tank with lukewarm water. You may also use mouthwash, but ensure it is non-alcoholic and diluted with water (50/50 ratio) to prevent residue buildup.
- Close the water tank door securely to prevent leaks.

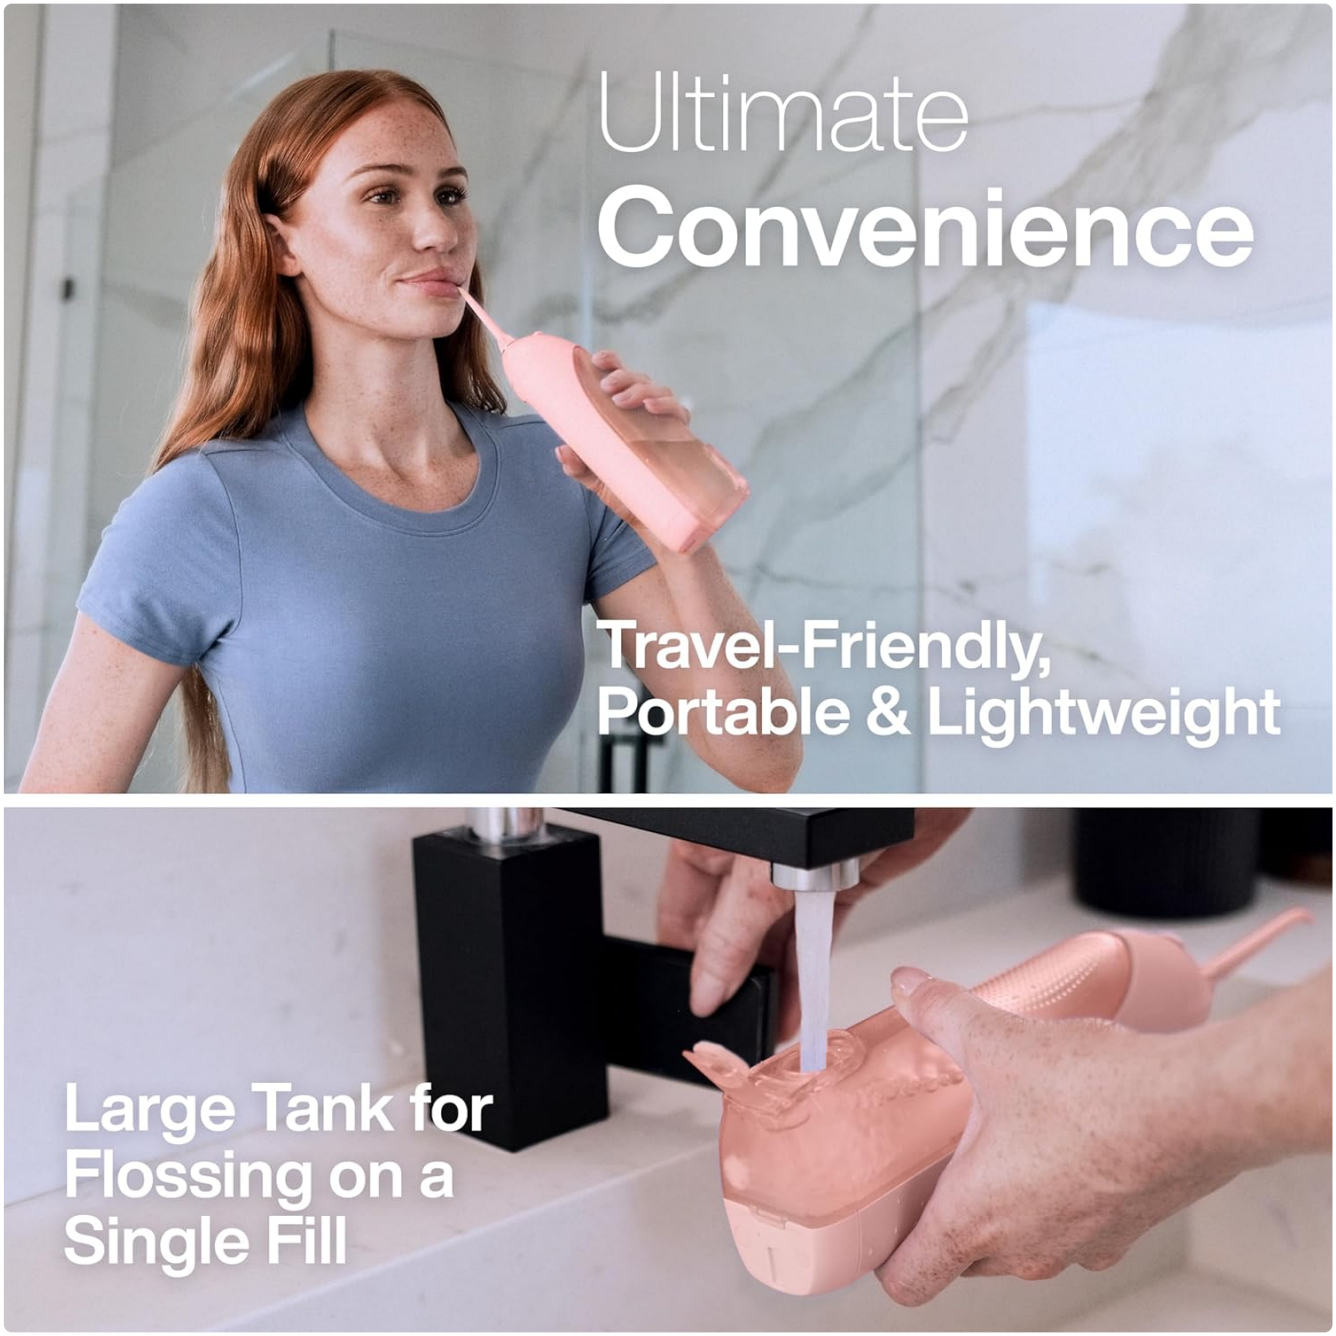


Figure 4: Demonstrating the ultimate convenience of the AquaSonic Icon Water Flosser. This image shows a user holding the portable device for flossing and the easy process of filling the large water tank under a faucet, highlighting its travel-friendly and lightweight design.

Operating Instructions

Choosing a Flossing Mode:

The AquaSonic Icon Water Flosser features 3 custom flossing modes to suit your needs:

- **Normal:** Standard cleaning mode for daily use and effective plaque removal.
- **Soft:** Gentle mode for sensitive teeth and gums, or for first-time users.
- **Pulse:** Massages gums and enhances circulation, ideal for gum health.

Press the Mode button repeatedly to cycle through the modes. The corresponding indicator light will illuminate.

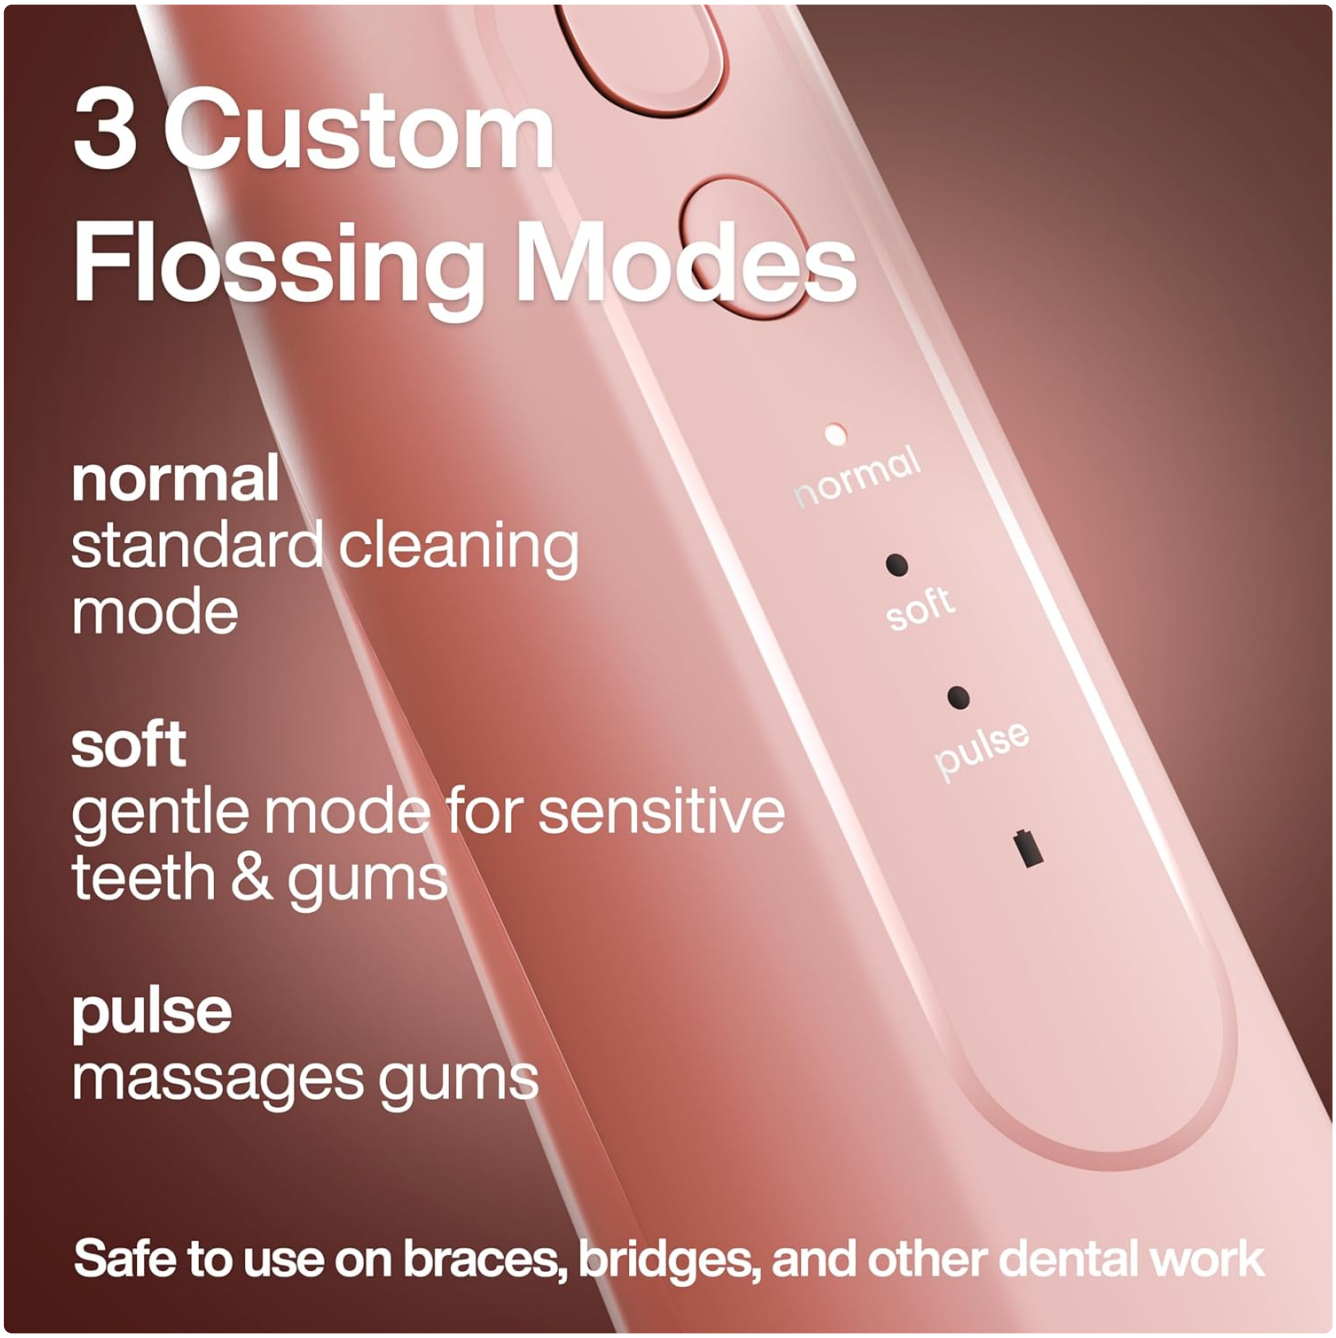


Figure 5: Close-up of the AquaSonic Icon Water Flosser highlighting its three custom flossing modes: Normal for standard cleaning, Soft for sensitive teeth and gums, and Pulse for gum massage. This image also notes its safety for use on braces, bridges, and other dental work.

How to Floss:

1. Lean over a sink and place the jet tip into your mouth, aiming it at your gumline at a 90-degree angle.
2. Press the Power button to turn on the device.
3. Start with your back teeth and work your way forward, pausing briefly between teeth. Allow the water to flow into the sink.
4. Move the tip along the gumline and between teeth, ensuring you clean both the front and back surfaces of your teeth.
5. Use the 360-degree rotating tip to reach all areas of your mouth, including the back of your molars.
6. Continue until you have cleaned all areas of your mouth or the water tank is empty.
7. Press the Power button again to turn off the device.



Figure 6: A woman demonstrating the use of the AquaSonic Icon Water Flosser for an ultimate deep clean. The image illustrates how the device cleans faster and better than string floss, with an ultra-fine jet stream reaching hard-to-reach areas, improving gum health and freshening breath.

Maintenance

Cleaning the Device:

- After each use, empty any remaining water from the tank.
- Rinse the water tank thoroughly with clean water.
- Wipe the exterior of the device with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- For a deeper clean, the water tank can be detached and washed with mild soap and water. Ensure it is completely dry before reattaching.

Jet Tip Care:

- Rinse the jet tip under running water after each use.
- It is recommended to replace your jet tip every 3-6 months, or sooner if it becomes worn or damaged, to ensure optimal performance and hygiene.

Storage:

Store the AquaSonic Icon Water Flosser in a cool, dry place away from direct sunlight when not in use. Ensure the water tank is empty before storing for extended periods.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully.
No water flow or weak water pressure.	Water tank is empty or not properly seated. Jet tip is clogged.	Refill the water tank and ensure it is securely attached. Remove and rinse the jet tip. If still clogged, replace the tip.
Device leaks.	Water tank door not closed properly. Jet tip not fully inserted.	Ensure the water tank door is securely latched. Push the jet tip firmly until it clicks into place.
Battery life seems short.	Not fully charged. Old battery.	Ensure the device is charged for the recommended time. Contact customer support if battery performance significantly degrades over time.

Specifications

Model Number	FLOS ICON
Power Source	Rechargeable Lithium-Ion Battery
Battery Type	1 AA batteries required (included) - *Note: This likely refers to the internal battery type, not user-replaceable AA batteries.*
Flossing Modes	Normal, Soft, Pulse
Special Feature	360° Rotatable Tip
Product Benefits	Removes Plaque, Improves Gum Health, Freshens Breath
Unit Count	1.0 Count
Dimensions (Approx.)	9.92 x 5.12 x 3.5 inches
Weight (Approx.)	1.06 Pounds

Warranty and Support

AquaSonic products are manufactured with high-quality standards. For warranty information, product support, or to purchase replacement parts and accessories, please visit the official AquaSonic website or contact their customer service directly.

Manufacturer: Aquasonic

For further assistance, please refer to the contact information provided with your product packaging or visit the Aquasonic brand store online.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2024 Aquasonic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can I buy a replacement tank door for my AquaSonic Icon Water Flosser? The door broke off and I would like to replace it for my pink and blue units.

To obtain a replacement water tank door for your AquaSonic Icon Water Flosser, you should contact the manufacturer directly, as individual tank doors are typically not sold as standalone items in general retail stores.According...

Read full answer