Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit RM-C3016

ZdalaMit RM-C3016 Replacement Remote Control User Manual

1. Introduction

This manual provides instructions for the ZdalaMit RM-C3016 Replacement Remote Control. This remote is designed to function as a direct replacement for original JVC TV remote controls, offering seamless operation without the need for complex programming. Please read this manual thoroughly to ensure proper use and longevity of your remote control.

2. Setup

2.1 Battery Installation

The RM-C3016 remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming is required. Once batteries are installed, the remote is ready for immediate use with compatible JVC TV models.





Image 1: Front view of the RM-C3016 remote control, showing all buttons and their labels. This image illustrates the general layout

and design of the remote.

3. Operating Instructions

The RM-C3016 remote control provides standard functions for JVC televisions. Point the remote control directly at the TV's infrared sensor for optimal performance.

3.1 Basic Functions

- **Power Button ( )**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select TV channels.
- **Volume Up/Down (VOL +/-)**: Adjusts the sound volume.
- **Channel Up/Down (CH +/-)**: Changes the TV channel sequentially.
- **Mute ( )**: Mutes or unmutes the TV sound.

3.2 Menu and Navigation

- **MENU**: Accesses the TV's main menu.
- **Navigation Arrows (▲ ▼ ◀ ▶)**: Navigate through menu options.
- **ENTER**: Confirms a selection in the menu.
- **EXIT**: Exits the current menu or on-screen display.
- **DISPLAY**: Shows current channel information or other on-screen details.

3.3 Special Functions

- **SOURCE**: Selects input sources (e.g., HDMI, AV).
- **P.MODE (Picture Mode)**: Cycles through preset picture modes.
- **S.MODE (Sound Mode)**: Cycles through preset sound modes.
- **SLEEP**: Sets a sleep timer for the TV.
- **MTS (Multi-channel Television Sound)**: Selects audio tracks (e.g., Stereo, SAP).
- **AUTO**: Auto-adjusts picture settings or performs auto-scan.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **FAV, FAV+, FAV-**: Accesses and navigates favorite channels.
- **ZOOM**: Adjusts the screen zoom level.
- **Media Playback Controls (, , ,)**: Controls media playback if supported by the TV.



Image 2: A hand holding the RM-C3016 remote control, pointing it towards a television and soundbar setup in a living room environment. This illustrates the remote in typical use.

4. Compatibility

The ZdalaMit RM-C3016 Replacement Remote Control is compatible with the following JVC TV models:

- LT-32E350
- LT-40E560
- LT-50E350
- LT-50E560
- LE-3918RCJ
- LE-3218RCJ
- LE-50D2RCJ

This remote is designed to work with these models without any additional setup or code entry.

5. Maintenance

To ensure the optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

- **Storage**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts**: Protect the remote from physical shock, as this can damage internal circuitry.

6. Troubleshooting

If you encounter issues with your RM-C3016 remote control, refer to the following common troubleshooting steps:

- **Remote not responding**:
  - Ensure the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Certain buttons not working**:
  - This may indicate a specific button malfunction or a compatibility issue with that particular function on your TV model. Verify if the function works using the TV's physical buttons.
  - Clean the remote control, especially around the unresponsive buttons, to remove any debris.
- **TV not listed in compatibility**:
  - The remote is specifically designed for the listed JVC TV models. If your model is not listed, full functionality cannot be guaranteed.

7. Specifications



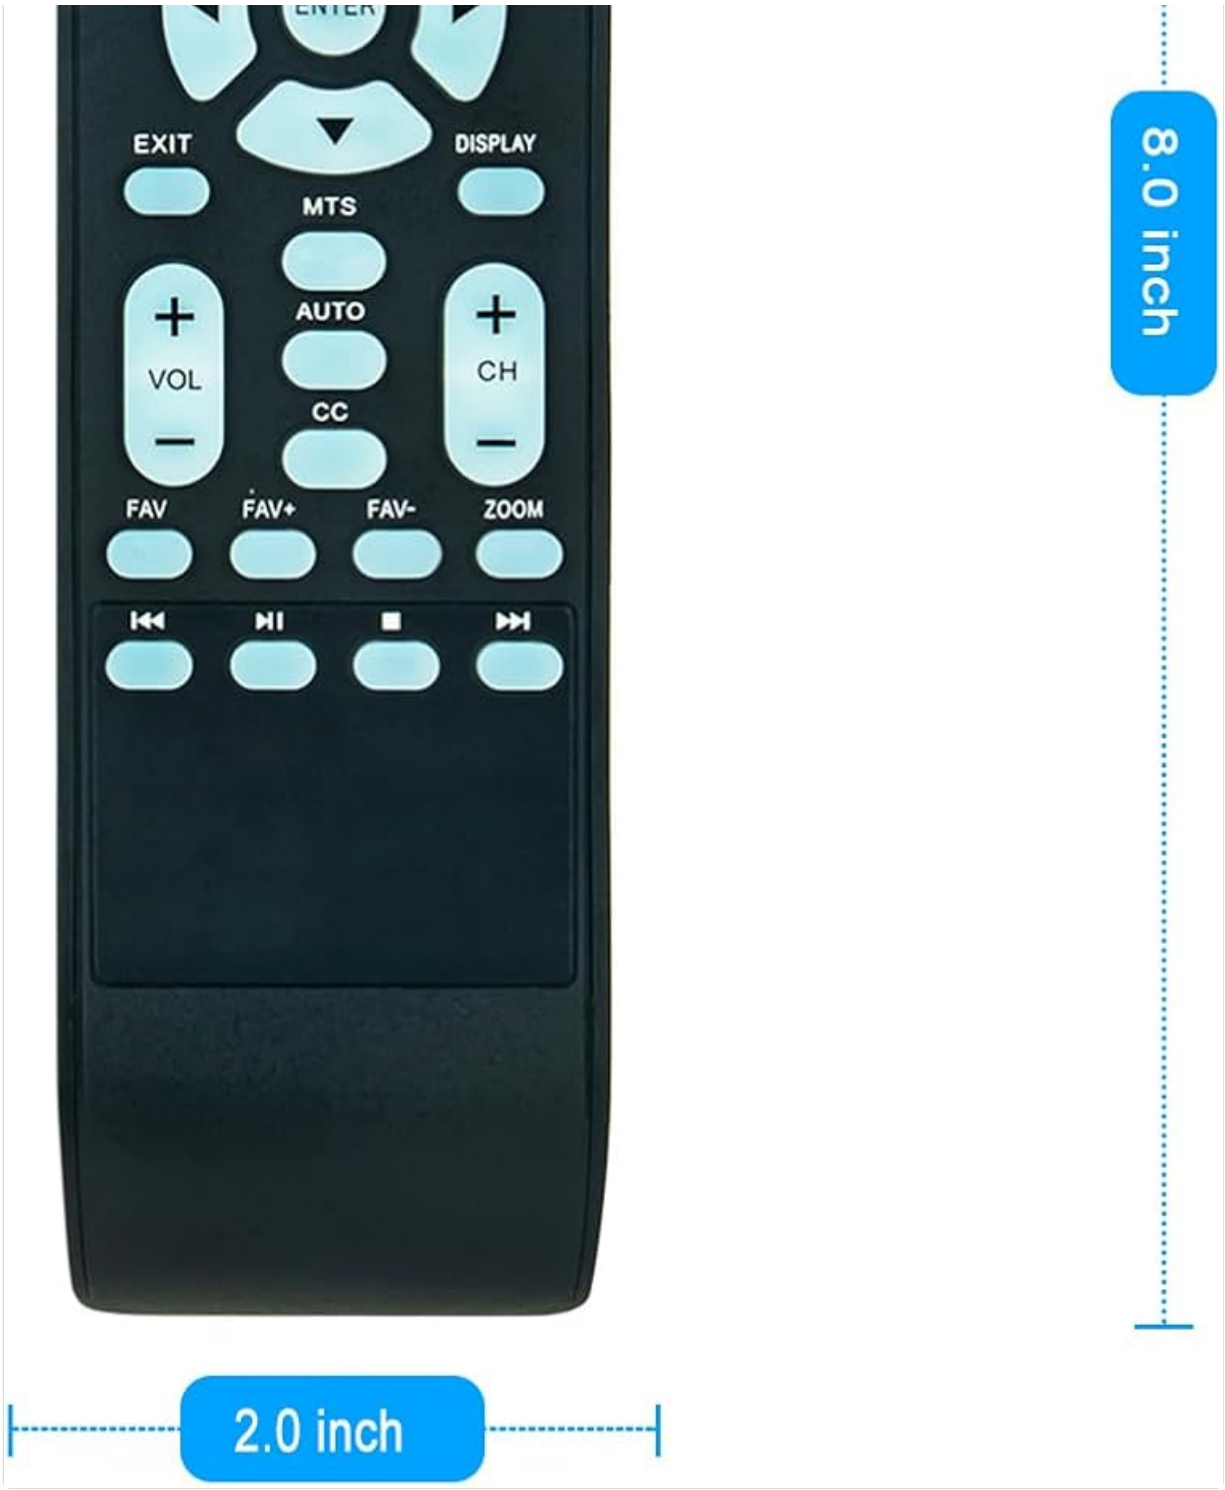


Image 3: The RM-C3016 remote control with overlaid measurements indicating a length of 8.0 inches and a width of 2.0 inches. This provides a visual reference for the remote's physical size.

Feature	Detail
Model	RM-C3016
Brand	ZdalaMit
Power Supply	2 x 1.5V AAA Alkaline Batteries (Not Included)
Product Dimensions	8.14 x 1.99 x 0.55 inches (approximately 20.68 x 5.05 x 1.4 cm)
Item Weight	1.41 ounces (approximately 40 grams)

Feature	Detail
Color	Black
Special Feature	Pre-Programmed (No setup codes required)
Compatible Devices	JVC Televisions (Specific models listed in Section 4)

8. Warranty and Support

Specific warranty information for the ZdalaMit RM-C3016 Replacement Remote Control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product's original purchase documentation or contact the seller directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question