TPSPAD TPS-W116-US

TPSPAD 11.6-inch 2-in-1 Windows 11 Tablet User Manual

Model: TPS-W116-US | Brand: TPSPAD

Introduction

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your TPSPAD 11.6-inch 2-in-1 Windows 11 Tablet. This versatile device combines the functionality of a laptop with the portability of a tablet, offering a seamless computing experience for various tasks.



Image: The TPSPAD 2-in-1 tablet with its detachable keyboard, showcasing the Windows 11 interface on its 11.6-inch display.

What's in the Box

Upon unboxing, please ensure all the following items are present:

- TPSPAD 11.6-inch 2-in-1 Tablet
- Detachable Keyboard
- Power Charger

Product Overview

Key Features

- **2-in-1 Design:** Seamlessly switch between laptop and tablet modes with the detachable keyboard.
- **Powerful Performance:** Equipped with an Intel Celeron processor, 6GB RAM, and 128GB EMMC storage for everyday tasks.
- **Vibrant Display:** 11.6-inch 1920x1080 IPS touchscreen for crisp and clear visuals.
- **Lightweight and Portable:** Designed for on-the-go use, weighing approximately 1.75 pounds.
- **Windows 11:** Pre-installed with the latest Windows operating system for a modern user experience.



Image: Icons representing the tablet's key specifications: Windows 11, Intel Celeron CPU, 6GB RAM, 128GB ROM, 11.6-inch 1920x1080 display, Bluetooth 4.0, and WiFi 5G.

Processor Details

The tablet is powered by an Intel Celeron processor, designed for efficient performance in daily computing tasks.



Image: A visual representation of the Intel Celeron processor chip with its technical specifications listed: 14 nm Process, 4 Cores 4 Threads, 2.70 GHz Pulse Frequency, and 4 MB Smart Cache.

Display and Storage

The 11.6-inch IPS display offers a 10-point multi-touch experience, providing responsive and intuitive interaction. With 6GB of RAM and 128GB of EMMC storage, the tablet provides ample space and speed for your applications and files.



Image: A diagram illustrating various 10-point touch screen gestures, demonstrating the tablet's multi-touch capabilities.



Image: The tablet's 11.6-inch HD touchscreen with 1920x1080 IPS resolution, showcasing vibrant colors with an image of parrots flying out of the screen.



Image: An illustration of the tablet's large storage capacity (6GB RAM + 128GB ROM) depicted by multiple application windows layered above the tablet screen.

Setup

Initial Power On

1. Connect the charger to the tablet and a power outlet.
2. Press and hold the power button located on the side of the tablet until the screen illuminates.
3. The tablet comes with Windows 11 pre-installed and may be set up with an initial administrative account. It is recommended to proceed with Windows updates immediately after the first boot to ensure system stability and security.
4. Follow any on-screen prompts to complete the initial setup, including connecting to a Wi-Fi network.

Attaching the Keyboard

The detachable keyboard connects magnetically to the tablet. Align the keyboard's connector with the tablet's port until it snaps into place securely.



Image: The TPSPAD tablet with its detachable keyboard fully attached, demonstrating its laptop configuration.

Operating Instructions

Using the 2-in-1 Modes

Your TPSPAD tablet offers three primary modes of operation:

- **Laptop Mode:** With the keyboard attached, use the tablet as a traditional laptop for typing and productivity.
- **Studio Mode:** Fold the keyboard back or detach it and use the tablet's integrated kickstand to prop it up at an angle, ideal for drawing or writing with a stylus (not included).
- **Tablet Mode:** Detach the keyboard completely for a lightweight, portable tablet experience, perfect for browsing, reading, or media consumption.



Image: The tablet configured in Laptop mode, with the keyboard attached and the screen upright.



Image: The tablet positioned in Studio mode, angled for comfortable drawing or writing with a stylus.



Image: The tablet in Tablet mode, held vertically, showcasing its portability without the keyboard.

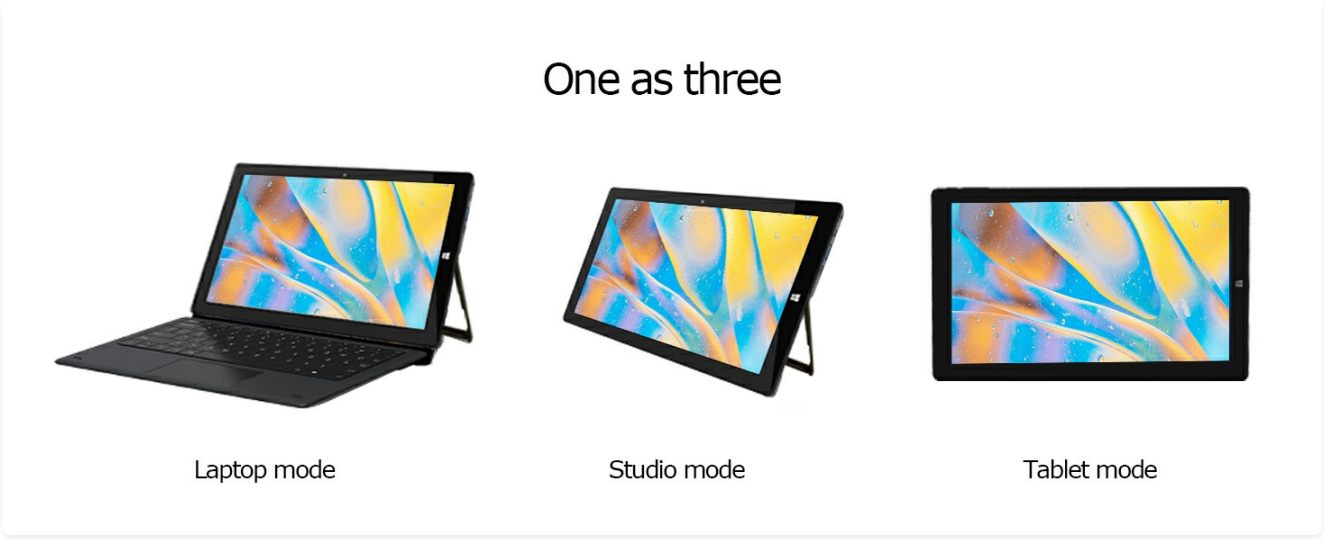


Image: A visual comparison of the three operational modes: Laptop mode with keyboard, Studio mode with angled screen, and Tablet mode without keyboard.

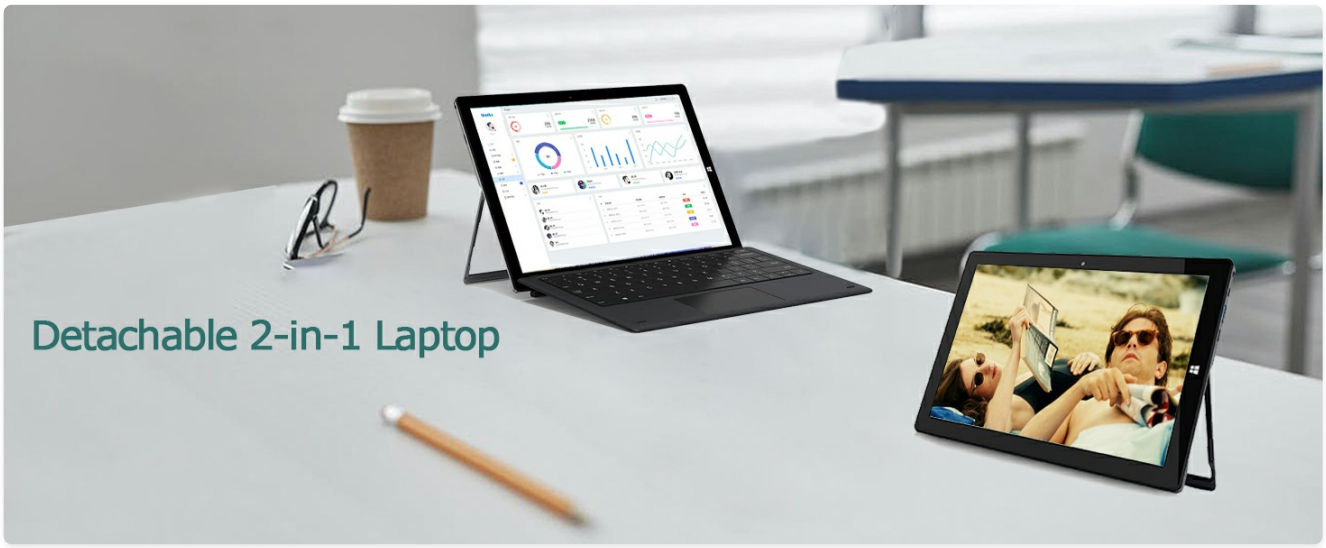


Image: A sequence of images demonstrating the tablet's multi-angle adjustment feature, allowing the screen to be tilted up to 145 degrees for optimal viewing.

Touchscreen Gestures

Windows 11 supports various touchscreen gestures for intuitive navigation. Common gestures include tapping to select, swiping to scroll, pinch-to-zoom, and multi-finger gestures for task switching or opening the Action Center.

Connectivity (Wi-Fi, Bluetooth, HDMI, USB)

- **Wi-Fi:** To connect to a wireless network, go to *Settings > Network & internet > Wi-Fi*, select your network, and enter the password. The tablet supports 2.4G/5G Wi-Fi.
- **Bluetooth:** Enable Bluetooth in *Settings > Bluetooth & devices* to pair with wireless headphones, mice, or other Bluetooth accessories.
- **HDMI:** Use the HDMI port to connect your tablet to an external monitor or TV for a larger display.
- **USB:** The USB ports allow connection of various peripherals such as USB drives, external keyboards, or mice.



Image: The tablet wirelessly connected to Bluetooth headphones and a Bluetooth mouse, demonstrating its versatile connectivity options.



Image: The tablet connected to an external television via an HDMI cable, displaying content on the larger screen.

Maintenance

Cleaning

To maintain your tablet's appearance and functionality:

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid harsh chemicals.
- Keep ports free of dust and debris.

Software Updates

Regularly check for and install Windows updates to ensure optimal performance, security, and access to the latest features. Go to *Settings > Windows Update* to check for updates.

Troubleshooting

Common Issues and Solutions

- **Tablet not powering on:** Ensure the charger is properly connected and the tablet has sufficient battery. Try holding the power button for 10-15 seconds.
- **Keyboard not responding:** Ensure the keyboard is securely attached to the tablet's magnetic connector. Detach and reattach it.
- **Wi-Fi connectivity issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
- **Slow performance:** Close unnecessary applications. Check for and install any pending Windows updates. Ensure sufficient free storage space.
- **Display not working (external display works):** If the internal display is not working but an external display connected via HDMI does, this may indicate a hardware issue. Contact customer support.
- **Windows setup concerns:** The tablet may arrive with Windows pre-setup. While this means it's 'ready to go', it's advisable to run a full system scan and ensure all Windows updates are applied for security.

For persistent issues, a system restore or reset may be necessary. Back up your data before performing a reset.

Specifications

Feature	Specification
Model Name	TPS-W116-US
Operating System	Windows 11
Screen Size	11.6 Inches
Screen Resolution	1920 x 1080 (IPS)
Processor	Intel Celeron (2800 MHz)
RAM	6 GB
Storage	128 GB EMMC
Wireless Type	802.11ac (2.4G/5G WiFi)
Bluetooth	Yes (Bluetooth 4.0)
Item Weight	3.45 pounds
Product Dimensions	11.6 x 0.35 x 6.9 inches
Batteries	1 Lithium Polymer battery (included)

Warranty and Support

Your TPSPAD tablet comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please visit the official TPSPAD store on Amazon or contact their customer service directly.

TPSPAD Store: https://www.amazon.com/stores/TPSPAD/page/50123DA2-26EE-462E-BE2A-994F7012C868