Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ONGTEED BL-769

ONGTEED Portable AM FM SW Radio User Manual

Model: BL-769

Introduction

This manual provides detailed instructions for the operation and maintenance of your ONGTEED Portable AM FM SW Radio, Model BL-769. Designed for superior sound and reliable reception, this radio offers versatile power options and user-friendly controls for an optimal listening experience.

What's in the Box

- AM FM SW Radio (1 unit)
- AC Cord (1 unit)
- Owner's Manual (This document)

Product Overview

The ONGTEED BL-769 radio features a robust design with intuitive controls. Key components include the main speaker, tuning dial, volume knob, band selector, and a retractable antenna for enhanced reception.



Figure 1: Front view of the ONGTEED Portable AM FM SW Radio, Model BL-769, showing the speaker grille, tuning dial, and band selector.

Setup

Powering the Radio

Your radio can be powered in two ways:

1. **AC Power:**

   Connect the included AC cord to the radio's AC input jack and then plug it into a standard 120V AC wall outlet. This method is suitable for indoor use.



Figure 2: Radio powered via AC wall plug, demonstrating the connection for indoor use.

2. **Battery Power:**

   For portable use, insert two (2) D-size batteries (not included) into the battery compartment located on the back of the radio. Ensure correct polarity (+/-) as indicated inside the compartment.



Figure 3: Rear view of the radio showing the battery compartment and the insertion of two D-size batteries.

Operation

Turning On/Off and Band Selection

Locate the power switch/band selector on the front panel. Slide the switch to select your desired band: FM, AM, or SW (Shortwave). The radio will power on automatically when a band is selected.



Figure 4: Close-up of the radio's control panel, highlighting the large dial, volume knob, and the one-click switching mechanism for AM, FM, and SW bands.

Tuning to a Station

Use the large **TUNE** knob to scan through frequencies. The frequency dial will indicate your current position. For optimal reception, extend the telescopic antenna fully, especially for FM and SW bands.



Figure 5: A user operating the radio with the long retractable antenna extended, illustrating its use for strong AM/FM/SW reception.

Adjusting Volume

Rotate the **VOLUME** knob to increase or decrease the sound output. The radio features a loud speaker for clear audio.

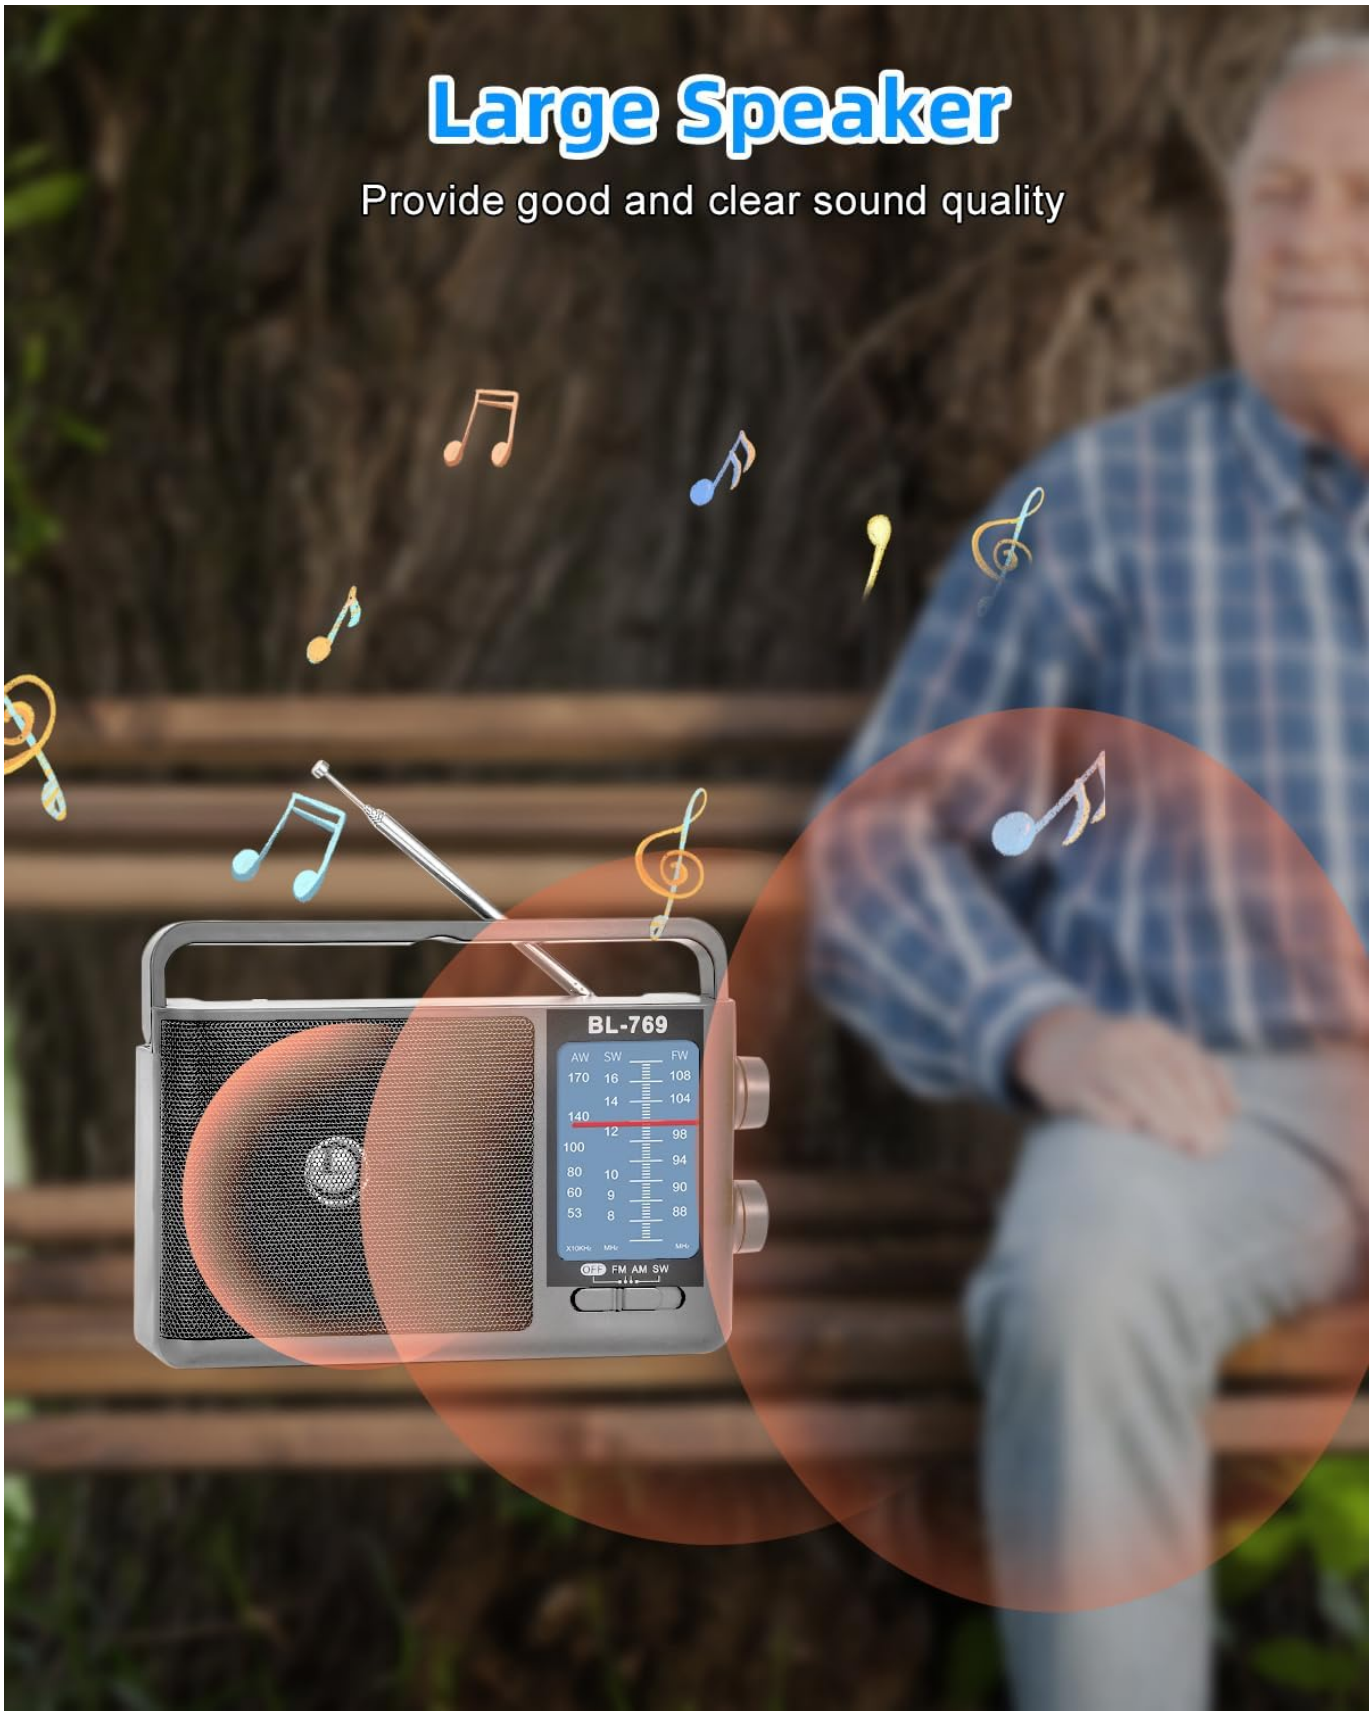


Figure 6: Illustration of the radio's large speaker, emphasizing its capability to provide good and clear sound quality.

Using Earphones

For private listening, plug any standard 3.5mm earphone into the earphone jack located on the side of the radio. The speaker will automatically mute when earphones are connected.



Figure 7: A user listening to the radio with headphones connected to the stereo earphone jack, demonstrating private listening capability.

Maintenance

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use liquid cleaners or abrasive chemicals.
- **Storage:** If storing for an extended period, remove the D-size batteries to prevent leakage. Store in a cool, dry place away from direct sunlight and extreme temperatures.

- **Antenna Care:** Handle the telescopic antenna gently. Avoid bending or forcing it, as this can damage the reception capabilities.

Troubleshooting

Problem	Possible Cause	Solution
No sound	Volume too low. Batteries depleted or incorrectly inserted. AC cord not properly connected. Earphones plugged in.	Increase volume. Replace batteries or check polarity. Ensure AC cord is securely plugged in. Unplug earphones.
Poor reception/Static	Antenna not extended. Weak signal in the area. Interference from other electronic devices.	Fully extend the telescopic antenna. Reposition the radio for better signal. Move radio away from other electronics.
Tuning dial difficult to move	Dust or debris accumulation.	Gently clean around the dial with a soft, dry brush. Do not force.

Specifications

Feature	Detail
Model Number	BL-769
Radio Bands Supported	AM (530-1710kHz), FM (88-108MHz), SW (8.0-16.0MHz)
Power Source	AC 120V wall plug or 2 x D Batteries (not included)
Connectivity	3.5mm Earphone Jack
Dimensions (L x W x H)	8.2 x 2.4 x 4.9 inches (20.8 x 6.1 x 12.4 cm)
Item Weight	1.2 pounds (0.54 kg) (without batteries)
Special Feature	Built-In AM Antenna, Retractable Telescopic Antenna

Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official ONGTEED website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2025 ONGTEED. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DCW9DB6V

More documents and user manuals: **https://manuals.plus/**