oneisall B0DCZ9WN8Q

oneisall Dog Clippers User Manual

Model: B0DCZ9WN8Q

Introduction

Thank you for choosing the oneisall Dog Clippers. This cordless grooming kit is designed for efficient and quiet grooming of various dog breeds, including those with thick hair. Featuring two-speed settings and detachable blades, it provides a versatile solution for home groomers. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



The oneisall Dog Clippers and included accessories, designed for effective pet grooming.

Safety Information

For your safety and the longevity of the product, please adhere to the following guidelines:


- Avoid use on infants.
- Keep the clippers away from water sources to prevent electrical hazards.
- Exercise caution when handling cutting blades to prevent injury.

- Always follow recommended cleaning and maintenance procedures to ensure optimal performance and hygiene.

What's Included

Your oneisall Dog Clippers package includes the following items:

- oneisall Dog Clippers unit
- Multiple comb attachments (various sizes)
- Charging cable
- Cleaning brush
- Lubricating oil
- Storage bag

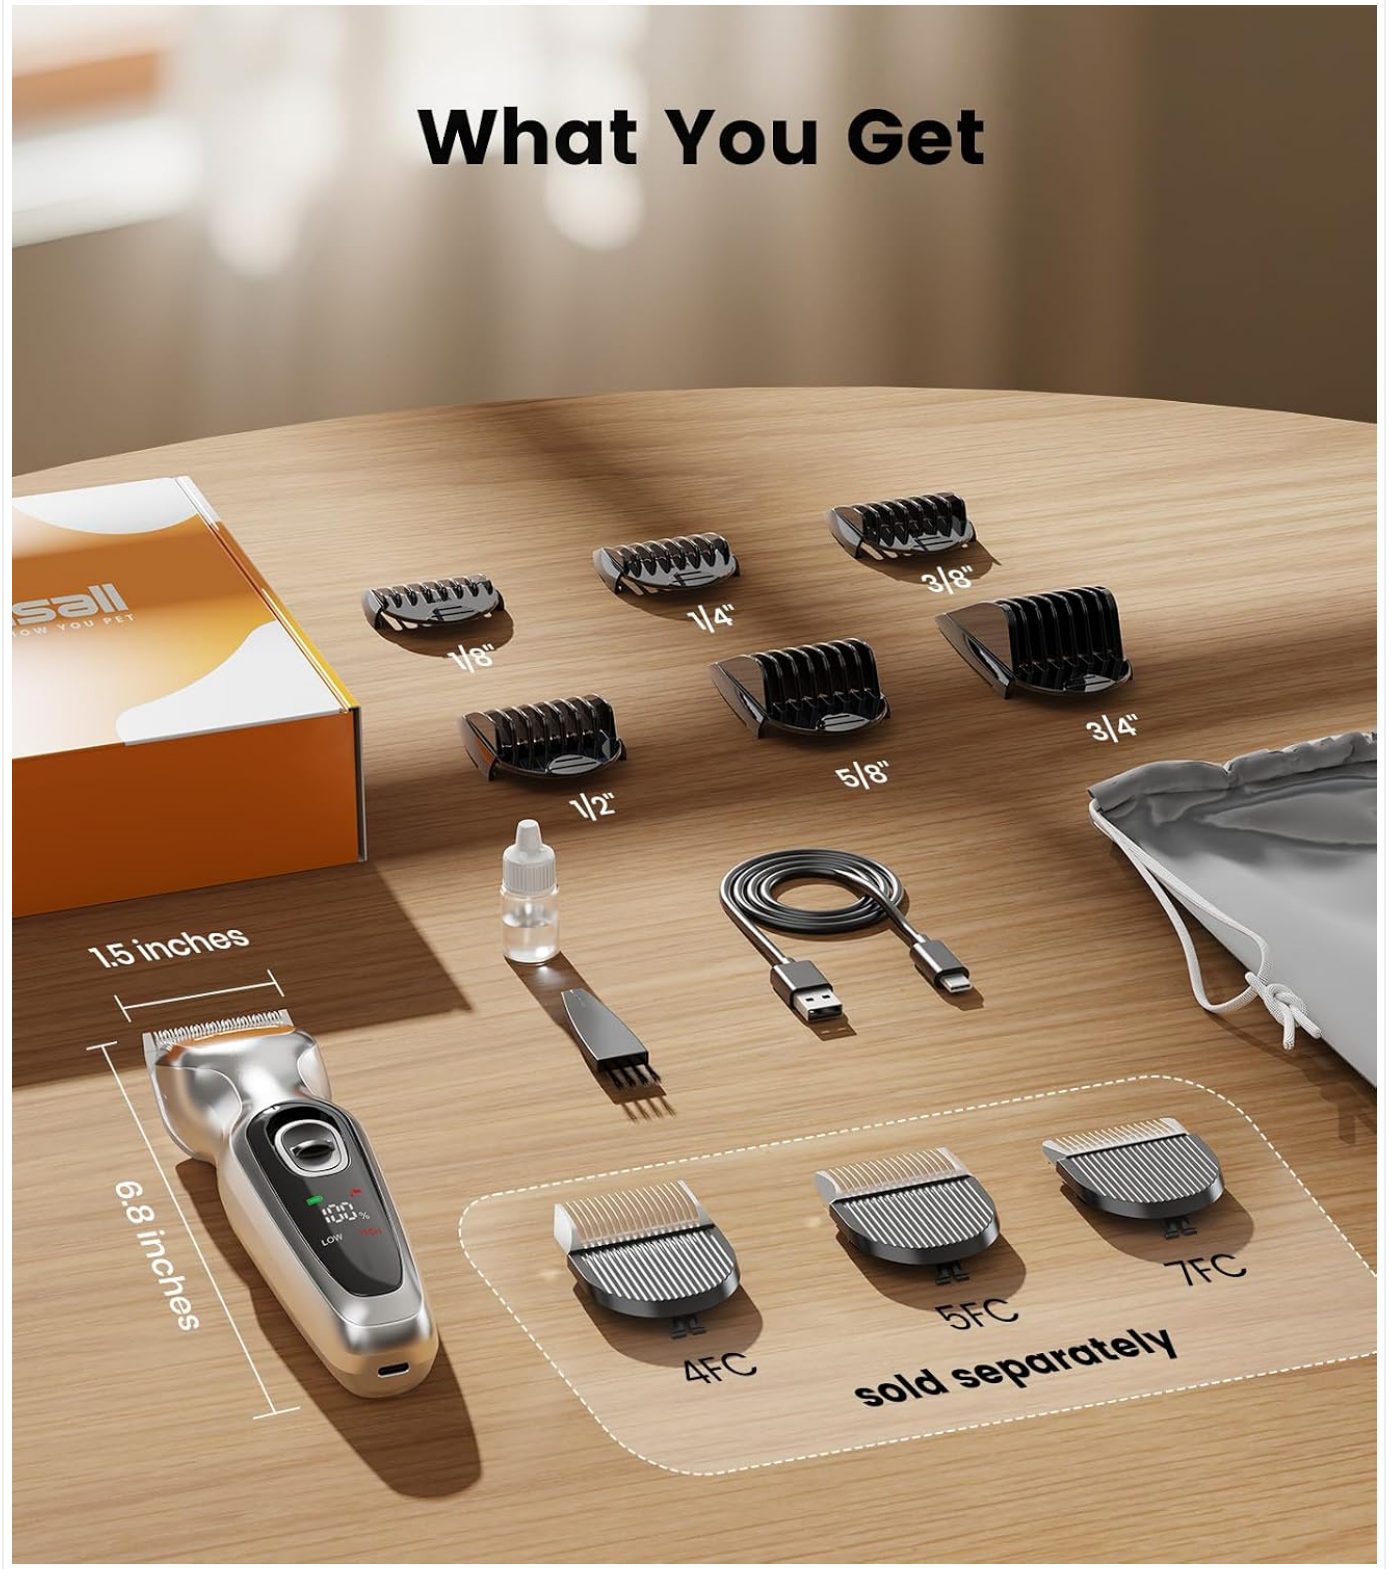

All components included in the oneisall Dog Clippers grooming kit.

Setup

Charging the Clippers

Before first use, fully charge the clippers. Connect the charging cable to the clipper's charging port and plug the other end into a suitable USB power adapter (not included). The LED display will show the battery percentage, indicating charging progress. A full charge takes approximately 3 hours and provides up to 3.5 hours of runtime.



The clipper's LED display shows the battery charge level, ensuring you are aware of remaining power.

Attaching Comb Guides

Select the desired comb guide based on the hair length you wish to achieve. Align the comb guide with the clipper blade and slide it on until it clicks securely into place. Ensure it is firmly attached before beginning grooming.

Operating Instructions

Powering On and Speed Selection

Press the power button to turn on the clippers. The clippers feature two speed settings: Low (5500 rpm) and High (7000 rpm). Press the power button again to toggle between these speeds. The LED display will indicate the current speed setting (LOW or HIGH).




The clippers offer two speed settings for different hair types: 5500 rpm for gentle grooming and 7000 rpm for thick, matted coats.

Grooming Tips

- Ensure your pet's coat is clean and dry before grooming.
- Brush out any tangles or mats to prevent pulling and ensure a smooth cut.
- Start with the Low speed setting for sensitive areas or if your pet is new to grooming.
- Use the High speed setting for thick or matted hair to glide through effectively.
- Move the clippers in the direction of hair growth for a natural finish, or against the direction for a closer cut.
- Take breaks as needed to keep your pet comfortable and to prevent the clippers from overheating.



Various blade options (sold separately) allow for different hair lengths and styles, from original (0.15mm) to 4FC (9mm).

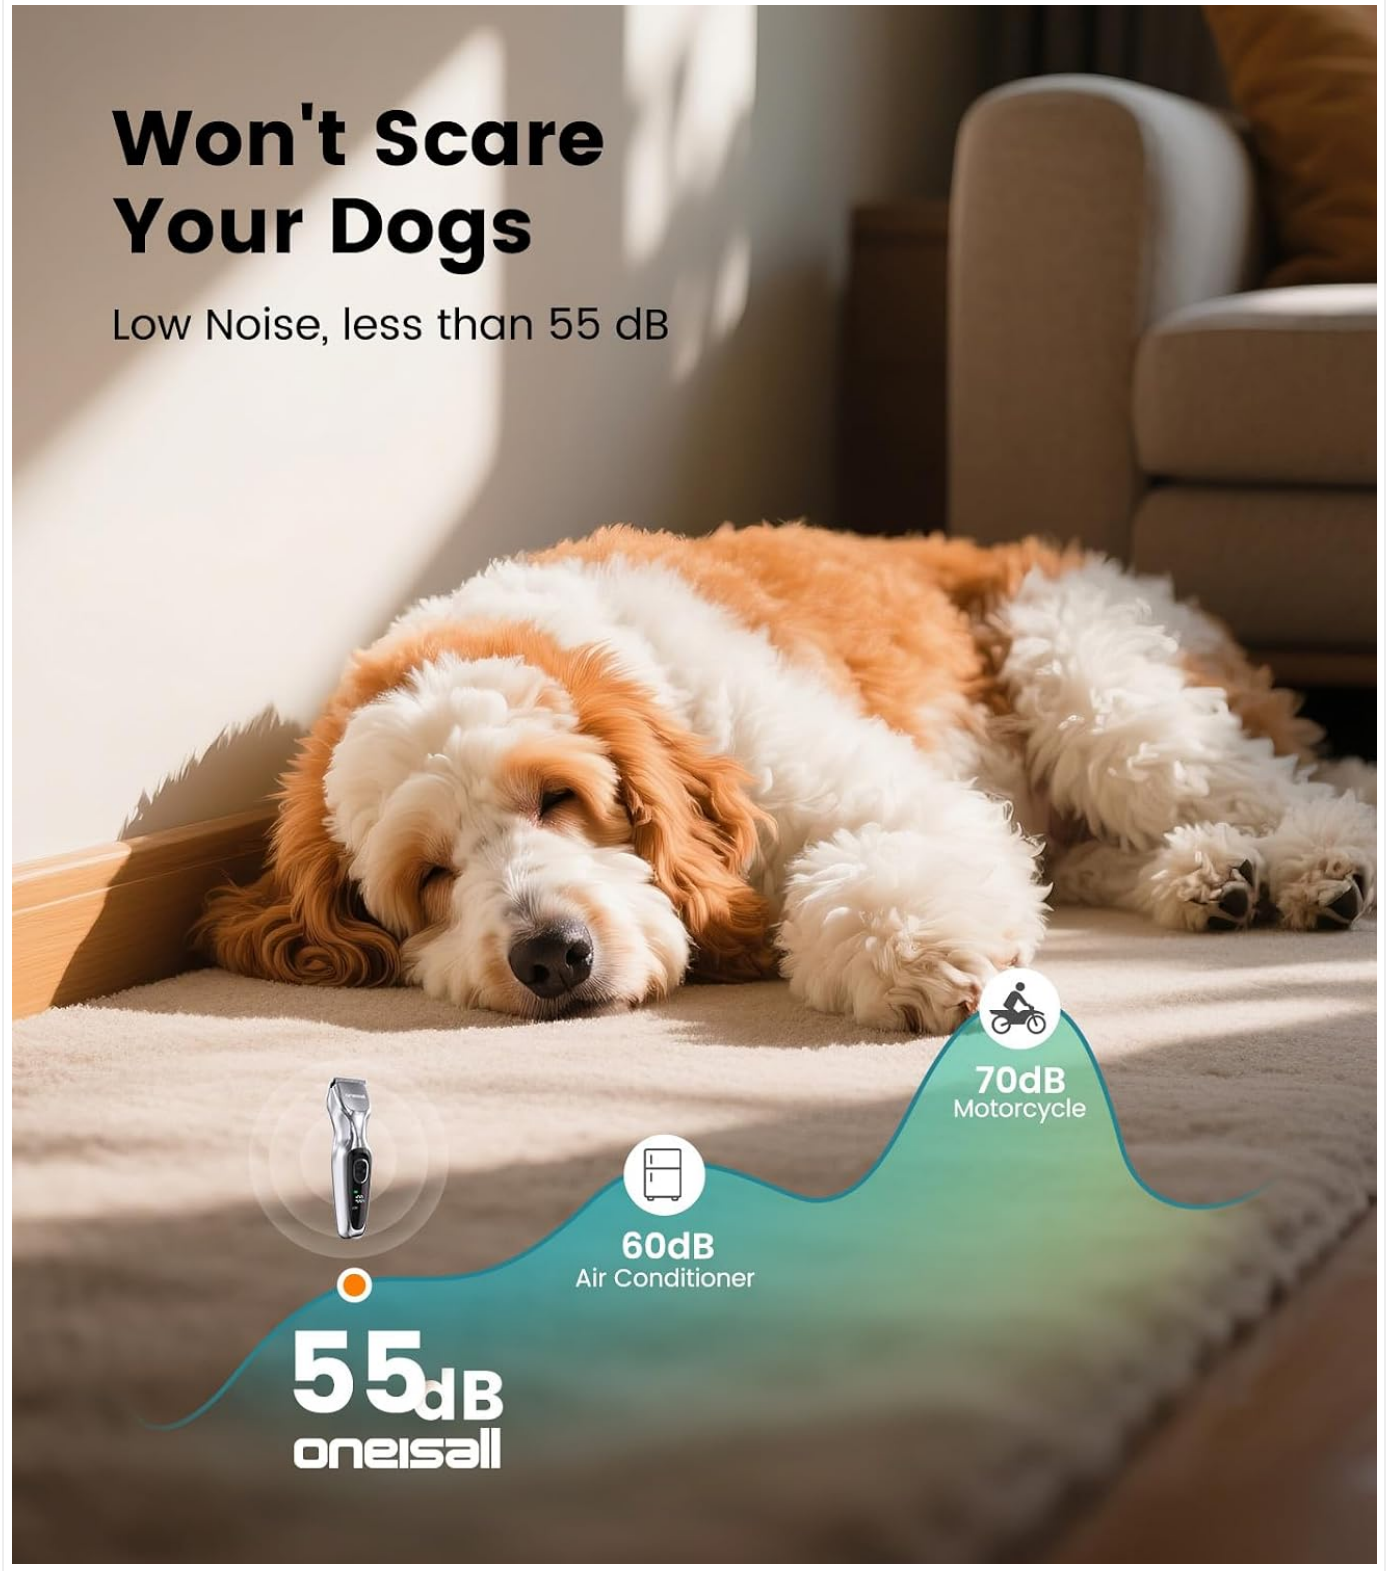

The clippers operate at a low noise level (under 55dB), designed to minimize stress for your pet during grooming.

Maintenance

Cleaning the Blades

After each use, turn off the clippers and detach the blade. Use the included cleaning brush to remove any trapped hair from the blade and the clipper head. For thorough cleaning, the detachable blades can be rinsed under running water. Ensure the blades are completely dry before reattaching or storing.



The detachable blades are easy to remove for cleaning and maintenance, ensuring hygiene and performance.

Lubricating the Blades

Regularly apply a few drops of the provided lubricating oil to the blades. This helps maintain the sharpness and smooth operation of the blades, extending their lifespan. Apply oil before and after each grooming session, especially if the clippers feel sluggish.

Troubleshooting

If you encounter any issues with your oneisall Dog Clippers, please refer to the following common solutions:

- **Clippers not turning on:** Ensure the battery is fully charged.
- **Blades not cutting effectively:** Clean the blades thoroughly to remove any hair buildup. Apply lubricating oil. Ensure the blade is properly attached.
- **Excessive noise or vibration:** Clean and oil the blades. Check if the blade is securely attached.
- **Battery not holding charge:** Ensure the charging cable is properly connected and the power source is functional.

If the problem persists after trying these steps, please contact customer support for further assistance.

Specifications

Feature	Detail
Brand	oneisall
Model	B0DCZ9WN8Q
Item Weight	1.23 pounds
Power Source	Battery Powered
Battery Type	1 Nonstandard Battery (included)
Charging Time	Approx. 3 hours
Runtime	Approx. 3.5 hours (lab-tested)
Speed Settings	2 Speeds (5500 rpm / 7000 rpm)

Feature	Detail
Noise Level	Under 55dB
Blade Material	Stainless Steel
Country of Origin	China

Warranty and Support

Your oneisall Dog Clippers come with a**2-year warranty**. For any product inquiries, technical support, or warranty claims, please contact our customer service. We offer **24-hour customer service** to assist you with any questions or concerns.

Please refer to your purchase documentation for specific contact details or visit the official oneisall website for support information.

© 2025 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question