Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit AXD7596

ZdalaMit AXD7596 Replacement Remote Control User Manual

Model: AXD7596

Brand: ZdalaMit

Introduction

This manual provides instructions for the ZdalaMit AXD7596 replacement remote control. It is designed to operate specific Pioneer AV Receiver models without the need for programming. Please read this manual thoroughly to ensure proper use and to maximize your experience with the product.

Product Overview

The AXD7596 is a direct replacement remote control for several Pioneer AV Receiver models. It offers full functionality for your compatible receiver, allowing control over various audio and video settings.





Image Description: A front view of the black ZdalaMit AXD7596 replacement remote control. It features numerous buttons for various functions, including power, input selection, volume, channel control, and navigation. The model number AXD7596 is visible at the bottom.

Setup

The ZdalaMit AXD7596 replacement remote control requires no programming. Simply install the batteries, and it is

ready for use with compatible Pioneer AV Receiver models.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control.

Compatibility

This remote control is compatible with the following Pioneer AV Receiver models:

- VSX-1020-K
- VSX-1020
- VSX-1025
- VSX-1025-K
- VSX-925

Operating Instructions

Once batteries are installed, point the remote control directly at your Pioneer AV Receiver and press the desired function button. Ensure there are no obstructions between the remote and the receiver.

Key Functions Overview

- **POWER:** Turns the AV Receiver on or off.
- **INPUT SELECT:** Cycles through available input sources (e.g., BD, DVD, TV, CD, HDMI).
- **MASTER VOLUME (+/-):** Adjusts the main volume level.
- **MUTE:** Silences the audio output.
- **NAVIGATION (Up/Down/Left/Right/ENTER):** Used for menu navigation and selection.
- **AUDIO PARAMETER:** Accesses audio settings.
- **LISTENING MODE:** Selects various audio listening modes.



Image Description: An angled view of the ZdalaMit AXD7596 remote control, highlighting the ergonomic design and the layout of its various function buttons. The black finish and white button labels are clearly visible.

Maintenance

Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries with two new 1.5V AAA alkaline batteries. Always replace both batteries at the same time.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

Troubleshooting

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the proper polarity.
  - Replace old batteries with new 1.5V AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the AV Receiver's infrared sensor.
  - Make sure you are within the effective operating range and pointing the remote directly at the receiver.
- **Some functions not working:**
  - Verify that your AV Receiver model is listed in the compatibility section of this manual.
  - Ensure the AV Receiver is powered on and in the correct operating mode.

Specifications

Model	AXD7596
Brand	ZdalaMit
Power Supply	2 x 1.5V AAA Alkaline Batteries
Product Dimensions	8.89 x 1.67 x 0.55 inches (22.58 x 4.24 x 1.4 cm)
Item Weight	1.41 ounces (40 grams)
Color	Black
Compatible Devices	Pioneer AV Receivers (VSX-1020-K, VSX-1020, VSX-1025, VSX-1025-K, VSX-925)



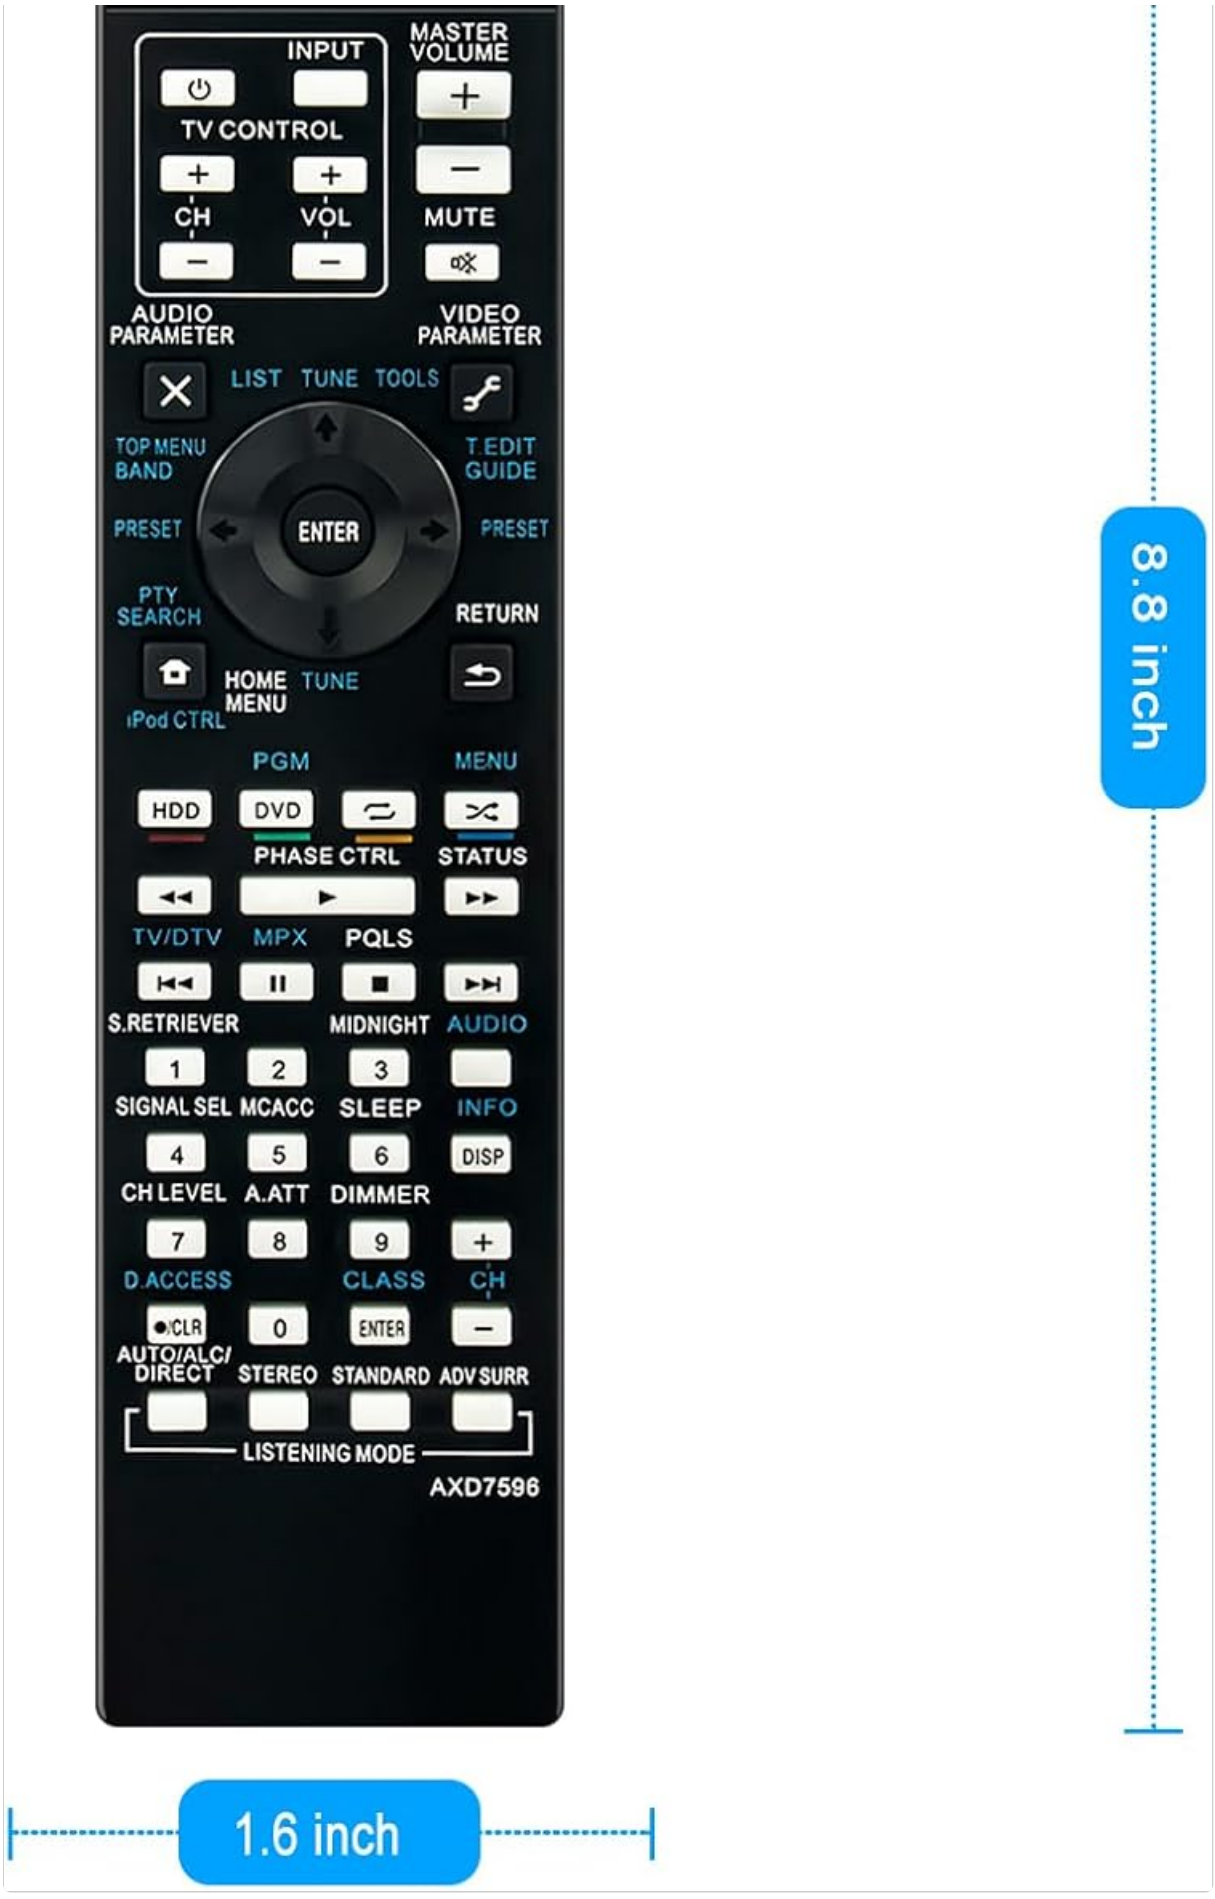


Image Description: A front view of the ZdalaMit AXD7596 remote control with overlaid measurements indicating its length as 8.8 inches and width as 1.6 inches.

Warranty and Support

For information regarding warranty coverage or technical support, please refer to the documentation provided at the time of purchase or contact the manufacturer, ZdalaMit Factory, directly. Keep your purchase receipt as proof of purchase.



Image Description: A hand holding the ZdalaMit AXD7596 remote control, pointing towards a television and soundbar setup in a modern living room. This illustrates the remote in a typical use environment.

© 2024 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DD2YSV2J

More documents and user manuals: **https://manuals.plus/**