Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DEWENWILS b8c21be4-5739-4ce8-9283-ac1e659d4029

DEWENWILS Outdoor Digital Power Strip Timer and 25 FT Extension Cord User Manual

MODEL: B8C21BE4-5739-4CE8-9283-AC1E659D4029

Introduction

This manual provides detailed instructions for the safe and efficient use of your DEWENWILS Outdoor Digital Power Strip Timer with a 25 FT Extension Cord. This product is designed to automate the power supply to outdoor electrical devices, offering convenience and energy savings. Please read this manual thoroughly before installation and operation to ensure proper function and safety.



Image: DEWENWILS Outdoor Digital Power Strip Timer and 25 FT Extension Cord, showing both components.

Safety Information

Always follow basic safety precautions when using electrical products to reduce the risk of fire, electric shock, and personal injury. This device is intended for outdoor use but connections should not be immersed in water.

- Do not exceed the maximum electrical ratings of 15A, 1800W, 125VAC.

- Ensure the product is properly grounded.
- Keep children away from the timer and connected devices.
- Do not disassemble or modify the product.
- Inspect the cord and timer for damage before each use. Do not use if damaged.
- Ensure all connections are secure and protected from direct water exposure.

Package Contents

- DEWENWILS Outdoor Digital Power Strip Timer
- 25 FT Outdoor Extension Cord
- Ground Stake
- Instruction Manual (This document)

Product Features

- **Easy Programming:** Up to 20 ON/OFF settings with weekly repetition.
- **Outdoor Durability:** Weatherproof cover protects against water, dust, and damage.
- **Backup Battery:** Retains settings for up to 3 months during power outages.
- **Long Extension Cord:** 25-foot 16/3C SJTW weatherproof cord for versatile placement.
- **Multiple Outlets:** Six grounded outlets for connecting multiple devices.
- **24-Hour Display:** Time is displayed in military time (24-hour format).

Setup and Installation

1. Physical Placement

The timer unit can be installed using the included ground stake or mounted on a wall.

- **Ground Stake Installation:** Attach the timer unit to the ground stake. Wedge the stake firmly into the ground in a desired outdoor location. Ensure the timer is positioned to avoid direct standing water.
- **Wall Mounting:** Use appropriate screws (not included) to secure the timer unit to a wall or vertical surface. Ensure the mounting location is stable and provides adequate protection from extreme weather.



Image: The DEWENWILS outdoor timer unit mounted on a wall next to a house, with outdoor holiday lights connected, demonstrating its wall-mountable feature.



Image: The DEWENWILS outdoor timer unit installed with a ground stake in grass, showing multiple devices plugged into its six outlets.

2. Connecting Power and Devices

- Plug the male end of the 25 FT extension cord into a grounded outdoor electrical outlet.
- Plug the timer unit's power cord into one of the female outlets of the 25 FT extension cord.
- Plug your outdoor devices (e.g., lights, pumps, sprinklers) into the six outlets on the timer unit. Ensure the total wattage of all connected devices does not exceed 1800W.

- Ensure the weatherproof cover of the timer unit is securely closed after connecting devices to protect the outlets.

Operating Instructions

The timer operates on a 24-hour system (military time). There is no AM/PM indicator.



Image: Close-up view of the DEWENWILS digital timer unit with its protective cover open, revealing the display, control buttons, and six power outlets.

1. Setting the Current Time

1. Press the **CLOCK** button and hold it.
2. While holding **CLOCK**, press **WEEK** to set the current day of the week.
3. While holding **CLOCK**, press **HOUR** to set the current hour (0-23).
4. While holding **CLOCK**, press **MIN** to set the current minute (0-59).
5. Release the **CLOCK** button. The current time is now set.

2. Programming ON/OFF Cycles

The timer supports up to 20 ON/OFF programs. Each program consists of an ON time and an OFF time.



Image: Detailed view of the DEWENWILS timer's digital display and control buttons, illustrating programming options.

1. Press the **PROG** button once to enter Program 1 ON setting. The display will show '1 ON'.
2. Press **WEEK** to select the day(s) for this program (e.g., Daily, Weekdays, Weekends, specific days).
3. Press **HOUR** to set the desired ON hour.
4. Press **MIN** to set the desired ON minute.
5. Press **PROG** again to enter Program 1 OFF setting. The display will show '1 OFF'.
6. Repeat steps 2-4 to set the desired OFF time for Program 1.

7. Continue pressing **PROG** to cycle through and set additional programs (2 ON, 2 OFF, etc.) up to 20 programs.
8. After setting all desired programs, press the **CLOCK** button to exit programming mode and return to the current time display.

3. Daylight Saving Time (DST) Adjustment

To adjust for Daylight Saving Time, press and hold the **CLOCK** button, then press the **ON/AUTO/OFF** button. The time will advance or recede by one hour. Repeat the process to revert the change.

4. Manual Override

Press the **ON/AUTO/OFF** button to cycle through the modes: ON, AUTO, OFF.

- **ON:** The connected devices will remain continuously ON, overriding all programs.
- **AUTO:** The timer will operate according to the programmed ON/OFF settings.
- **OFF:** The connected devices will remain continuously OFF, overriding all programs.

Always ensure the timer is set to **AUTO** for programmed operation.

5. Backup Battery

The built-in backup battery maintains all programmed settings for up to 3 months in the event of a power failure. No need to reset programs after a brief power outage.

Maintenance

- Clean the timer and cord with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the weatherproof cover is always securely closed when the timer is in use outdoors.
- Periodically check the cord and plugs for any signs of wear, cuts, or damage. Replace if necessary.
- Store the unit in a dry, protected area when not in use for extended periods.

Troubleshooting

- **Timer not turning ON/OFF as programmed:**
  - Check if the timer is set to **AUTO** mode.
  - Verify that the current time and programmed times are set correctly.
  - Ensure the connected devices are functioning properly when plugged directly into a power source.
- **Display is blank:**
  - Ensure the timer is properly plugged into a live outlet.
  - The backup battery might be depleted. Allow the unit to charge for a few hours while plugged in.
- **Devices not receiving power:**
  - Check the power source and all connections.
  - Ensure the total wattage of connected devices does not exceed 1800W.
  - Verify the timer is in ON or AUTO mode during the programmed ON time.

Specifications

Feature	Specification
Model Number	b8c21be4-5739-4ce8-9283-ac1e659d4029
Electrical Rating	15A / 1800W / 125VAC
Programs	Up to 20 ON/OFF settings
Programmability	7-day programmable
Outlets	6 Grounded Outlets
Extension Cord Length	25 Feet (300 Inches)
Extension Cord Gauge	16 Gauge, 3 Conductors (16/3C SJTW)
Operating Temperature	-40°F to 140°F
Backup Battery	Yes (retains settings for up to 3 months)
Certifications	ETL Listed

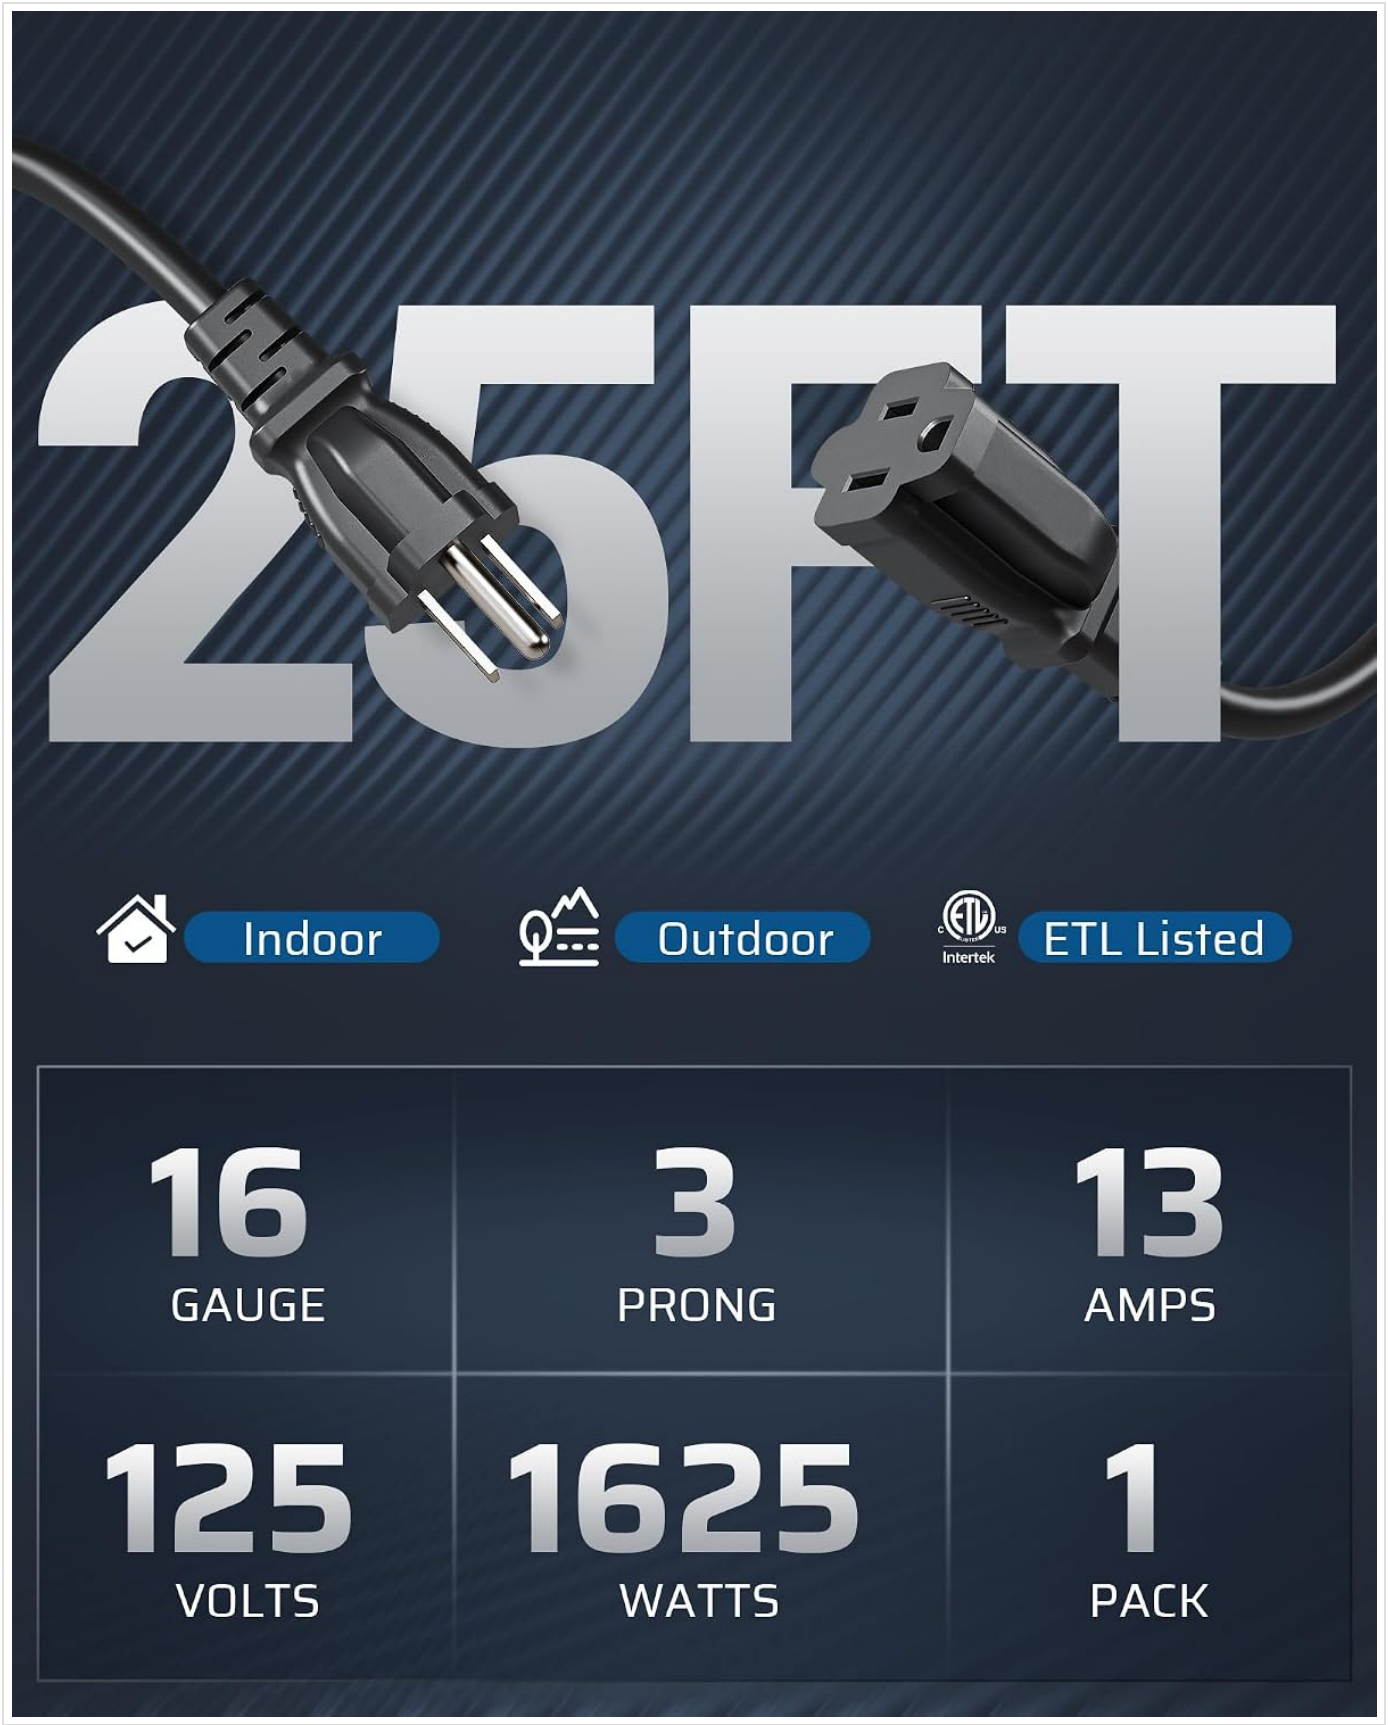


Image: Specifications of the 25-foot extension cord.



Image: High-quality all-copper wire construction.



Image: Durable strain relief on the extension cord plug.

Warranty and Support

For warranty information or technical support, please contact DEWENWILS customer service. Refer to the product packaging or the DEWENWILS official website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DD34WMTJ

More documents and user manuals: **https://manuals.plus/**