OUNA X8 Pro

OUNA XDOBO X8 Pro Portable Wireless Speaker User Manual

Model: X8 Pro

1. Introduction

Thank you for purchasing the OUNA XDOBO X8 Pro Portable Wireless Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.
The X8 Pro speaker features Bluetooth 5.2 technology, IPX5 water resistance, and multiple playback options including AUX, USB Flash Drive, and TF Card. It delivers powerful sound for an enhanced audio experience.

2. Package Contents

Please check the package for the following items:

- 1x OUNA XDOBO X8 Pro Portable Wireless Speaker
- 1x Charging Cable
- 1x Audio Cable
- 1x Instruction Manual (this document)
- 1x Shoulder Strap

Note: If your purchased variant includes microphones, they will be packaged separately. This specific product variant is "Only Speaker Black" and does not include microphones.

3. Product Overview

Familiarize yourself with the speaker's components and controls.



Image 3.1: Front view of the OUNA XDOBO X8 Pro Portable Wireless Speaker. The speaker features a textured black finish with the 'xdobo' logo prominently displayed.



Image 3.2: Top panel controls and indicators. This image illustrates the various buttons for mode selection (M), equalizer (EQ), volume control, play/pause, and track navigation. It also highlights the multiple input options: Microphone (for compatible external microphones), TF Card slot, Bluetooth, AUX Line-in, and USB port.

Control Panel Functions:

- **Power Button:** Press and hold to power on/off.
- **Mode (M) Button:** Press to switch between Bluetooth, AUX, USB, and TF Card modes.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up (+):** Press to increase volume. Press and hold for next track.
- **Volume Down (-):** Press to decrease volume. Press and hold for previous track.
- **EQ Button:** Press to cycle through available equalizer presets.

4. Setup and Charging

Initial Charging:

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and a compatible USB power adapter (DC 5V, not included). The charging indicator will show the charging status and turn off or change color when fully charged.



Image 4.1: Illustration of the speaker's long battery life. The 20000mAh lithium battery provides approximately 5 hours of charge time, 12 hours of playtime, and 200 hours of standby time.

Attaching the Shoulder Strap:

Attach the included shoulder strap to the designated loops on the speaker for convenient portability.



Image 4.2: A person carrying the XDOBO X8 Pro speaker using the adjustable shoulder strap, demonstrating its portable design for outdoor use.

5. Operating Instructions

Power On/Off:

- **To Power On:** Press and hold the Power button until the indicator light illuminates.
- **To Power Off:** Press and hold the Power button until the indicator light turns off.

Bluetooth Pairing:

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.

2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "XDOBO X8 Pro" from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

TWS (True Wireless Stereo) Pairing (for two X8 Pro speakers):

If you have two XDOBO X8 Pro speakers, you can pair them for a stereo sound experience.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button (often combined with the Mode or Play/Pause button, refer to your speaker's specific button layout if different).
3. The primary speaker will search for the secondary speaker. Once connected, both speakers will emit a confirmation sound.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. Audio will play in stereo through both speakers.

Using External Microphones:

The X8 Pro speaker supports external wireless microphones (not included with this variant).



Image 5.1: Illustration of a smart wireless microphone connecting to the XDOBO X8 Pro speaker. Compatible microphones feature smart chips for automatic connection and anti-howling technology.

1. Ensure the speaker is powered on.
2. Power on your compatible wireless microphone.
3. The microphone should automatically connect to the speaker. A confirmation sound may indicate a successful connection.
4. Adjust microphone volume and echo effects using the speaker's controls or the microphone's built-in controls, if available.

AUX Input Mode:

1. Connect one end of the provided audio cable to the speaker's AUX-in port.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
3. Press the 'M' (Mode) button on the speaker until it enters AUX mode.
4. Control playback and volume from your external device.

USB Flash Drive / TF Card Playback:

1. Insert a USB flash drive or a TF (microSD) card containing audio files into the respective port on the speaker.
2. The speaker will automatically switch to USB or TF Card mode and begin playing audio. If not, press the 'M' (Mode) button to select the correct mode.
3. Use the speaker's Play/Pause, Volume Up/Down buttons to control playback.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners, alcohol, or other chemical solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The speaker is IPX5 waterproof, meaning it can resist a sustained, low-pressure water jet spray. Do not submerge the speaker in water. Ensure all port covers are securely closed before exposure to water.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

7. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
No sound.	Volume too low; incorrect mode; device not connected.	Increase volume; switch to correct input mode (BT, AUX, USB, TF); ensure device is properly paired/connected.
Bluetooth pairing fails.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode; enable Bluetooth on your device; move device closer to speaker (within 15m).
Sound distortion.	Volume too high; low battery; poor signal.	Reduce volume; charge speaker; move device closer to speaker.
Microphone not working.	Microphone not powered on; not paired; incompatible microphone.	Ensure microphone is powered on and charged; check microphone pairing instructions; ensure microphone is compatible.

8. Specifications

Detailed technical specifications for the OUNA XDOBO X8 Pro Portable Wireless Speaker.

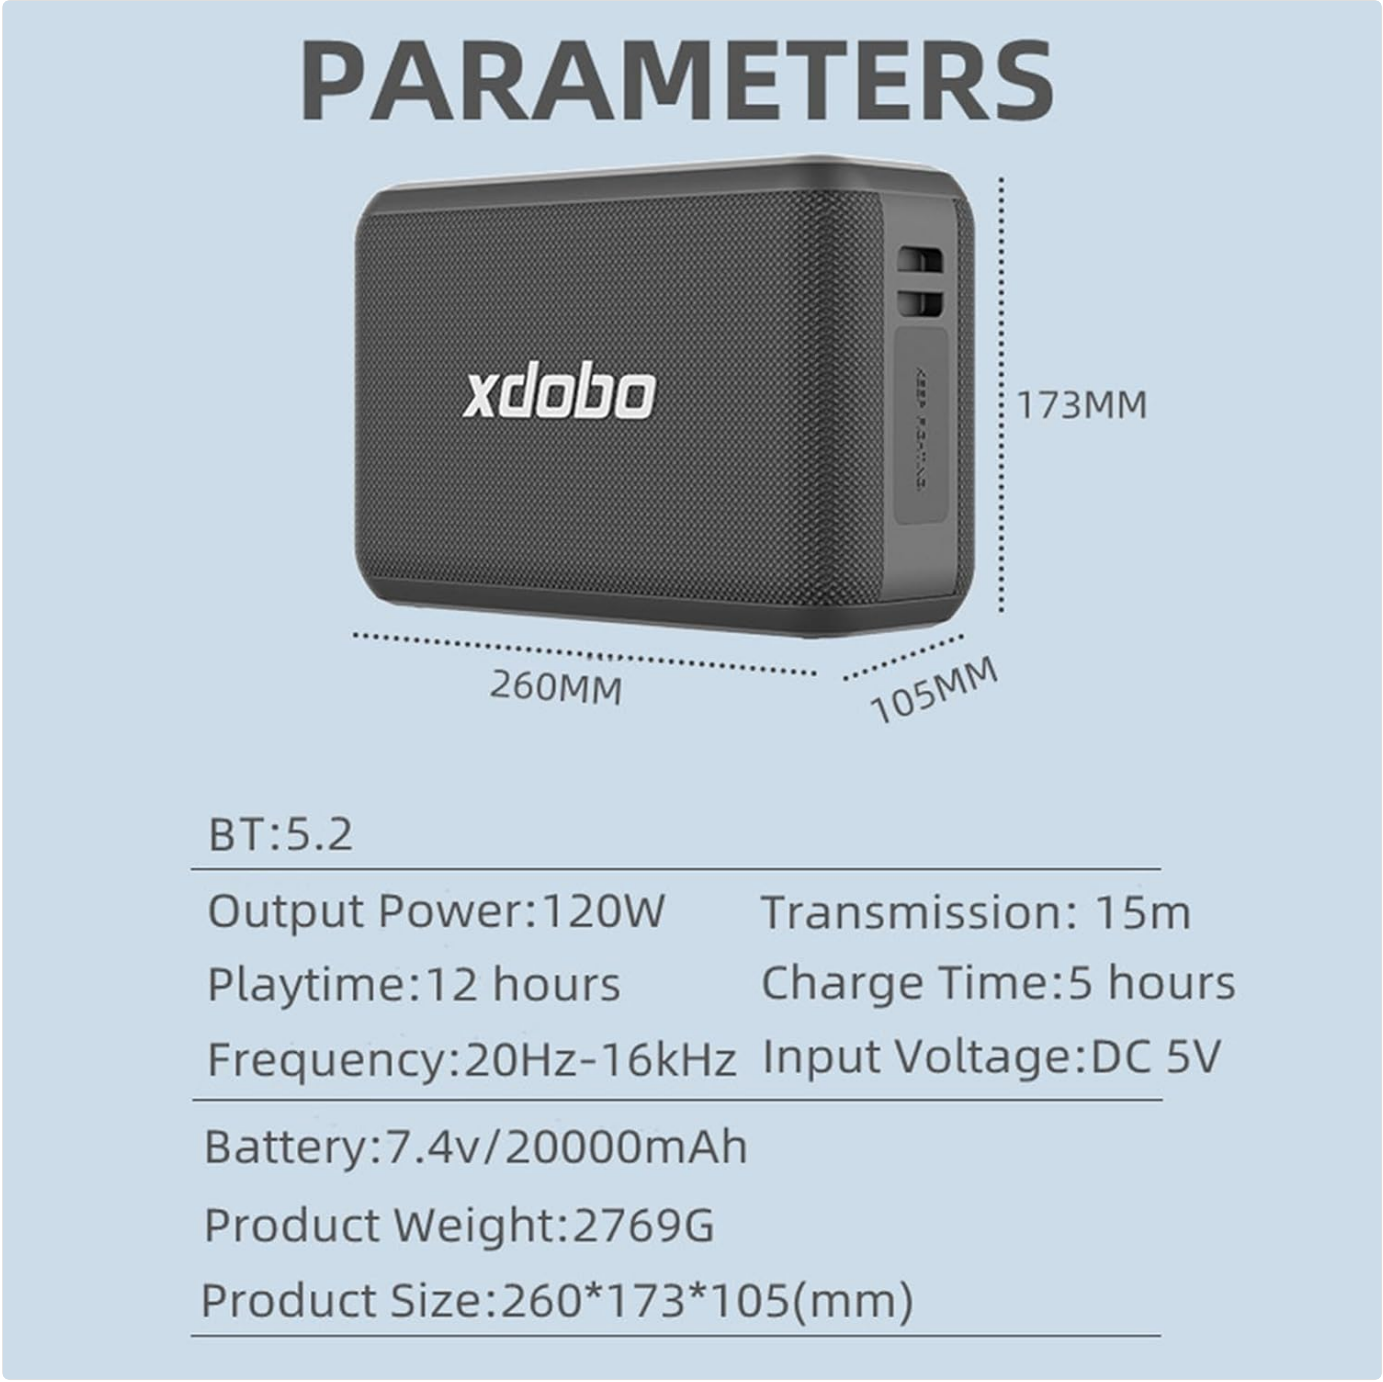


Image 8.1: Visual representation of the speaker's dimensions and key technical parameters.

- **Model Name:** X8 Pro
- **Output Power:** 120W
- **Bluetooth Version:** 5.2
- **Bluetooth Transmission Distance:** 15 meters (approx. 49 feet)
- **Charging Time:** Approximately 5 hours
- **Input Voltage:** DC 5V
- **Playtime:** Up to 12 hours (varies with volume and content)
- **Frequency Response:** 20Hz - 16kHz
- **Battery:** 7.4V / 20000mAh
- **Product Dimensions:** 260mm x 173mm x 105mm (approx. 10.2 x 6.8 x 4.1 inches)
- **Product Weight:** 2769g (approx. 6.1 lbs)
- **Waterproof Rating:** IPX5

- **Connectivity:** Bluetooth, AUX, USB Flash Drive, TF Card

9. Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel.
- Keep the speaker away from medical devices (e.g., pacemakers) as it contains magnets.
- Dispose of the battery and speaker according to local regulations. Do not dispose of in household waste.
- Prolonged listening at high volumes may cause hearing damage. Adjust volume to a safe level.

10. Warranty and Support

OUNA products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact your retailer. You may also visit the official OUNA website for further assistance.
For customer service inquiries, please contact:

- **Email:** support@ouna.com (Example email, please verify with manufacturer)
- **Website:** www.ouna.com (Example website, please verify with manufacturer)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question