ChooChoo B0DD7G3K3M

ChooChoo Farmhouse Bakers Rack with Power Outlets Instruction Manual

Model: B0DD7G3K3M

Important Safety Information

Please read and understand all instructions before assembling and using this product. Keep this manual for future reference.

- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the unit on a soft, clean surface (e.g., carpet or cardboard) to prevent scratching.
- Ensure all connections are securely tightened before placing any items on the rack. Do not overtighten screws during initial assembly.
- Do not overload shelves. Distribute weight evenly to maintain stability.
- Place the bakers rack on a flat, level surface to prevent tipping.
- For power outlets: Do not exceed the rated electrical capacity of the integrated outlets. Do not use in wet or damp conditions. Unplug the unit from the wall outlet when not in use or during cleaning.

Package Contents

Before beginning assembly, carefully unpack all components and compare them with the parts list (if provided in physical manual). If any parts are missing or damaged, please contact ChooChoo customer support immediately for assistance.

Expected components include:

- Main frame components (legs, crossbars)
- Shelves (upper hutch, main tabletop, lower shelves)
- Cabinet doors and hardware (hinges, knobs)
- Power outlet strip with cord
- Hanging hooks (6 pieces)
- Assembly hardware (screws, dowels, Allen wrench)

Setup and Assembly

The ChooChoo Farmhouse Bakers Rack is designed for straightforward assembly. Follow the included step-by-step instructions carefully. Two people are recommended for easier and safer assembly.

1. **Step 1: Unpack and Identify Parts**
   Lay out all components on a clean, soft surface. Identify each part using the provided diagrams and ensure all hardware is present.
2. **Step 2: Assemble the Base Frame**
   Connect the main frame components (legs and lower crossbars) using the specified hardware. Do not fully tighten screws until the unit is mostly assembled to allow for adjustments.
3. **Step 3: Install Shelves and Cabinet**
   Secure the lower shelves into the base frame. Assemble the cabinet doors by attaching hinges and knobs, then mount them to the cabinet section. Ensure doors open and close smoothly.
4. **Step 4: Attach the Hutch**
   Carefully mount the upper hutch section to the main tabletop and base frame. Secure all connections firmly with the provided hardware.
5. **Step 5: Final Tightening and Placement**
   Once fully assembled, gently tighten all screws to ensure stability. Place the rack on a level surface in its desired location. Connect the power cord to a suitable wall outlet.

Thickened Desktop

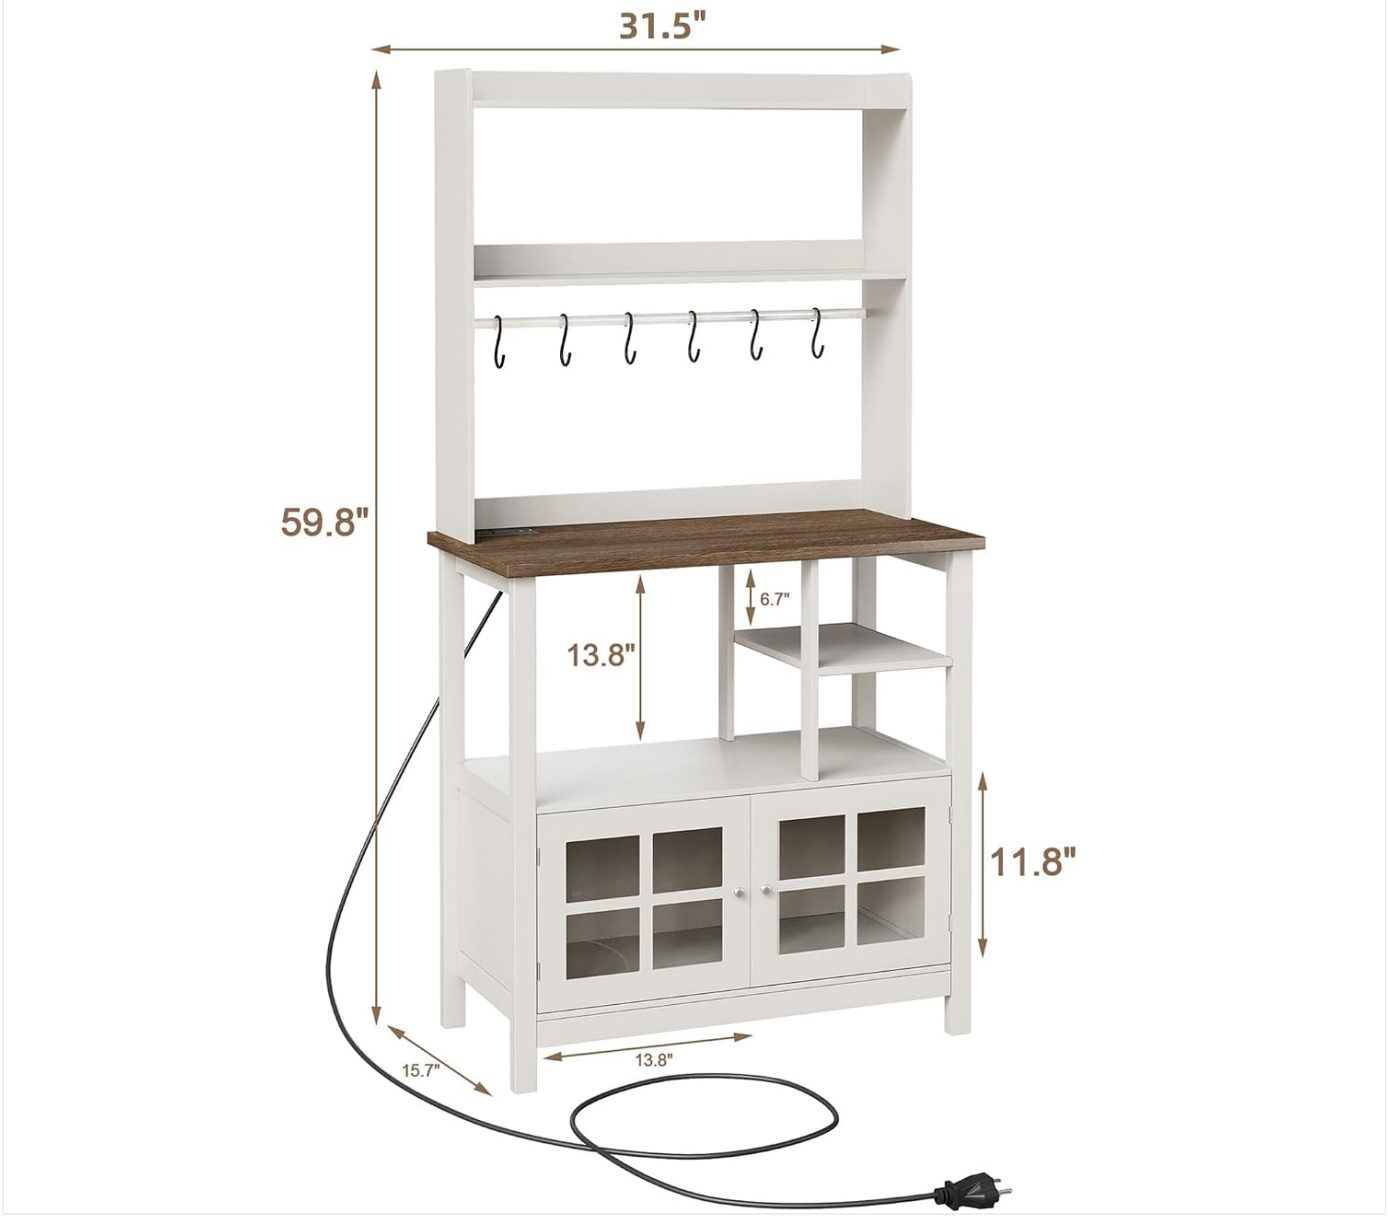


Image: Detailed dimensions of the assembled bakers rack, including height, width, and depth of various sections.



Image: Front view of the fully assembled ChooChoo Farmhouse Bakers Rack, showcasing its soft white frame and brown tabletop.

Video: A brief overview of the ChooChoo Farmhouse Coffee Bar Cabinet, demonstrating its features and storage capabilities.

Operating Instructions

This bakers rack offers versatile storage and functionality for your kitchen or dining area.

Using the Power Outlets

The integrated power outlets are designed for convenient use of small kitchen appliances such as coffee makers, blenders, or microwaves. Ensure that the total wattage of connected appliances does not exceed the rack's specified electrical capacity. Plug the rack's main power cord into a standard, grounded wall outlet.

Organizing Storage

Utilize the tiered shelves for organizing spices, cookbooks, or decorative items. The spacious tabletop is ideal for setting up a coffee bar or housing a microwave. The enclosed cabinet provides hidden storage for dishes, small appliances, or other kitchen essentials. The six hooks on the hutch are perfect for hanging mugs, utensils, or small towels, keeping them

easily accessible.



Image: The bakers rack in a kitchen, demonstrating its use as a coffee station and microwave stand with various items stored on shelves and in the cabinet.



Image: A detailed view of the upper hutch, highlighting the six hooks for hanging mugs or utensils, and items stored on the top shelves.

Maintenance and Care

To maintain the appearance and longevity of your ChooChoo Farmhouse Bakers Rack, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or solvents, which can damage the finish.
- **Spills:** Clean up any spills immediately to prevent staining or water damage to the engineered wood.
- **Stability:** Periodically check all screws and connections to ensure they remain tight. Retighten as necessary to maintain structural integrity.
- **Electrical:** Ensure the power cord is not pinched or damaged. Do not expose the power outlets to moisture or liquids.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.

Troubleshooting

Issue	Possible Cause	Solution
Rack is wobbly or unstable.	Uneven surface; loose screws.	Ensure the rack is placed on a flat, level surface. Check and tighten all assembly screws.
Power outlets are not working.	Main power cord unplugged; wall outlet issue; overloaded circuit.	Verify the main power cord is securely plugged into a functional wall outlet. Test the wall outlet with another appliance. Ensure total wattage of connected devices does not exceed capacity.
Cabinet doors do not close properly.	Misaligned hinges; loose hinge screws.	Check the alignment of the hinges and ensure all screws are tightened. Adjust hinges if necessary.
Missing or damaged parts upon arrival.	Shipping damage; packaging error.	Do not proceed with assembly. Contact ChooChoo customer support immediately for assistance.

Specifications

Feature	Detail
Material	Engineered Wood
Color	Soft White & Brown
Special Feature	Farmhouse style with integrated power outlets
Product Dimensions (D x W x H)	15.75"D x 31.5"W x 59.8"H
Shelf Type	Tiered Shelf
Number of Shelves	4
Room Type	Dining Room, Kitchen, Living Room
Mounting Type	Floor Mount
Recommended Uses	Kitchen Storage, Coffee Bar Setup, Microwave Stand
Item Weight	43.8 Pounds

Warranty and Support

For specific warranty details regarding your ChooChoo Farmhouse Bakers Rack, please refer to the documentation included with your purchase. Warranty terms may vary.

For any questions, technical assistance, or to report missing or damaged parts, please contact ChooChoo Furniture customer support. You can typically find contact information on the product packaging or the manufacturer's official website.

© 2026 ChooChoo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question