Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Unineo 72 Inch Electric Fireplace

Unineo 72 Inch Electric Fireplace Instruction Manual

Model: 72 Inch Electric Fireplace

Introduction

Thank you for choosing the Unineo 72 Inch Electric Fireplace. This manual provides essential information for the safe operation, installation, and maintenance of your new electric fireplace. Please read this manual thoroughly before installation and use, and retain it for future reference.



Image: The Unineo 72 Inch Electric Fireplace seamlessly integrated into a modern living room setting, showcasing its sleek design and vibrant flames.

Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This includes:

- Read all instructions before using this fireplace.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not operate any fireplace with a damaged cord or plug or after the fireplace malfunctions, has been dropped or damaged in any manner.

- Do not use outdoors.
- Never locate fireplace where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect fireplace, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- All electrical wiring must be performed by a qualified electrician and in accordance with local codes.
- Always use properly grounded, fused, and polarized outlets.
- Always disconnect power before performing any cleaning or maintenance.
- Always leave 8 inches of space between the fireplace and a TV.

Setup and Installation

The Unineo 72 Inch Electric Fireplace offers versatile installation options: recessed into a wall or wall-mounted. Ensure you have the necessary tools and follow all local building codes.

Installation Options



Image: Visual guide illustrating the two primary installation methods: wall-mounted and fully recessed, along with key dimensions for planning.

- **Wall Mounted:** The unit comes with a wall-mount bracket for easy hanging. Ensure the wall can support the weight of the fireplace.
- **Fully Recessed:** For a flush, built-in look, the fireplace can be recessed into a wall. Refer to the dimensions below for proper framing.

Dimensions and Requirements

- **Overall Dimension:** 72"W × 17"H × 5 29/32"D
- **Recessed Size:** 71 29/64"W × 16 11/32"H × 6 1/4"D
- **Electrical:** 120V/60Hz, 15 AMP circuit required.
- **Power Cable:** 6ft power cable included.
- **Usage:** For indoor use only.
- **Clearance:** Important to leave 8 inches of space between the fireplace and any television.

Fuel Bed Installation

Your fireplace includes both driftwood and crystal media for the fuel bed. Choose your preferred media and carefully place it into the firebox according to the instructions provided in the separate quick start guide.



Image: The fireplace showcasing two fuel bed options: a realistic birch wood log set and sparkling crystal embers, allowing for customization.

Operating Instructions

Your Unineo Electric Fireplace can be operated using the included visual remote control or the touch controls on the unit itself.

Remote Control Functions



Image: The visual remote control displaying icons for power, flame settings, heat, timer, and child lock, offering convenient operation.

- **Power On/Off:** Press the power button to turn the unit on or off.
- **Flame Color:** Select from 12 flame color options. Use the flame button and arrow keys to cycle through colors.
- **Ember Color:** Choose from 13 ember color options.
- **Flame Speed & Intensity:** Adjust the flame speed and intensity with 5 levels each to create your desired ambiance.
- **Heater Control:** Activate the 1500W infrared heater. Set the desired temperature using the thermostat function.

The heater will operate until the set temperature is reached.

- **Timer:** Set a retrograde timer from 0.5 to 9 hours for automatic shut-off.
- **Child Lock:** Engage the child lock feature to prevent unintended changes to settings.
- **BEEP Sound Option:** Enable or disable the beep sound for button presses.

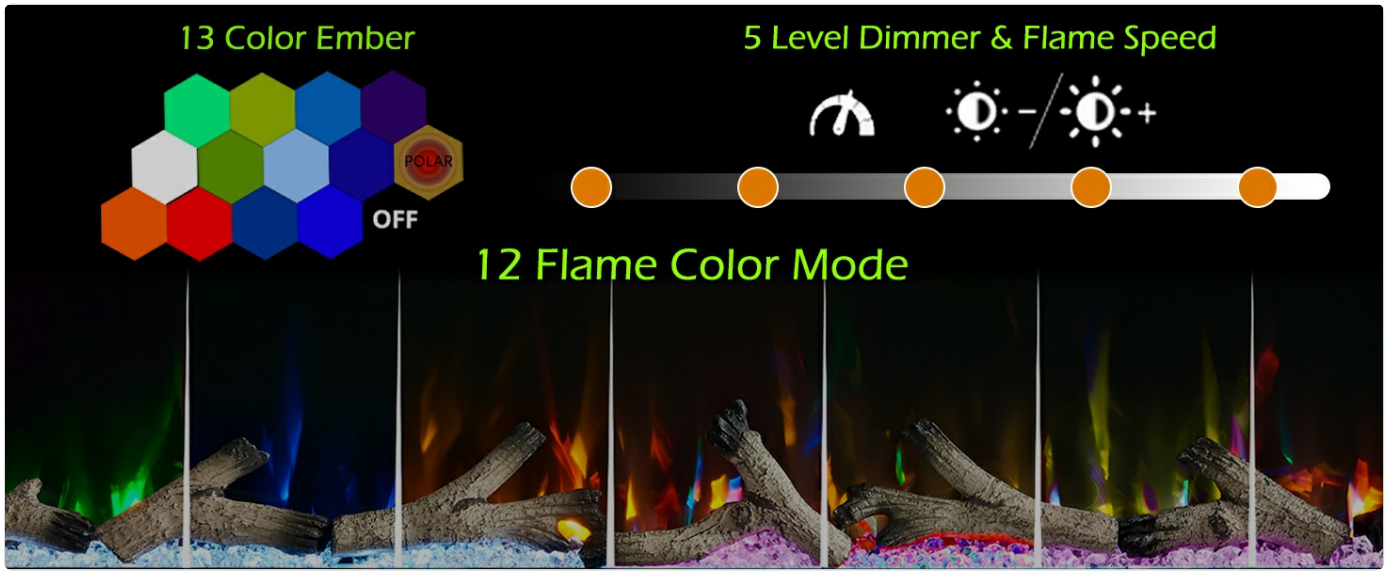


Image: A visual representation of the 12 flame color modes, 13 ember colors, and 5-level dimmer and flame speed settings available for customization.

Flame Realism and Design

The fireplace features a decorative-grade narrow aluminum frame for a wider viewing area and a deeper firebox (5.91") allowing for a larger log set, more crystals, and enhanced light reflection. A flame plate insert produces a more lively flame effect.

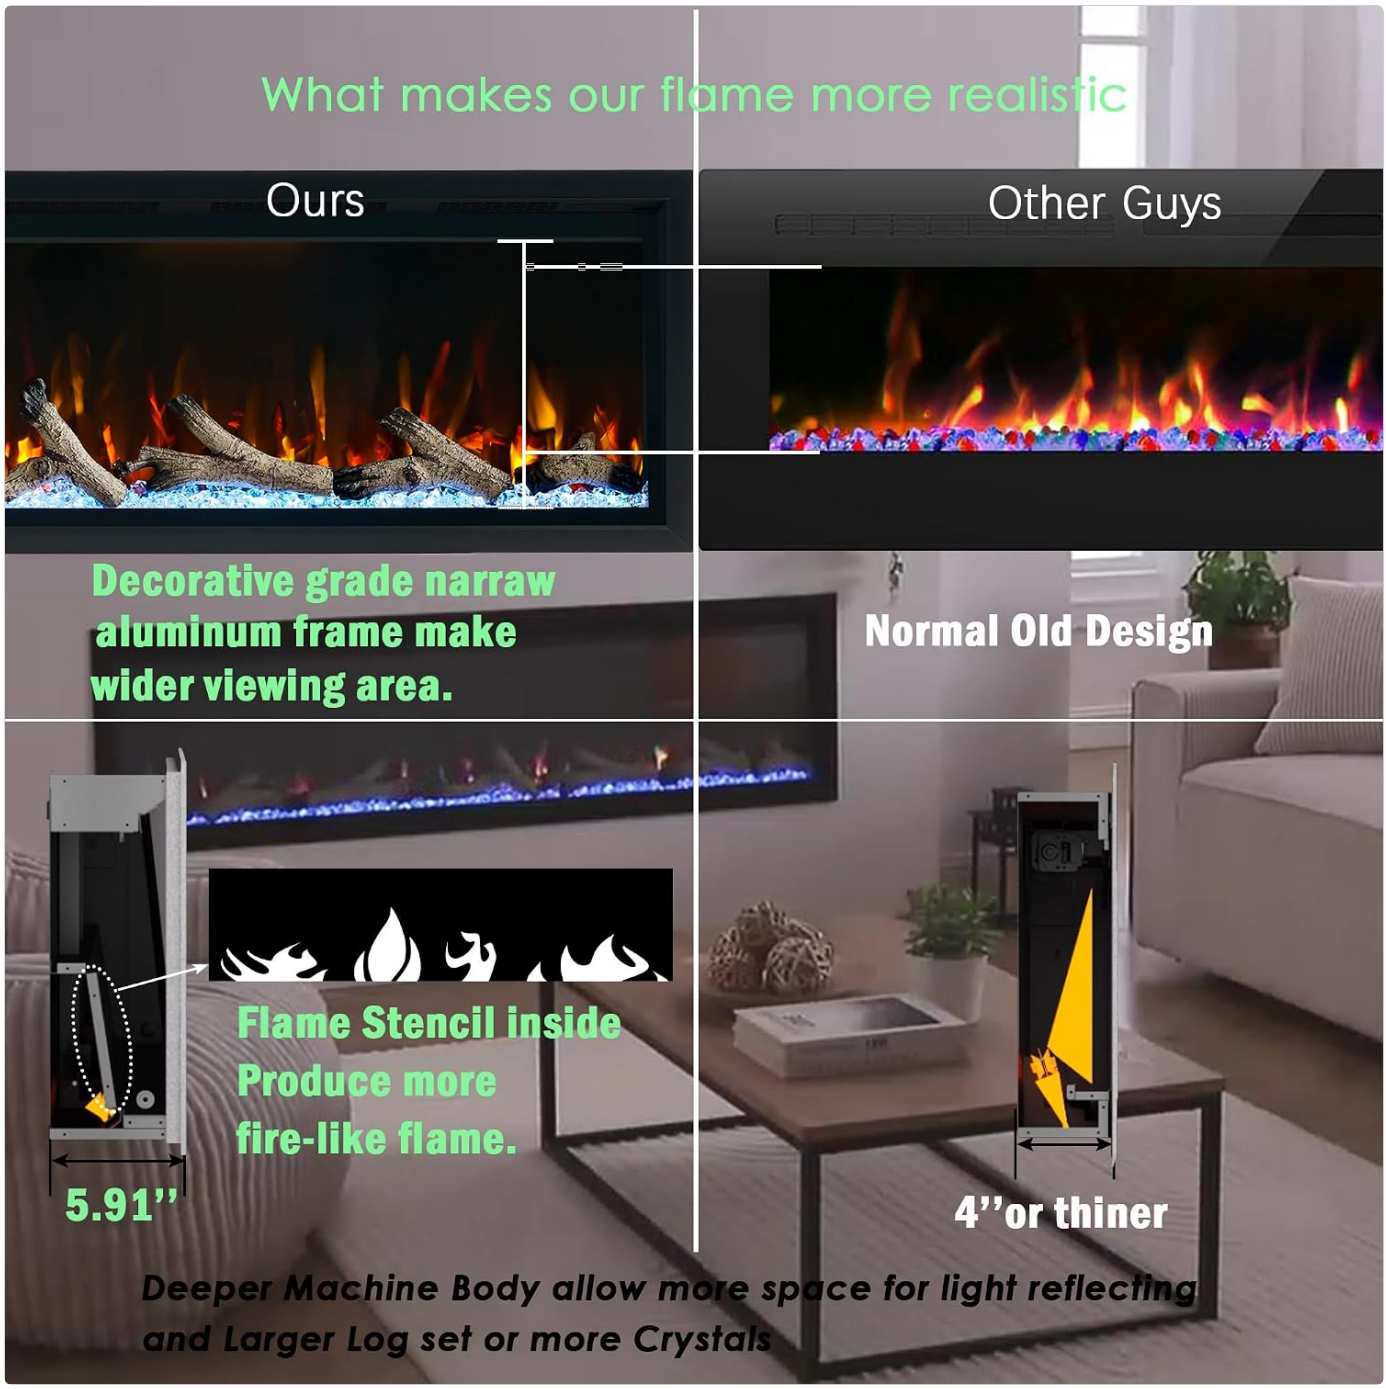


Image: A side-by-side comparison demonstrating the enhanced flame realism of the Unineo fireplace due to its deeper machine body and flame stencil, compared to thinner models.

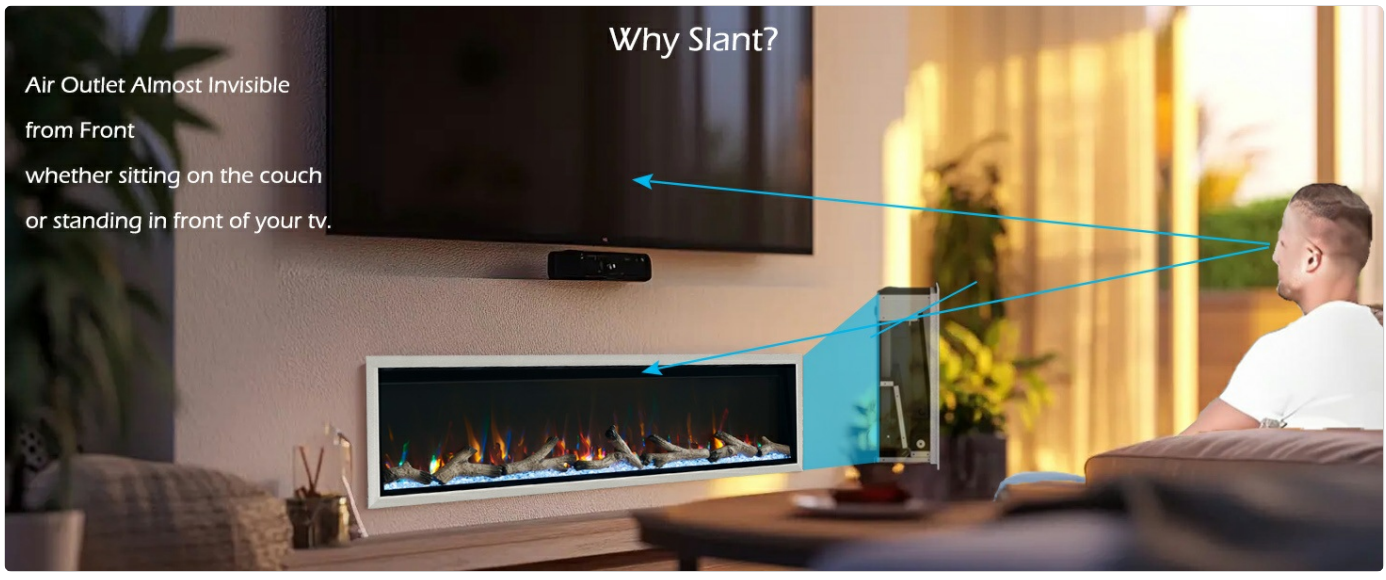


Image: An illustration explaining the "Why Slant?" design, showing how the air outlet is almost invisible from the front, whether sitting or standing.

Heat Output

The 1500W infrared quartz heater provides 5118 British Thermal Units (BTU) of heat. While effective for warming a cool room, it is not intended as a primary heat source.



Image: A diagram comparing the heat distribution of common electric heaters versus the Unineo 1500W Infrared Quartz Heater, illustrating its effective heat output.

Product Overview Video

Your browser does not support the video tag.

Video: An overview of the Unineo Electric Fireplace, demonstrating its features and functionality.

Unique Features Video

Your browser does not support the video tag.

Video: This video highlights the unique design elements and advanced features that differentiate the Unineo Electric Fireplace from other models.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Always disconnect power before cleaning. Use a soft, damp cloth to clean the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Air Vents:** The hidden air vents are designed to minimize dust accumulation. Periodically inspect and gently clean any visible dust from the vents using a soft brush or vacuum cleaner attachment.
- **Glass Panel:** Clean the glass panel with a soft cloth and a non-abrasive glass cleaner.
- **Light Bulbs:** The flame effect uses LED technology, which typically does not require replacement. If any issues arise, contact customer support.

Troubleshooting

If you experience issues with your fireplace, refer to the following common solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, circuit breaker tripped, power cord not fully plugged in.	Check power outlet, reset circuit breaker, ensure power cord is securely plugged in.
No heat output.	Heater function not activated, thermostat set too low, air vents blocked.	Activate heater via remote/touch panel, increase thermostat setting, ensure air vents are clear.
Flame effect not working.	Flame effect turned off, internal component issue.	Ensure flame effect is turned on. If issue persists, contact customer support.
Remote control not responding.	Dead batteries, remote out of range, child lock engaged.	Replace batteries, ensure remote is within range, disable child lock.

If the problem persists after attempting these solutions, please contact Unineo customer support.

Specifications

Feature	Detail
Brand	Unineo
Model Name	72 Inch Electric Fireplace
Model Number	3d2b3371-2d48-422d-96a2-9ef39c4fd461
Power Source	Corded Electric
Product Dimensions (D x W x H)	5.91"D x 72"W x 17"H
Material	Aluminum
Finish Type	Anodized
Installation Type	Wall Mount, Recessed
Heat Output	5118 British Thermal Units (1500W)
Special Features	Anodized Aluminum Alloy Frame, Hidden Air Vent, Visual Remote, 12 Flame Colors, 13 Ember Colors, 5 Flame Speed/Intensity Levels, Thermostat, Timer, Child Lock
Heating Element	Quartz
Item Weight	61.1 Pounds
Included Components	Remote Control, Driftwood, Crystal Media

Warranty and Support

This Unineo Electric Fireplace comes with a **Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or contact Unineo customer support.
For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Unineo customer support through the retailer where the product was purchased or visit the official Unineo website for contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DD7GDRM8

More documents and user manuals: **https://manuals.plus/**