Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY RRMCGA328AWSA

ALLIMITY RRMCGA328AWSA Replacement Remote Control Instruction Manual

For Sharp Audio System Models DK-KP85, DK-KP85P, GA328AWSA

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ALLIMITY RRMCGA328AWSA replacement infrared remote control. This remote is designed to be compatible with specific Sharp Audio System models, including DK-KP85, DK-KP85P, and GA328AWSA. Please read this manual thoroughly to ensure proper use and functionality.

2. Setup

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Slide the battery cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, ready for battery insertion.

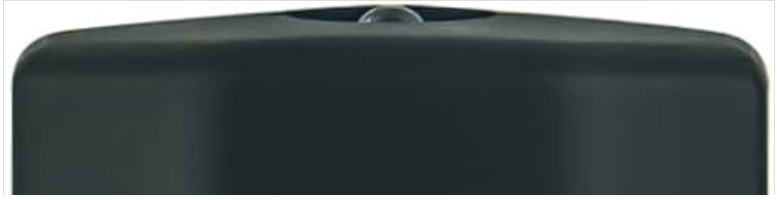






Image: Back of the remote control with the battery compartment securely closed.

2.2 Initial Use

This remote control operates using infrared (IR) technology. No programming or pairing is required. Once batteries are installed, the remote is ready for use with compatible Sharp Audio Systems.

3. Operating Instructions

To operate your audio system, aim the remote control directly at the infrared sensor on the Sharp Audio System unit. Ensure there are no obstacles between the remote and the audio system's sensor.





Image: Front view of the ALLIMITY RRMCGA328AWSA remote control, displaying the full button layout.

3.1 Button Functions Overview

- **ON/STAND-BY (Red Button):** Powers the audio system on or off (to standby mode).
- **OPEN/CLOSE:** Opens or closes the disc tray (for CD players).
- **Numeric Keypad (0-9, 10+):** Directly select tracks, radio presets, or input numbers.
- **MUTE:** Mutes or unmutes the audio output.
- **+ VOL -:** Adjusts the volume level up or down.
- **TUNER:** Selects the radio tuner input.
- **CD/USB:** Selects the CD or USB input source.
- **AUDIO IN:** Selects the auxiliary audio input.
- **iPod:** Selects the iPod input source.
- **X-BASS:** Activates or deactivates the X-BASS (extra bass) feature.
- **BASS/TREBLE:** Accesses bass and treble adjustment settings.
- **PLAY MODE:** Cycles through different playback modes (e.g., repeat, shuffle).
- **FOLDER (Up/Down Arrows):** Navigates through folders on USB or iPod devices.
- **TUNING (Up/Down Arrows):** Tunes radio frequencies up or down.
- **PRESET (Up/Down Arrows):** Navigates through stored radio presets.
- **ENTER:** Confirms selections or enters menus.
- **REWIND/FAST FORWARD (|<>|):** Skips tracks or fast forwards/rewinds during playback.
- **PLAY/PAUSE (> / ||):** Starts or pauses playback.
- **STOP (Square):** Stops playback.
- **CLOCK/TIMER:** Accesses clock and timer settings.
- **MEMORY:** Stores radio presets or other settings.
- **BT STAND-BY:** Puts the Bluetooth function into standby mode.
- **DIMMER:** Adjusts the brightness of the audio system's display.

- **CLEAR:** Clears entries or cancels operations.
- **SLEEP:** Sets a sleep timer for automatic power-off.
- **DISPLAY:** Changes the information displayed on the audio system's screen.
- **BLUETOOTH PAIRING (Blue Button):** Initiates Bluetooth pairing mode.
- **iPod/CD/USB Control Section (MENU, PLAY/PAUSE, STOP):** Dedicated controls for specific media sources.

4. Maintenance

4.1 Battery Replacement

When the remote control's range decreases or buttons become unresponsive, it is time to replace the batteries. Follow the battery installation steps in Section 2.1. Always replace both batteries simultaneously with new ones of the same type (AAA).

4.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

5. Troubleshooting

- **Remote not responding:**
  - Ensure the remote is pointed directly at the audio system's IR sensor.
  - Check for any obstacles blocking the signal path.
  - Verify that the batteries are correctly installed with the correct polarity.
  - Replace old batteries with new ones.
- **Limited range or intermittent response:**
  - Replace the batteries.
  - Ensure the remote's IR emitter and the audio system's IR receiver are clean and free from dust.
  - Avoid using the remote in areas with strong infrared interference (e.g., direct sunlight, certain types of fluorescent lighting).
- **Specific function buttons not working:**
  - Ensure the audio system is set to the correct input source for that function (e.g., CD button will only work if the system is in CD mode).
  - Some functions may require the audio system to be in a specific state (e.g., a disc must be loaded for playback controls).

6. Specifications

Model Number	RRMCGA328AWSA (GA328AWSA)
Compatible Brands	Sharp

Compatible Audio Systems	DK-KP85, DK-KP85P, GA328AWSA
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Material	Plastic
Dimensions	Approximately 5 x 1 x 0.6 inches (12.7 x 2.54 x 1.52 cm)
Item Weight	Approximately 1 ounce (28 grams)





Image: Dimensions of the remote control.

7. Warranty and Support

For any questions, concerns, or support regarding your ALLIMITY RRMCGA328AWSA replacement remote control, please contact the seller directly through the platform where the purchase was made. Information regarding specific warranty terms may be available from the seller at the time of purchase.

© 2024 ALLIMITY. All rights reserved. Sharp is a registered trademark of Sharp Corporation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DDCLZHHB

More documents and user manuals: **https://manuals.plus/**