Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

iJoy DS20171-AMZN

iJoy Disney Lilo and Stitch Wireless Mouse User Manual

Model: DS20171-AMZN | Brand: iJoy

Introduction

Thank you for choosing the iJoy Disney Lilo and Stitch Wireless Mouse. This ergonomic and compact mouse is designed to provide seamless navigation and productivity, featuring an adorable Lilo & Stitch design. This manual will guide you through the setup, operation, and maintenance of your new wireless mouse.





Image: Top view of the iJoy Disney Lilo and Stitch Wireless Mouse, showcasing the vibrant character design on a black background.

What's in the Box

- Wireless Computer Mouse
- USB Dongle



Image: The retail packaging for the iJoy Disney Lilo and Stitch Wireless Mouse, indicating the inclusion of the USB receiver and ergonomic design.

Setup Guide

1. Battery Installation

The iJoy Disney Lilo and Stitch Wireless Mouse requires one (1) AA battery (not included). To install the battery:

1. Locate the battery compartment on the underside of the mouse.
2. Slide open the battery cover.
3. Insert one AA battery, ensuring correct polarity (+/-).
4. Close the battery cover securely.



Image: The bottom view of the wireless mouse, highlighting the battery case and the slot for the USB receiver.

2. Connecting the USB Receiver

The mouse connects wirelessly via a USB receiver. No additional software or downloads are required.

1. Locate the USB receiver, typically stored within the battery compartment of the mouse for safekeeping.
2. Plug the USB receiver firmly into an available USB port on your computer, laptop, or mini PC.
3. Ensure the receiver is fully inserted for proper connection.

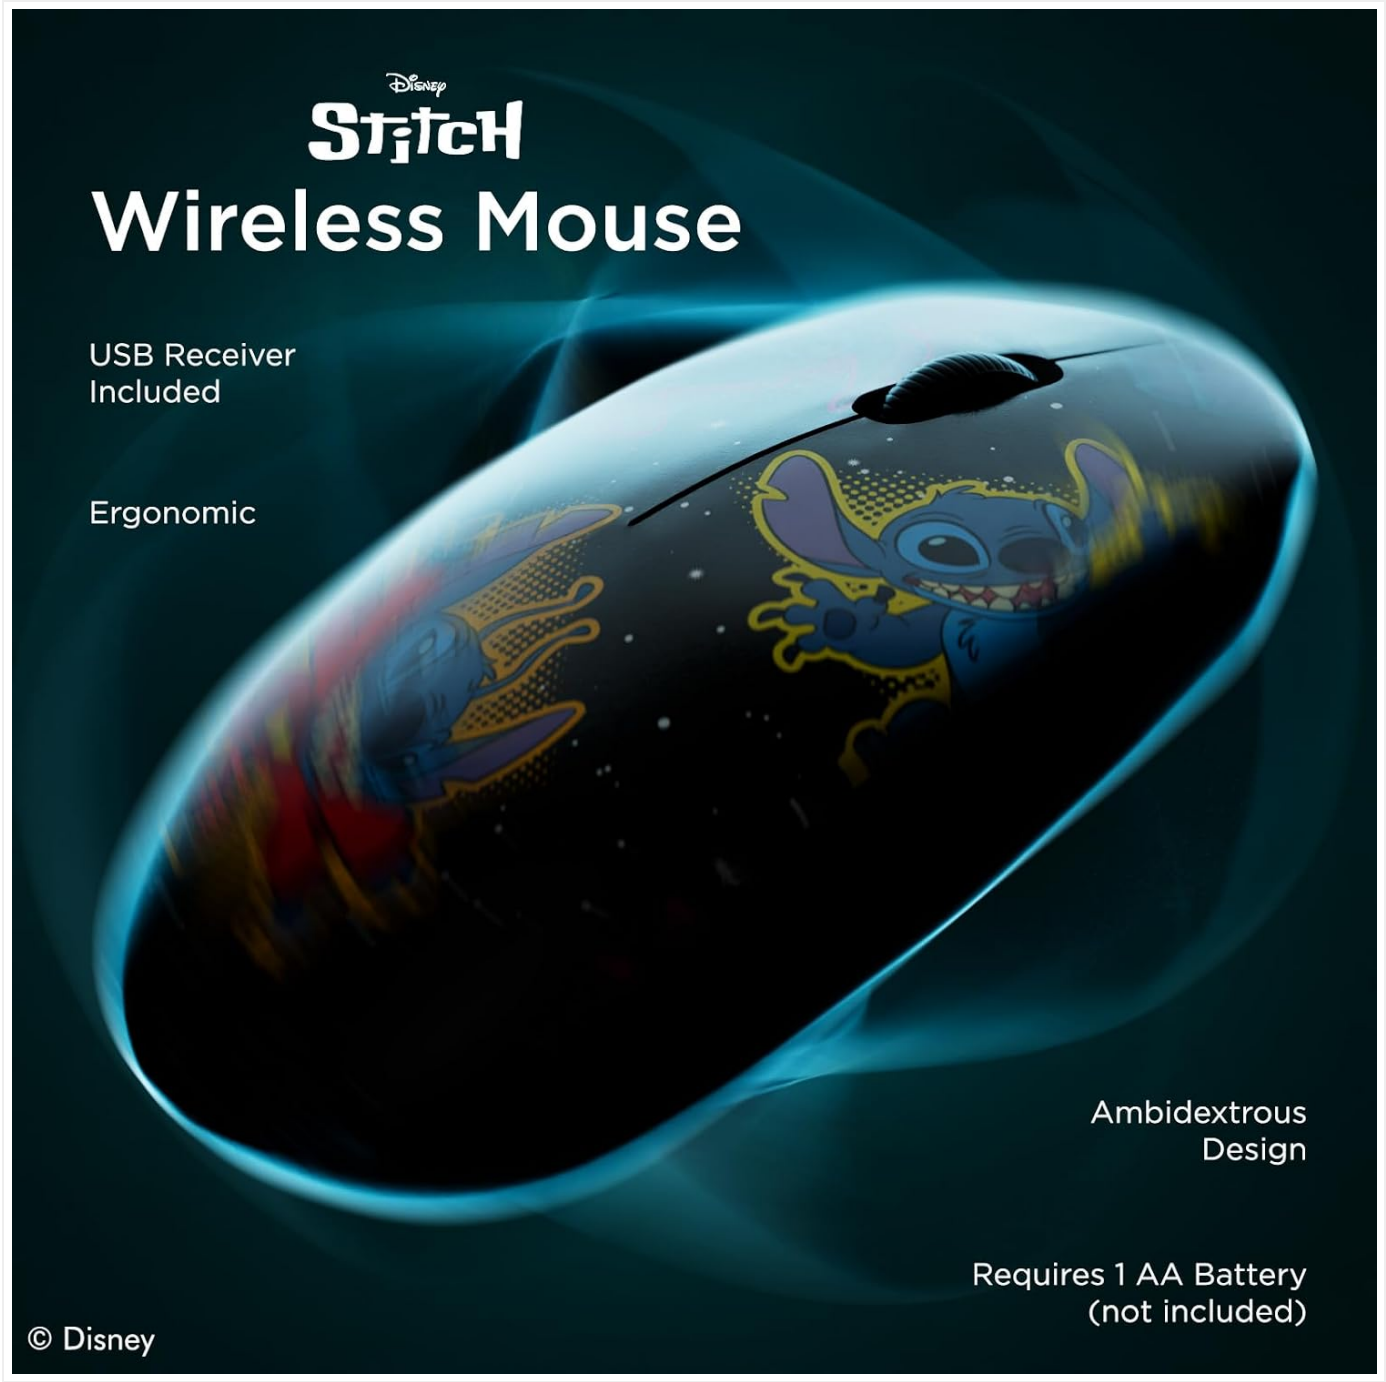


Image: The iJoy Disney Lilo and Stitch Wireless Mouse shown with its USB receiver, emphasizing its wireless and ergonomic features.

Operating Your Mouse

Basic Functionality

Once the USB receiver is connected and the battery is installed, your computer should automatically detect the mouse. You can then use it for navigation and clicking.

- **Left Click:** Primary action, typically for selecting items or opening links.
- **Right Click:** Opens contextual menus.
- **Scroll Wheel:** Scroll up or down through documents and web pages.



Image: A hand demonstrating the ergonomic grip on the iJoy Disney Lilo and Stitch Wireless Mouse while in use with a laptop.

Ergonomic and Ambidextrous Design

The mouse is designed for ergonomic comfort, reducing strain during extended use. Its ambidextrous design ensures comfortable use for both right-handed and left-handed users.



Image: A hand positioned on the iJoy Disney Lilo and Stitch Wireless Mouse, illustrating its comfortable ambidextrous design suitable for both left and right-handed users.

Maintenance

To ensure the longevity and optimal performance of your wireless mouse, follow these maintenance tips:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace the AA battery when the mouse performance degrades or it stops responding.
- **Storage:** When not in use for extended periods, remove the battery to prevent leakage. Store the mouse and USB receiver in a cool, dry place.
- **Handling:** Avoid dropping the mouse or exposing it to extreme temperatures or moisture.

Troubleshooting

If you encounter issues with your iJoy Disney Lilo and Stitch Wireless Mouse, try the following solutions:

- **Mouse Not Responding:**
  - Ensure the AA battery is correctly installed and has sufficient charge. Replace if necessary.
  - Verify that the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port if available.
  - Restart your computer.
- **Intermittent Connection:**
  - Ensure there are no large metallic objects or other wireless devices causing interference between the mouse and the receiver.
  - Move the mouse closer to the USB receiver.
- **Cursor Movement is Erratic or Slow:**
  - Clean the optical sensor on the bottom of the mouse with a soft, dry cloth.
  - Ensure you are using the mouse on a suitable surface (e.g., a mouse pad).

Note: As mentioned by users, ensure the USB receiver is connected very well to your computer for proper detection.

Specifications

Product Dimensions	4 x 2.5 x 0.1 inches
Item Weight	3.17 ounces
Model Number	DS20171-AMZN
Brand	iJoy
Color	Stitch Galaxy
Connectivity Technology	Bluetooth, USB
Special Feature	Portable, Ergonomic Design
Movement Detection Technology	Laser
Manufacturer	Quest USA Corp
Country of Origin	China
First Available	August 16, 2024

Warranty and Support

This iJoy product is designed and tested to high-quality standards for worry-free use. For any product-related inquiries or support, please refer to the contact information provided with your purchase or visit the official iJoy website.
Please retain your proof of purchase for warranty claims, if applicable.

© 2024 iJoy. All rights reserved. Disney elements © Disney.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DDCRLJ6Z

More documents and user manuals: **https://manuals.plus/**