Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KMMKGG 3039 DB BLACK

KMMKGG 15-Inch Large Digital Wall Clock User Manual

Model: 3039 DB BLACK

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your KMMKGG 15-Inch Large Digital Wall Clock, Model 3039 DB BLACK. This atomic clock features a large display, automatic time synchronization, and multiple display modes for time, date, day of the week, and indoor temperature.



Image: Front view of the KMMKGG 15-inch digital wall clock, showing the time, day, and date.

Package Contents

- KMMKGG 15-Inch Large Digital Wall Clock
- AA Batteries (6 included)
- Instruction Manual (this document)
- Wall mounting hardware (if applicable, check packaging)

Setup

1. Battery Installation

The clock requires six AA batteries for operation. These are included with your purchase.

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert six AA batteries, ensuring correct polarity (+ and - terminals).
4. Close the battery compartment cover securely.



Image: Rear view of the clock showing the battery compartment and installed AA batteries.

A low battery symbol will appear on the display when batteries need replacement.

2. Placement Options

Your clock can be placed on a tabletop or mounted on a wall.

- **Tabletop Placement:** Extend the integrated stand on the back of the clock to position it on a flat surface.
- **Wall Mounting:** Use the hanging holes on the back of the clock. Wall mounting hardware may be included. Ensure the clock is securely fastened to the wall.



Image: Illustration of wall mounting and tabletop stand options.

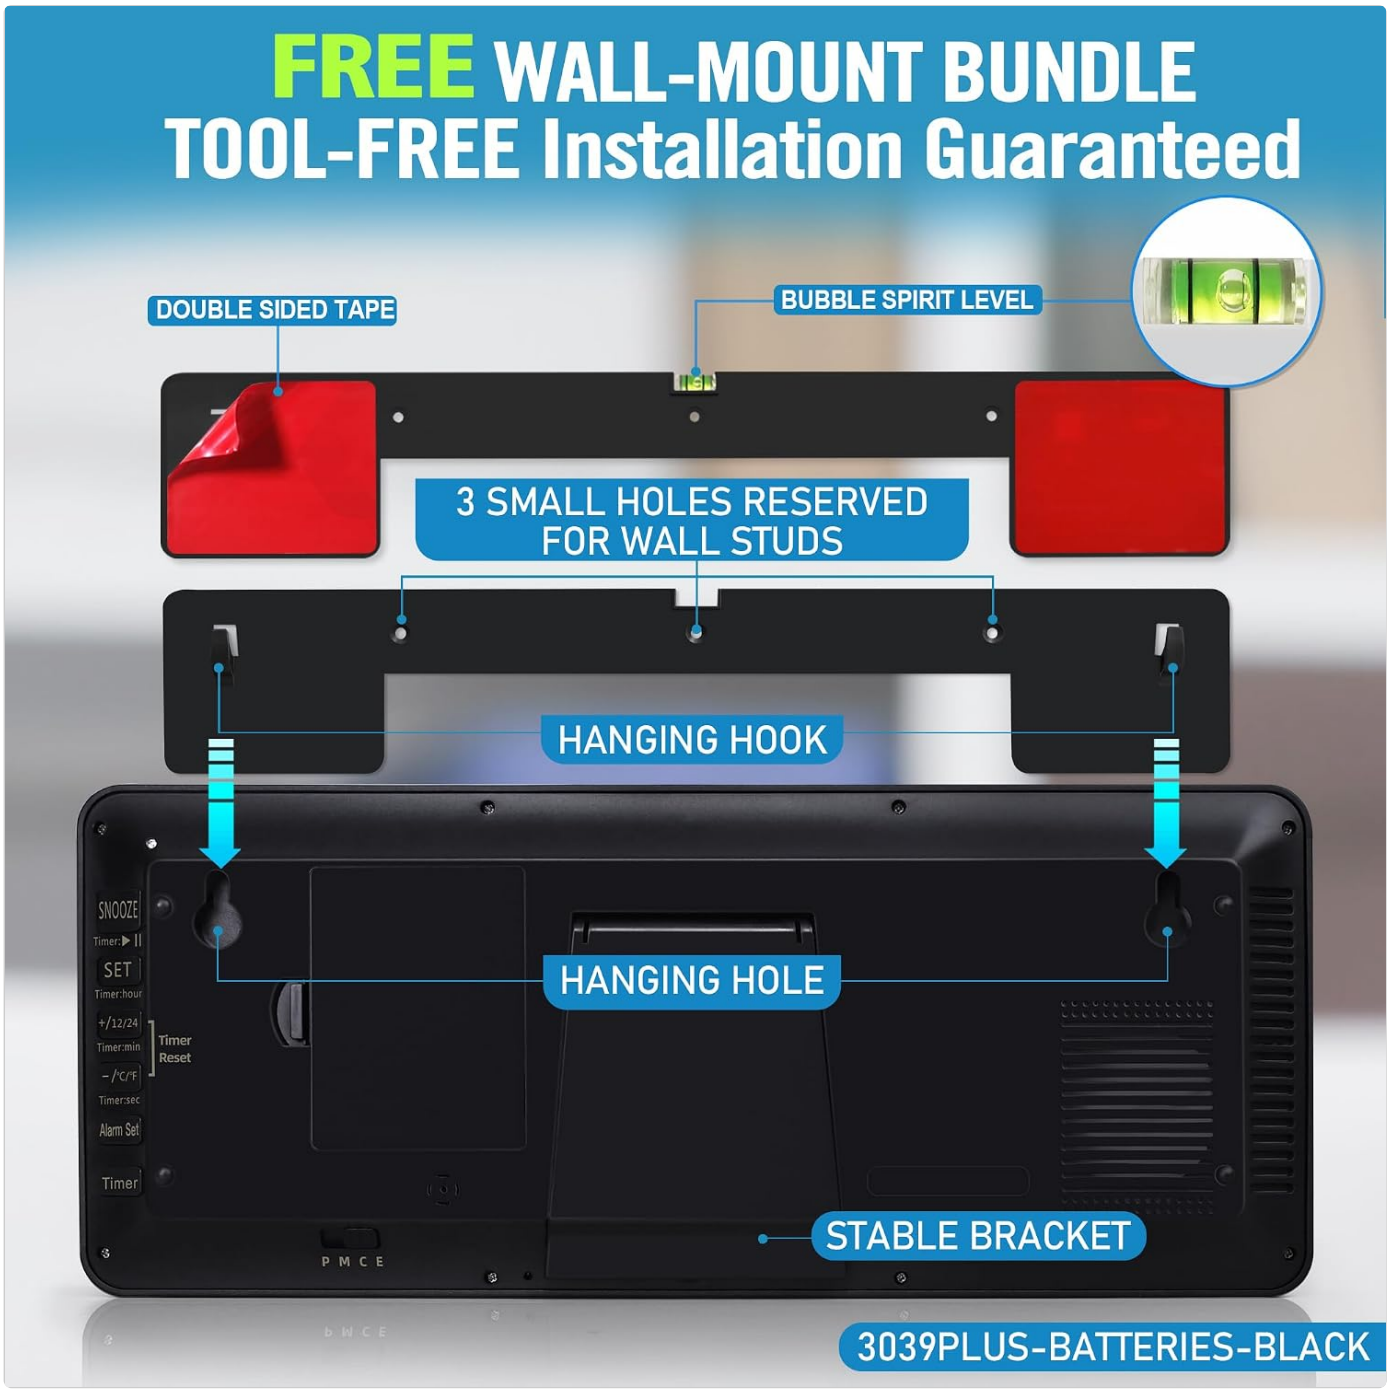


Image: Detailed view of wall mounting components and instructions.

Operating Instructions

1. Atomic Time Synchronization

This clock is designed to automatically synchronize with the official U.S. time standard via the NIST's Colorado atomic signal tower. Upon initial power-up or after battery replacement, the clock will attempt to receive the atomic signal. This process may take several minutes or hours depending on your location and signal strength. Ensure the clock is placed in an area with good reception, away from large metal objects or electronic interference.



Image: Illustration of the atomic time synchronization process.

2. Display Modes and Settings

The clock offers various display options and settings:

- **Time Display:** Choose between 12-hour (AM/PM) or 24-hour format. Refer to the clock's buttons (e.g., "12/24H" or "SET" button) for adjustment.
- **Date and Day of the Week:** The clock displays the current date and day of the week. This information is automatically updated with the atomic time signal.
- **Indoor Temperature:** The clock displays the indoor temperature, switchable between Celsius (°C) and Fahrenheit (°F).
- **Auto DST (Daylight Saving Time):** The clock automatically adjusts for Daylight Saving Time. This feature can typically be toggled On/Off using a dedicated button or through the settings menu.
- **Time Zone Selection:** The clock supports multiple U.S. time zones (PST, MST, CST, EST). Select your local time zone using the appropriate button (e.g., "ZONE" or "SET" button).
- **Display Cycle:** The day and temperature display can be set to show alone or alternate every 10 seconds. Consult

the manual's specific button functions for this setting.

- **Brightness Levels:** The clock may feature adjustable brightness levels for the display.



Image: Overview of multifunctional features including time, date, temperature, and atomic synchronization.

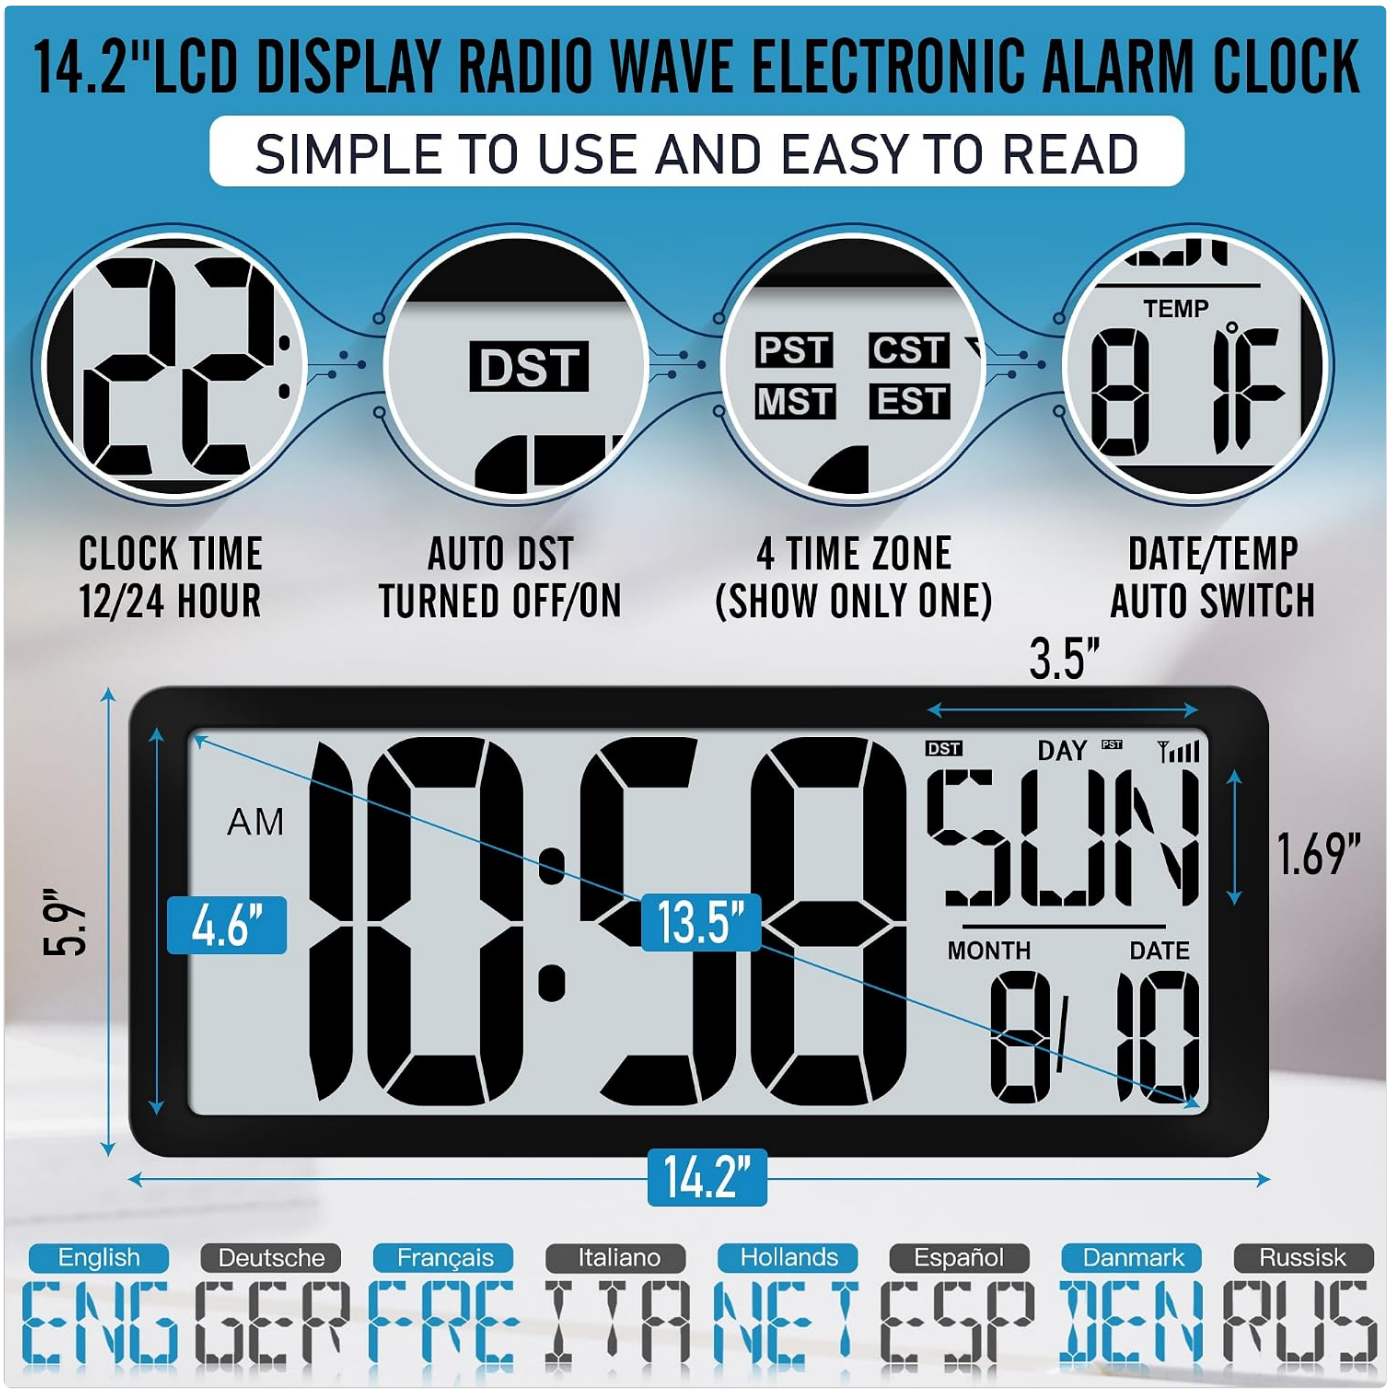


Image: Detailed view of the LCD display and its various indicators.

3. Alarm Clock Function

The clock includes an alarm function. To set the alarm:

1. Press the "Alarm Set" button (or similar, refer to physical buttons on the clock).
2. Use the "+" and "-" buttons to adjust the alarm hour.
3. Press "Alarm Set" again to confirm the hour and move to minutes.
4. Use the "+" and "-" buttons to adjust the alarm minutes.
5. Press "Alarm Set" to confirm and activate the alarm. An alarm icon should appear on the display.
6. To deactivate the alarm, press the "Alarm Set" button until the alarm icon disappears.
7. The snooze function can be activated by pressing the "SNOOZE" button when the alarm sounds.



Image: Visual representation of the clock's alarm mode.

4. Timer Function

The clock also features a timer function, useful for various activities.

1. Press the "Timer" button (or similar) to enter timer mode.
2. Use the "+" and "-" buttons to set the desired countdown time.
3. Press "Start/Stop" (or similar) to begin the countdown.
4. Press "Start/Stop" again to pause/resume the timer.
5. Press "Reset" (or similar) to clear the timer.



Image: Visual representation of the clock's timer mode.

Maintenance

1. Battery Replacement

When the low battery indicator appears on the display, replace all six AA batteries promptly to ensure continuous and accurate operation. Refer to the "Battery Installation" section for detailed steps.

2. Cleaning

To clean the clock, gently wipe the display and casing with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or spray cleaners directly on the clock, as these may damage the finish or internal components.

Troubleshooting

- **Clock not displaying or displaying incorrectly:**

- Check if batteries are correctly installed and not depleted. Replace if necessary.
- Ensure the battery compartment cover is securely closed.

- **Atomic time not synchronizing:**
  - Place the clock near a window or in an open area, away from electronic devices that may cause interference.
  - Allow sufficient time (up to 24 hours) for the clock to receive the signal, especially during initial setup or after battery changes.
  - The signal is strongest at night.
- **Display is dim or flickering:**
  - Check battery level and replace if low.
  - Adjust display brightness settings if available.
- **Incorrect time zone displayed:**
  - Manually set the correct time zone using the dedicated time zone button or settings menu.

Specifications

Brand	KMMKGG
Model Number	3039 DB BLACK
Display Type	Multi-display Digital LCD
Dimensions	14.2"W x 5.9"H
Power Source	Battery Powered (6 AA batteries, included)
Operation Mode	Atomic (Radio-controlled)
Material	Acrylonitrile Butadiene Styrene (ABS) Plastic
Special Features	Cordless, Auto DST, Alarm Clock, Timer, Temperature Display (°C/°F), 12/24H Time, Multiple Time Zones
Mounting Type	Wall Mount / Tabletop
Item Weight	2.09 pounds

Warranty and Support

This KMMKGG product comes with a**Lifetime Warranty**. For any product inquiries, technical support, or warranty claims, please contact KMMKGG customer service through the retailer's platform or the contact information provided with your purchase.
Please retain your proof of purchase for warranty purposes.

© 2024 KMMKGG. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DDJ9DVXD

More documents and user manuals: **https://manuals.plus/**