SENZER SG600

SENZER SG600 Wireless Gaming Headset Instruction Manual

Model: SG600 | Brand: SENZER

1. INTRODUCTION

Thank you for choosing the SENZER SG600 Wireless Gaming Headset. This manual provides essential information for setting up, operating, and maintaining your headset to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

Image: The SENZER SG600 Wireless Gaming Headset displayed on a stand in a gaming environment.

2. PRODUCT OVERVIEW

The SENZER SG600 is a versatile wireless gaming headset designed for an immersive audio experience across multiple platforms. Key features include:

- **Dual Connectivity:** Supports 2.4GHz wireless for PC, PS5/PS4, and Bluetooth 5.3 for mobile devices (Macbook Air/Pro, iPad, smartphones).

- **3D Surround Sound:** Enhanced audio perception for an immersive gaming experience.
- **Noise-Canceling Microphone:** Retractable, flexible omnidirectional microphone with high-quality noise cancellation for clear communication.
- **Long Battery Life:** Up to 72 hours of gaming time on a single charge (1200mA battery).
- **7.1 Virtual Surround Sound:** Available via software for Windows 10/11 PCs.
- **3 Preset Equalizer Modes:** Easily switch between Game, Movie, and Music audio profiles.
- **Ergonomic & Foldable Design:** Lightweight with protein leather ear muffs and soft rebound memory foam for comfort, plus a foldable design for portability.

Image: Key features of the SENZER SG600 headset, including low latency, surround sound, and noise-canceling microphone.

Package Contents:

- SENZER SG600 Wireless Gaming Headset
- USB Wireless Adapter
- USB-C Charging Cable
- User Manual

3. CONTROLS AND INDICATORS

Familiarize yourself with the controls located on the headset for easy operation:
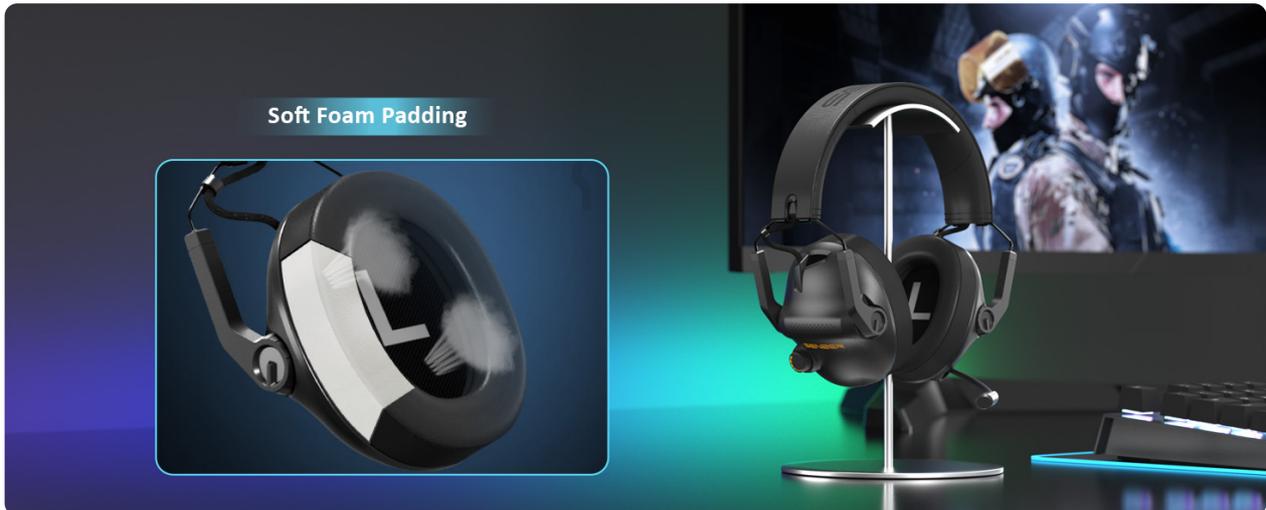

Image: Labeled diagram of the headset's controls, including power, volume, microphone mute, EQ switch, connection switch, and charging port.

1. **Power On/Off Button:** Press and hold to power the headset on or off.
2. **Volume Up/Down Dial:** Rotate to adjust the listening volume.
3. **Microphone Mute/On Button:** Press to mute or unmute the microphone.
4. **EQ Mode Switch:** Press to cycle through Game, Music, and Movie equalizer modes.
5. **USB Adapter / Bluetooth Connection Switch:** Press to switch between 2.4GHz wireless (USB adapter) and Bluetooth modes.
6. **Type-C Charging Port:** Connect the USB-C cable here for charging.

4. SETUP INSTRUCTIONS

4.1. PC, Laptops, Macbook Pro/Air (USB Adapter Mode)

1. Connect the USB Adapter into an available USB port on your computer.

2. Press the Power On/Off button to power on the headset.

3. On your computer, navigate to System Settings > Sound Settings. Choose "SG600" as both the audio output and microphone input device.
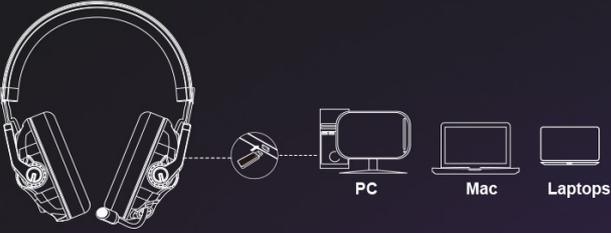

Image: Setup guide for PC and laptops via USB adapter.

4.2. PS4/PS5 Consoles (USB Adapter Mode)

1. Connect the USB Adapter into an available USB port on your console.

2. Press the Power On/Off button to power on the headset.

3. On your console, navigate to the main menu > Sound Settings. Choose "SG600" as the audio output and microphone input. Set the volume control to 100%.

Image: Setup guide for PS4 and PS5 consoles via USB adapter.

4.3. iPad, Mobile Phones (Bluetooth Mode)

1. Press the Power On/Off button to power on the headset.

2. Double-click the "M" (Mode) button to switch to Bluetooth Mode.

3. On your device, open Bluetooth settings, search for "SENZER SG600", and pair with it.

How to Setup With Devices

PS4/PS5 (USB Adapter Mode)

1.Connect the USB Adapter into USB port on console.

2.Press the power button to power on the headset.

3.Fix console settings: main menu - sound settings- choose SG600 as audio output - choose SG600 as microphone input - set volume control to 100%.

Image: Setup guide for mobile devices via Bluetooth.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the Power On/Off button for approximately 3 seconds until the indicator light illuminates (power on) or turns off (power off).

5.2. Volume Adjustment

Rotate the volume dial on the headset to increase or decrease the audio volume.

5.3. Microphone Usage

The microphone is retractable. Pull it out when needed for communication. Use the Microphone Mute/On button to toggle microphone activity. The omnidirectional design ensures clear voice pickup.

Image: The retractable microphone feature with noise cancellation.

5.4. EQ Modes

Press the EQ Mode Switch to select between Game, Music, and Movie modes. Each mode is optimized for different audio experiences.

Image: Visual representation of the three distinct equalizer modes.

5.5. 7.1 Virtual Surround Sound (PC Only)

For Windows 10/11 computers, download the dedicated 7.1 Virtual Surround Sound software from the official SENZER website to enable this feature for an enhanced audio experience.

Image: Interface of the Virtual 7.1 Surround Software.

6. BATTERY AND CHARGING

The headset is equipped with a 1200mA battery, providing up to 72 hours of gaming time. To charge:

1. Connect the provided USB-C charging cable to the headset's Type-C charging port.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light will show charging status. A full charge typically takes about 3 hours.

Note: For safety, the headset will automatically stop working when charging.

Image: Battery capacity and usage duration.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headset. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the headset in a cool, dry place away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headset regularly, even if not in use for extended periods.

Image: The headset in its compact, folded state.

8. TROUBLESHOOTING

- **No Sound:**

  - Ensure the headset is powered on and connected correctly (USB adapter or Bluetooth).
  - Check the volume level on both the headset and your device.
  - Verify that "SG600" is selected as the audio output device in your system settings.

- **Microphone Not Working:**

  - Ensure the microphone is not muted on the headset or in your device's settings.
  - Verify that "SG600" is selected as the microphone input device in your system settings.
  - Check if the microphone is fully extended and positioned correctly.

- **Connection Issues:**

  - For 2.4GHz wireless, ensure the USB adapter is securely plugged in and the headset is in USB adapter mode.

- For Bluetooth, ensure the headset is in Bluetooth pairing mode and your device's Bluetooth is enabled. Try re-pairing if necessary.
- Move closer to your device to ensure you are within the wireless range.

9. SPECIFICATIONS

Feature	Specification
Model Name	Senzer SG600
Connectivity Technology	2.4GHz Wireless, Bluetooth 5.3
Compatible Devices	PC, PS5, PS4, Macbook Air/Pro, iPad, Mobile Devices (Not Xbox Compatible)
Noise Control	Sound Isolation, Passive Noise Isolation
Microphone	Retractable Omnidirectional Noise Canceling Mic
Battery Life	Up to 72 Hours
Charging Time	3 Hours
Bluetooth Range	10 Feet
Item Weight	14.2 ounces (0.4 Kilograms)
Material	Plastic
Special Features	Foldable, Lightweight, Microphone Included, Noise Isolation, Volume Control

10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: Official overview of the SENZER SG600 Wireless Gaming Headset, highlighting its features and design.

11. WARRANTY AND SUPPORT

SENZER products come with a standard manufacturer's warranty. For detailed warranty information, technical support, or customer service inquiries, please visit the official SENZER website or contact their customer support team directly. Keep your purchase receipt for warranty claims.