**Conciseer CS5202-MBK**

# Conciseer 52-Inch Modern Ceiling Fan with Lights

## Model: CS5202-MBK User Manual

## 1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Conciseer 52-inch Modern Ceiling Fan with Lights, Model CS5202-MBK. Please read this manual thoroughly before installation and use to ensure safe and efficient operation. Keep this manual for future reference.

## 2. Safety Information

- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (approximately 13.42 pounds).
- Do not bend the blade holders during installation or cleaning.
- Maintain a minimum clearance of 7 feet from the floor to the bottom of the fan blades.
- Do not operate the fan if any part is damaged.

## 3. Package Contents

Verify that all components are present before beginning installation:

- Ceiling Fan Motor Housing
- Fan Blades (5)
- Downrods (4.92 inch and 9.84 inch options)
- Mounting Bracket
- Canopy

- LED Light Kit
- Remote Control with Wall Mount Holder
- Hardware Pack (screws, wire nuts, washers)
- Instruction Manual

## 4. Setup & Installation

Follow these steps for proper installation:

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Secure the electrical box to the building structure.
2. **Install Mounting Bracket:** Attach the mounting bracket to the outlet box using the provided screws and washers.
3. **Assemble Downrod:** Select the desired downrod length (4.92 inch for lower ceilings, 9.84 inch for higher ceilings). Feed the motor wires through the downrod. Secure the downrod to the motor housing.
4. **Hang Fan Assembly:** Carefully lift the fan assembly and hang it on the mounting bracket.
5. **Wiring Connections:** Connect the fan wires to the household electrical wires according to the wiring diagram in your detailed manual. Ensure all connections are secure with wire nuts.
6. **Secure Canopy:** Slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws.
7. **Attach Fan Blades:** Attach each of the five fan blades to the motor housing using the blade screws. Ensure they are firmly secured.
8. **Install Light Kit:** Connect the light kit wires to the fan motor wires. Secure the light kit to the bottom of the fan motor housing.

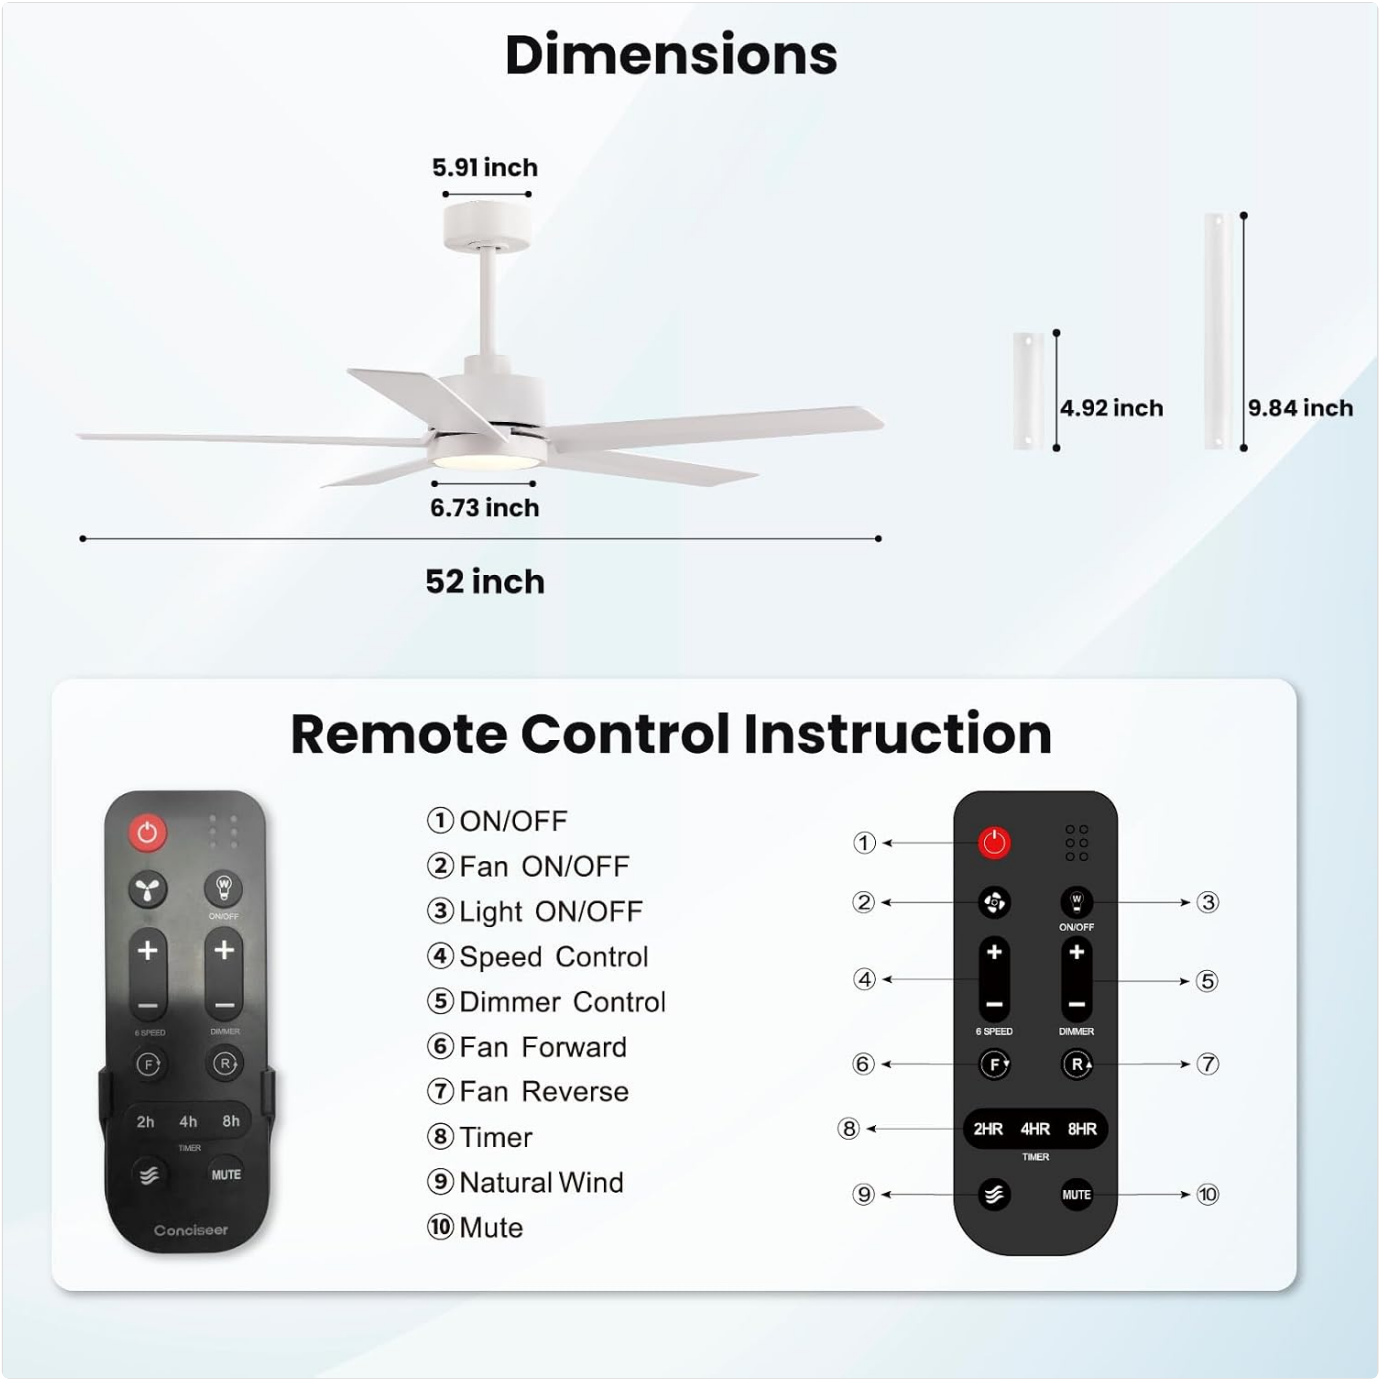



Image: This diagram illustrates the dimensions of the 52-inch ceiling fan, including the downrod lengths (4.92 inches and 9.84 inches), and provides a detailed instruction for the remote control buttons, indicating functions like ON/OFF, speed control, dimmer, timer, and reverse function.

## 5. Operating Instructions

Your Conciseer ceiling fan is operated via the included remote control. Insert two AAA batteries (not included) into the remote control.

### Remote Control Functions:

- **Power ON/OFF:** Press the power button to turn the fan and light on or off.
- **Fan ON/OFF:** Dedicated button to control only the fan.
- **Light ON/OFF:** Dedicated button to control only the light.
- **Speed Control (1-6):** Adjust fan speed from 1 (lowest) to 6 (highest).

- **Dimmer Control:** Adjust the brightness of the LED light. The light is stepless dimmable from 10% to 100%.
- **Color Temperature (3CCT):** Cycle through 3000K (Warm White), 4500K (Natural Light), and 6500K (Cool White) light temperatures.
- **Fan Forward/Reverse:** Changes the direction of blade rotation. Use 'Summer Mode' (forward) for downward airflow to create a cooling effect. Use 'Winter Mode' (reverse) for upward airflow to circulate warm air.
- **Timer:** Set the fan to turn off automatically after 2, 4, or 8 hours.
- **Natural Wind:** Simulates natural breeze by varying fan speeds.
- **Mute:** Silences remote control beeps or fan sounds (if applicable).




Image: A white Conciseer 52-inch ceiling fan with integrated light is shown installed in a modern bedroom. A hand holds the remote control, illustrating the fan's remote operation capabilities.




Image: This graphic explains the fan's reverse function. 'Summer Mode' shows the fan rotating forward, pushing air downward for cooling. 'Winter Mode' shows the fan rotating in reverse, pulling air upward to circulate warm air.




Image: This image displays the ceiling fan's lighting capabilities across three color temperatures: 3000K (warm white, suitable for bedrooms), 4500K (natural light, ideal for kitchens), and 6500K (cool white, often used in living rooms).

## 6. Maintenance

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Cleaning:** Dust the fan blades regularly to prevent dust buildup, which can affect performance and balance.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure.
- **No Lubrication Required:** The DC motor is permanently lubricated and does not require oiling.

## 7. Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Fan does not start | No power to the fan; Loose wire connections; Remote control not paired or batteries dead. | Check circuit breaker; Verify all wire connections are secure; Replace remote batteries or re-pair remote. |
| Fan wobbles | Loose blade screws; Unbalanced blades; Loose mounting bracket. | Tighten all blade screws; Use a balancing kit (not included) to balance blades; Ensure mounting bracket is securely fastened. |
| Light does not work | Loose wire connections to light kit; Faulty LED driver. | Check light kit wiring; Contact customer support if LED driver is suspected faulty. |
| Remote not responding | Dead batteries; Remote not paired with fan. | Replace batteries; Follow pairing instructions in the full manual (if applicable). |
| Fan is noisy | Loose screws; Motor hum; Blades hitting an obstruction. | Tighten all screws; Ensure no obstructions are in the fan's path. The DC motor is designed for quiet operation; excessive noise may indicate an issue. |

## 8. Specifications

- **Brand:** Conciseer
- **Model Name:** CS5202-MBK
- **ASIN:** B0DDL1TCR1
- **Size:** 52 Inch
- **Color:** White
- **Product Dimensions:** 8"D x 51.97"W x 8"H
- **Item Weight:** 13.42 pounds
- **Power Source:** DC
- **Voltage:** 120 Volts (DC)
- **Wattage:** 18 watts (Light)
- **Number of Blades:** 5
- **Number of Power Levels:** 6 (Fan Speeds)
- **Light Features:** 3 CCT Dimmable (3000K, 4500K, 6500K)
- **Control Method:** Remote Control
- **Special Features:** Quiet Operation, Remote Controlled, Timer, Reversible Motor
- **Indoor/Outdoor Usage:** Indoor, Outdoor
- **Recommended Uses:** Air Circulation, Cooling, Drying, Ventilating

## 9. Warranty & Support

Conciseer provides a limited warranty for this product against defects in materials and workmanship. Please refer to the

warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Conciseer customer service through the retailer where the product was purchased or visit the official Conciseer website.
We are committed to providing professional after-sales support and are ready to assist you with any questions during installation or usage.

© 2025 Conciseer. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question