Conciseer CS6502-MWH

Conciseer 65 Inch Ceiling Fan with Light and Remote

Model: CS6502-MWH - Instruction Manual

1. Product Overview

The Conciseer 65 Inch Ceiling Fan with Light and Remote is a modern ceiling fan designed for indoor/outdoor use in various rooms such as bedrooms, living rooms, kitchens, and offices. It features 8 blades, a 24W 3CCT LED light, a 6-speed reversible quiet DC motor, and is controlled via a patent-designed remote.



Figure 1: Conciseer 65 Inch White Ceiling Fan with Light and Remote.

2. Safety Information

Before beginning installation, read all instructions carefully. Ensure power is disconnected at the circuit breaker before wiring. All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician. Do not bend blade holders during installation, balancing, or cleaning. Never insert foreign objects between rotating fan blades.

3. Package Contents

Verify all parts are present before beginning assembly. If any parts are missing or damaged, do not attempt to assemble

or install the fan.

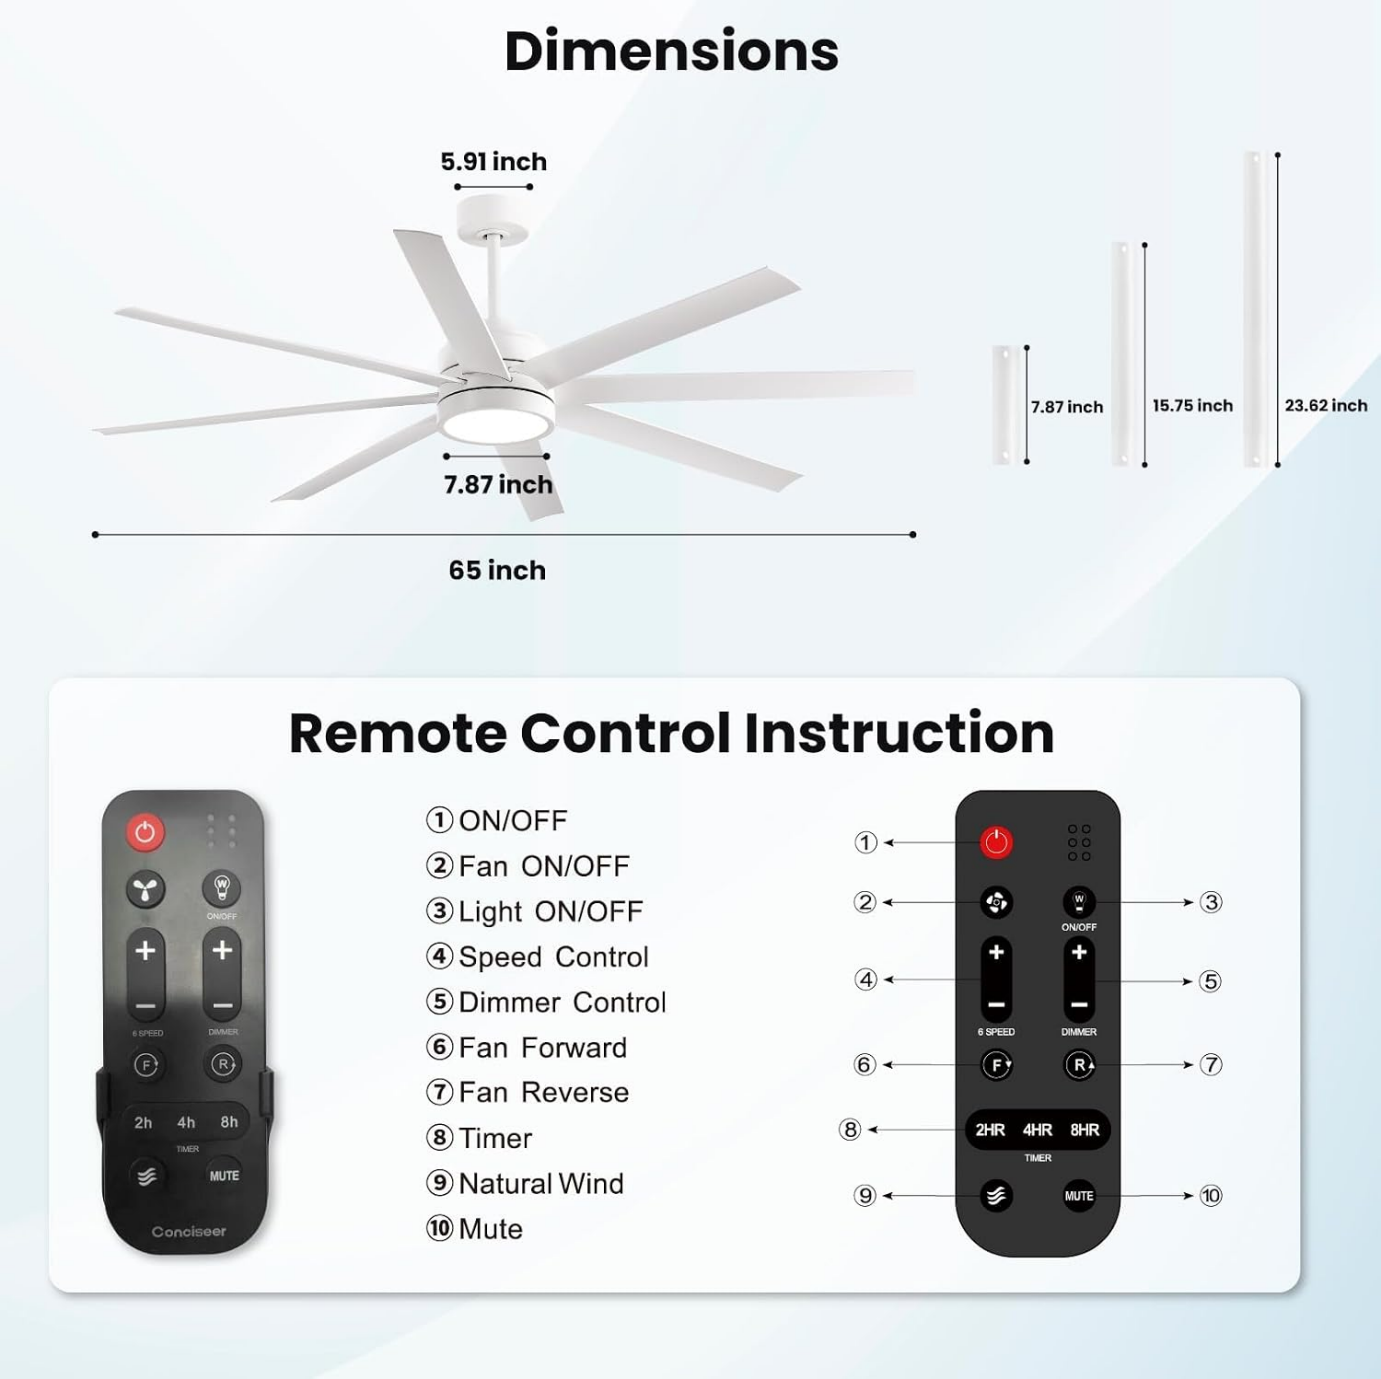


Figure 2: Fan dimensions and remote control layout.

4. Setup and Installation

Follow these steps for proper installation of your ceiling fan. It is recommended to have two people for installation due to the fan's size.

1. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling junction box. Ensure the junction box is securely fastened to the building structure and can support the fan's weight.
2. **Downrod Assembly:** Select the appropriate downrod length (7.87 inch, 15.75 inch, or 23.62 inch) for your ceiling height. Feed the fan wires through the downrod and attach the downrod to the motor housing.
3. **Hanging the Fan:** Carefully lift the fan assembly and hang it from the mounting bracket.

4. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the manual. Ensure all connections are secure.
5. **Remote Receiver Installation:** Insert the remote control receiver into the mounting bracket.
6. **Canopy Installation:** Slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws.
7. **Blade Installation:** Attach each of the 8 fan blades to the motor housing using the provided screws. Ensure they are securely fastened.
8. **Light Kit Installation:** Connect the LED light board to the fan's electrical connector. Secure the light board to the fan and then attach the light cover by twisting it clockwise until it is snug.

For a visual guide on the installation process, please refer to the video below:

Video 1: Detailed installation guide for the Conciseer Ceiling Fan.

5. Operating Instructions

Your Conciseer ceiling fan is operated using the included remote control. The remote allows for independent control of the fan and light functions.



Figure 3: Independent control of fan and light functions.

5.1 Remote Control Functions

- **Fan On/Off:** Press the fan icon button to turn the fan on or off.
- **Light On/Off:** Press the light bulb icon button to turn the light on or off.
- **Fan Speed Control:** Use the '+' and '-' buttons under '6 SPEED' to adjust between 6 fan speeds.
- **Light Dimmer:** Use the '+' and '-' buttons under 'DIMMER' to adjust the brightness of the light.
- **Light Color Temperature:** The light offers 3 color temperatures (3000K, 4500K, 6500K). Cycle through these by pressing the light on/off button repeatedly.
- **Reverse Function (F/R):** Press 'F' for forward (Summer Mode, downward airflow) or 'R' for reverse (Winter Mode, upward airflow). The fan will stop briefly before changing direction.
- **Timer:** Set the fan to turn off automatically after 2, 4, or 8 hours using the '2HR', '4HR', '8HR' buttons.
- **Natural Wind Mode:** Press the wave icon button to activate a simulated natural wind mode.
- **Mute:** Press the 'MUTE' button to silence the remote's beeping sounds.



Figure 4: Six distinct wind speed settings for personalized comfort.



Figure 5: Fan reverse function for seasonal use (Summer Mode: downward airflow; Winter Mode: upward airflow).



Figure 6: Timing function with 2, 4, and 8-hour settings.



Figure 7: Stepless dimmable light from 10% to 100% brightness.



Figure 8: Three adjustable light color temperatures: 3000K (warm), 4500K (natural), and 6500K (cool).

5.2 Quiet Operation

The fan is equipped with a high-quality, low-power DC motor designed for excellent noise reduction, providing a quiet living environment.



Figure 9: Low-noise DC motor for quiet operation.

For a visual demonstration of the remote control functions and fan operation, please refer to the video below:

Video 2: Demonstration of remote control features and fan operation.

6. Maintenance

- **Cleaning:** To avoid damage to the finish, clean the fan with a soft, damp cloth only. Do not use abrasive cleaners or solvents.
- **Blade Cleaning:** Dust the fan blades regularly to prevent dust buildup, which can affect performance and balance.
- **Tightening Screws:** Periodically check all screws for tightness. Retighten as necessary, but do not overtighten.

7. Troubleshooting

- **Fan does not start:** Check that the power is on at the circuit breaker and wall switch. Ensure all wire connections are secure. Verify the remote control batteries are working.
- **Fan makes noise:** Check that all motor housing screws are snug. Ensure the blades are properly installed and tightened. Verify the canopy is securely attached to the mounting bracket.
- **Fan wobbles:** Check that all blade screws are tightened. Ensure the mounting bracket is securely fastened to the ceiling.
- **Light does not work:** Check that the power is on. Verify the light wire connections are secure. If the light is dim, check the dimmer setting on the remote.

8. Specifications

- **Brand:** Conciseer
- **Model Name:** CS6502-MWH
- **Size:** 65 Inch
- **Color:** White
- **Electric Fan Design:** Ceiling Fan
- **Power Source:** DC
- **Style:** Modern
- **Product Dimensions:** 8"D x 65"W x 8"H
- **Room Type:** Bedroom, Dining Room, Home Office, Living Room
- **Special Feature:** Quiet Operation, Remote Controlled, Timer
- **Recommended Uses For Product:** Air Circulation, Cooling, Drying, Ventilating
- **Wattage:** 6 watts (fan motor), 24W (light)
- **Finish Type:** Painted or Lacquered
- **Speed:** 6 RPM (6 speed levels)
- **Indoor/Outdoor Usage:** Indoor
- **Control Method:** Remote
- **Number of Power Levels:** 6
- **Motor Type:** DC
- **Manufacturer:** Conciseer
- **Installation Type:** Ceiling Mount Installation
- **Item Weight:** 24.3 pounds
- **ASIN:** B0DDL4J9X7

9. Warranty and Support

Conciseer provides professional after-sales support. If you have any questions during the installation or usage of your Conciseer ceiling fan, please feel free to contact us. Refer to your purchase documentation for specific warranty details.

© 2026 Conciseer. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I wire the Conciseer CS6502-MWH ceiling fan if I have a red wire in the ceiling with power, and only a white and black wire from the small box?

The provided manual for the Conciseer CS6502-MWH ceiling fan states that "All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician." The...

Read full answer