ALLIMITY CV-AXD7596-SH

ALLIMITY Replacement Remote Control User Manual

For Pioneer AV Receivers: AXD7596, AXD7595, AXD7615, and compatible models

1. Introduction

This manual provides instructions for the ALLIMITY replacement remote control, designed for use with various Pioneer AV Receiver models. This remote control is a direct replacement and does not require any programming or setup. Simply insert batteries to begin operation.

Compatible Pioneer AV Receiver Models:

- AXD7596, AXD7595, AXD7615
- VSX-LX53, VSX-1020-K, VSX-822, VSX-1023-K, VSX-920, VSX-1025-K, VSX-1128-K
- VSX-819H-K, VSX-2020-K, VSX-31, VSX-522, VSX-70, VSX2020K, VSXLX53

2. Setup and Battery Installation

The remote control requires two (2) AAA 1.5V alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No additional setup or programming is required. The remote is ready for use once batteries are installed.





Figure 2.1: Back view of the remote control, illustrating the battery compartment location.

3. Operating Instructions

This section outlines the primary functions of the remote control buttons. Refer to your Pioneer AV Receiver's original manual for specific functions of each button as they relate to your receiver model.





Figure 3.1: Front view of the ALLIMITY replacement remote control.

3.1 Power and Input Selection

- **RECEIVER (Power)**: Turns the AV Receiver on or off.
- **SOURCE**: Cycles through available input sources.
- **BD, DVD, DVR/BDR, HDMI, TV, CD, NET RADIO ADAPTER, iPod USB, TUNER, VIDEO, TV CTRL**: Direct selection buttons for various input sources.
- **INPUT SELECT**: Used to select specific inputs.

3.2 Volume and Mute Control

- **MASTER VOLUME (+/-)**: Adjusts the main volume level of the AV Receiver.
- **MUTE**: Toggles sound muting on and off.

3.3 Navigation and Menu Control

- **Directional Arrows (Up, Down, Left, Right)**: Navigate through menus and options.
- **ENTER**: Confirms selections.
- **HOME MENU**: Accesses the main menu of the AV Receiver.
- **RETURN**: Goes back to the previous screen or menu.
- **TOP MENU, BAND, LIST, TUNE, TOOLS, T EDIT GUIDE, PRESET**: Buttons for specific menu functions and settings.

3.4 Playback Controls

- **Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Back**: Standard playback controls for connected media devices.
- **HDD, PGM, MENU, STATUS**: Buttons related to specific media functions or programming.

3.5 Numeric Keypad and Other Functions

- **0-9 (Numeric Buttons)**: Used for direct input, channel selection, or other numerical entries.
- **CH LEVEL, A.ATT, DIMMER, SLEEP, INFO, DISP**: Buttons for various audio, display, and system settings.
- **AUDIO PARAMETER, VIDEO PARAMETER**: Accesses audio and video settings.
- **LISTENING MODE (AUTO/MCACC/DIRECT, STEREO, STANDARD, ADV SURR)**: Selects different audio listening modes.

4. Maintenance

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V alkaline).
- **Storage**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. Troubleshooting

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA 1.5V alkaline batteries.
  - Ensure there are no obstructions between the remote control and the AV Receiver's infrared sensor.
  - Point the remote directly at the AV Receiver.
- **Limited functionality:**
  - While this remote is a replacement, some advanced or specific functions of the original Pioneer remote may not be fully supported. Refer to the original Pioneer AV Receiver manual for expected functionality.

6. Specifications

Model Number (ALLIMITY)	CV-AXD7596-SH
Compatible Pioneer Models	AXD7596, AXD7595, AXD7615, VSX-LX53, VSX-1020-K, VSX-822, VSX-1023-K, VSX-920, VSX-1025-K, VSX-1128-K, VSX-819H-K, VSX-2020-K, VSX-31, VSX-522, VSX-70, VSX2020K, VSXLX53
Power Supply	2 x AAA 1.5V Batteries (not included)
Product Dimensions	6.69 x 1.97 x 0.39 inches (17 x 5 x 1 cm)
Item Weight	2.08 ounces (59 grams)
Color	Black
Special Feature	No Programming Required

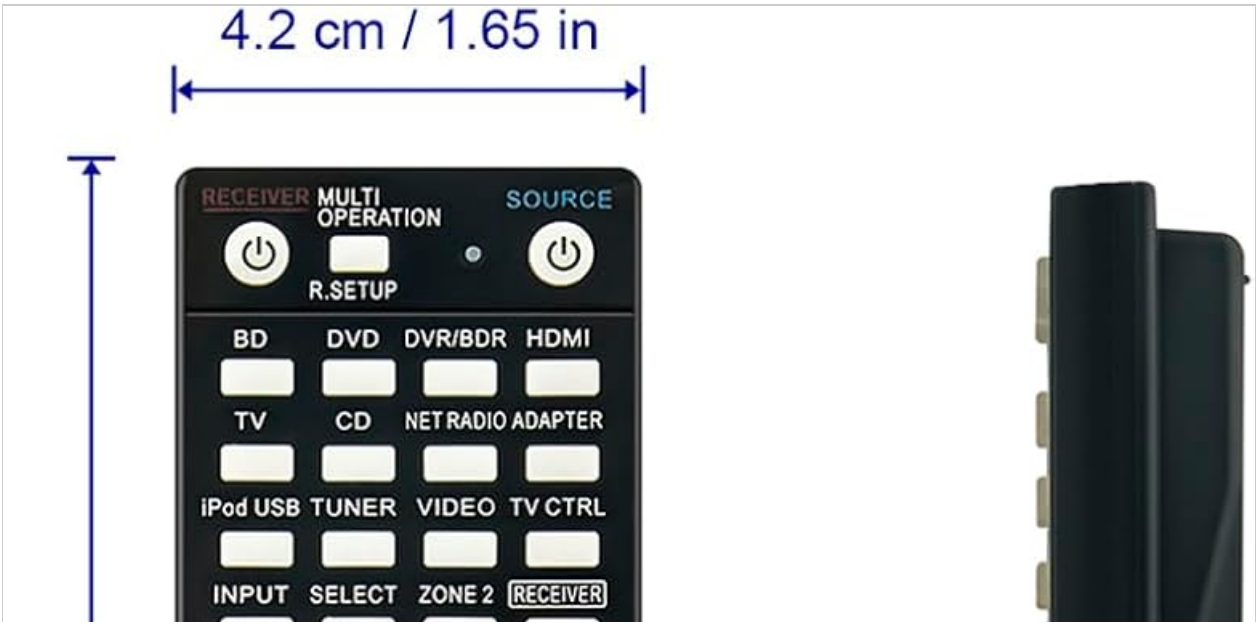




Figure 6.1: Remote control with approximate dimensions.

7. Warranty and Support

For any issues or questions regarding your ALLIMITY replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Keep your purchase receipt for warranty claims, if applicable.

This product is designed as a direct replacement and is intended to function without complex setup. Should you encounter difficulties, please refer to the troubleshooting section or seek assistance from the point of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question