TechniSat 0000/2982

TechniSat VIOLA Wall Socket Radio

Model: 0000/2982 | Brand: TechniSat

INTRODUCTION

Thank you for choosing the TechniSat VIOLA Wall Socket Radio. This compact FM radio is designed for convenience, offering both traditional FM radio reception and modern Bluetooth audio streaming. Its integrated hands-free function allows for easy call management. This manual provides essential information for the safe and efficient use of your device.

SAFETY INFORMATION

- **Electrical Safety:** Ensure the radio is plugged into a standard, properly grounded wall socket. Do not overload the socket. Disconnect from power during electrical storms or when unused for long periods.

- **Water and Moisture:** Do not expose the device to water, rain, or excessive humidity. Avoid using it in bathrooms or near sinks where it could come into contact with water.

- **Ventilation:** Ensure adequate ventilation around the device. Do not cover the ventilation openings.

- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid or aerosol cleaners.

- **Temperature:** Avoid extreme temperatures. Do not place the device near heat sources or in direct sunlight.

- **Children:** Keep the device out of reach of children.

PRODUCT OVERVIEW

The TechniSat VIOLA radio features a compact design with intuitive controls and a clear display.

Controls and Display

The top panel of the radio houses all control buttons, while the front features an LCD segment display.

Simple et facile à utiliser

Grâce à l'affichage LCD, vous pouvez toujours voir la fréquence de la station de radio en cours.

Les six boutons situés sur le dessus permettent une utilisation intuitive.

Image: Top view of TechniSat VIOLA radio showing control buttons for mode, volume, scan, and playback. The top panel features six intuitive buttons for easy control of mode selection, volume adjustment, station scanning, and media playback.

- **MODE Button:** Switches between FM radio and Bluetooth modes.
- **VOL +/- Buttons:** Adjusts the volume level.
- **OK Button:** Confirms selections or answers/ends calls.
- **SCAN Button:** Initiates automatic station scanning in FM mode.
- **Previous/Next Track Buttons:** Skips tracks in Bluetooth mode or navigates presets in FM mode.
- **Play/Pause Button:** Plays or pauses audio in Bluetooth mode.

Réception des programmes radio FM
Grâce à une mémoire pouvant enregistrer 30 stations favorites, vos stations préférées sont accessibles en un clin d'œil.

Image: Close-up of TechniSat VIOLA radio displaying FM frequency. The integrated LCD segment display clearly shows the current FM radio frequency, allowing for easy station identification.

SETUP

Setting up your TechniSat VIOLA radio is straightforward.

1. Power Connection

1. Locate a suitable wall socket.

2. Plug the TechniSat VIOLA radio directly into the wall socket. The device will power on automatically.

Image: TechniSat VIOLA radio plugged into a white wall socket in a kitchen. The TechniSat VIOLA radio is designed for direct connection to a standard wall socket, providing a compact audio solution.

OPERATING INSTRUCTIONS

FM Radio Operation

1. Press the **MODE** button until "FM" appears on the display.
2. Press the **SCAN** button to automatically search for available FM stations. The radio will scan and save up to 30 stations.
3. Use the **Previous**/**Next Track** buttons to cycle through the saved preset stations.
4. Adjust the volume using the **VOL +/-** buttons.

Bluetooth Pairing and Streaming

1. Press the **MODE** button until "BT" (Bluetooth) appears on the display. The radio will enter pairing mode, indicated by a flashing Bluetooth icon or similar.
2. On your smartphone or tablet, enable Bluetooth and search for available devices. Select "TechniSat VIOLA" from the list.
3. Once paired, the Bluetooth indicator on the radio will become solid. You can now stream audio from your

device to the VIOLA radio.

4. Use the **Play/Pause** and **Previous/Next Track** buttons on the radio or your connected device to control playback.

5. Adjust the volume using the **VOL +/-** buttons on the radio or your connected device.

Image: Smartphone streaming music via Bluetooth to TechniSat VIOLA radio, illustrating hands-free function. Stream your favorite music wirelessly from your smartphone or tablet via Bluetooth. The built-in hands-free function allows you to answer calls directly through the radio.

Hands-Free Function

When your smartphone is paired via Bluetooth:

- **Answering a Call:** When an incoming call is received, the radio will ring. Press the **OK** button to answer the call.

- **Ending a Call:** During a call, press the **OK** button to end the conversation.

- **Rejecting a Call:** To reject an incoming call, press and hold the **OK** button for a few seconds.

MAINTENANCE

To ensure the longevity and optimal performance of your TechniSat VIOLA radio, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the exterior of the radio with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

- **Avoid Liquids:** Never spray liquids directly onto the radio or immerse it in water.

- **Storage:** If storing the radio for an extended period, unplug it from the wall socket and store it in a cool, dry place away from direct sunlight.
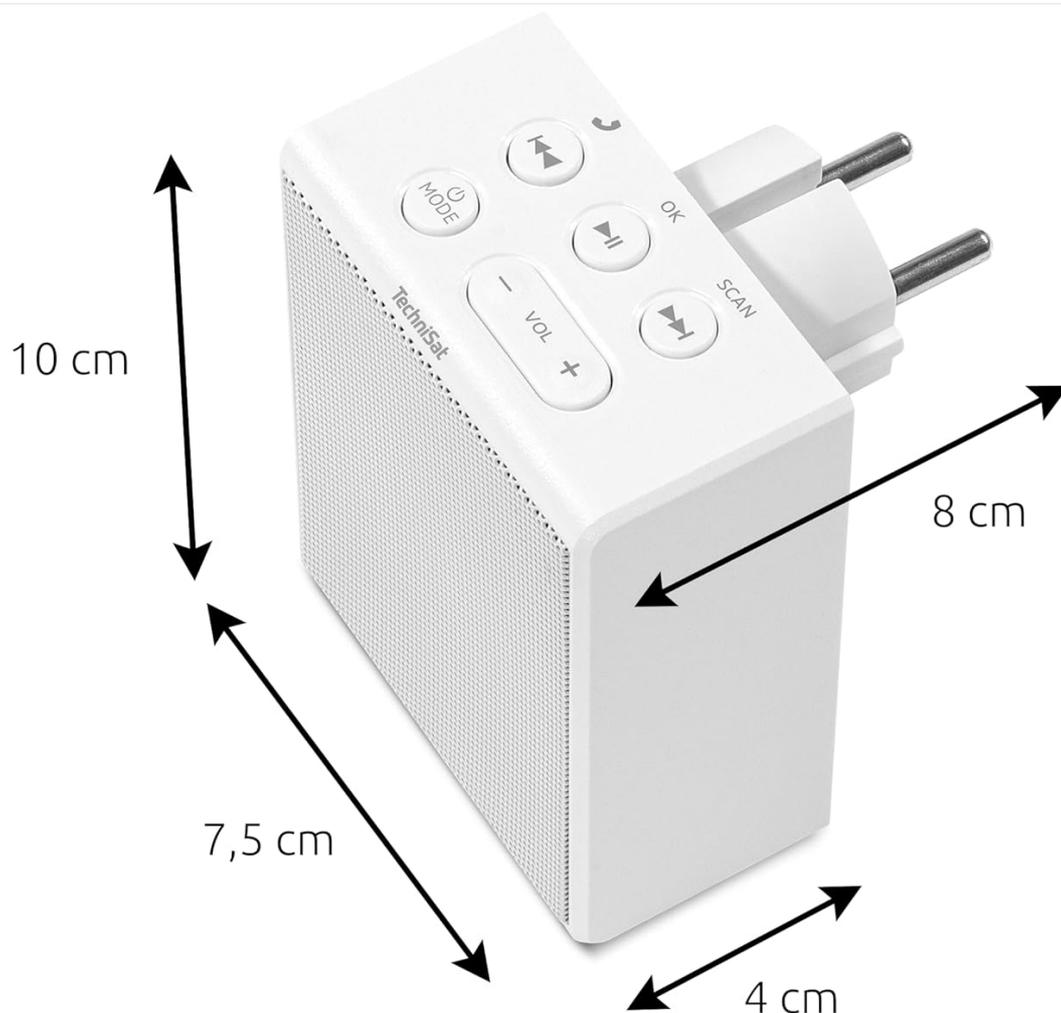
TROUBLESHOOTING

If you encounter issues with your TechniSat VIOLA radio, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Radio not properly plugged in; Wall socket not active.	Ensure the radio is fully inserted into a working wall socket. Test the socket with another appliance.
No sound	Volume too low; Incorrect mode selected.	Increase volume using **VOL +**. Check that the correct mode (FM or BT) is selected.
Poor FM reception	Weak signal; Interference.	Try repositioning the radio or moving it to a different wall socket. Avoid placing near other electronic devices that may cause interference.
Bluetooth not connecting	Radio not in pairing mode; Device too far; Bluetooth already connected to another device.	Ensure the radio is in Bluetooth pairing mode ("BT" flashing). Move your device closer to the radio. Disconnect from other Bluetooth devices. Try restarting both the radio and your device.
Hands-free not working	Bluetooth not connected; Microphone blocked.	Ensure Bluetooth is successfully paired. Check that nothing is obstructing the radio's microphone.

SPECIFICATIONS

Detailed technical specifications for the TechniSat VIOLA Wall Socket Radio.

Compact et flexible

Taille pratique et branchement facile dans la prise électrique.

Image: TechniSat VIOLA radio with dimensions 7.5 cm (width), 10 cm (height), and 8 cm (depth). With its compact dimensions of 7.5 cm (width), 10 cm (height), and 8 cm (depth), the VIOLA radio fits discreetly into any wall socket.

Feature	Detail
Brand	TechniSat
Model Number	0000/2982
Color	White
Connectivity Technology	Bluetooth
Special Features	LCD Segment Display, Integrated Speaker, Hands-Free Kit, FM Radio Reception, Bluetooth Audio Streaming
Compatible Devices	Smartphone, Tablet, MP3 Player, Speaker

Feature	Detail
Power Source	Electric Cable (Wall Socket)
Radio Bands Supported	FM
Tuning Technology	FM
Product Dimensions (L x W x H)	7.5 x 4 x 10 cm
Speaker Output	1.5 W RMS (Mono)
Battery Rechargeable	No

WARRANTY AND SUPPORT

Manufacturer's Warranty: Information not specified in product details. Please refer to your purchase documentation or contact your retailer for specific warranty terms.

Customer Support: For further assistance, technical support, or warranty claims, please contact your point of purchase or visit the official TechniSat website for contact information.