Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Trucozie T351

Trucozie Cordless Vacuum Cleaner T351 Instruction Manual

Model: T351 | Brand: Trucozie

Introduction

This manual provides detailed instructions for the safe and efficient operation and maintenance of your Trucozie Cordless Vacuum Cleaner T351. Please read this manual thoroughly before first use and keep it for future reference. The Trucozie T351 is a versatile, lightweight cordless vacuum cleaner designed for various cleaning tasks around your home. It features a self-standing design, powerful suction, and a multi-layer filtration system.

Package Contents

Before assembly, please verify that all components listed below are included in your package:

- Main Motor Unit
- Adjustable Extension Tube
- LED Motorized Brush Head
- Battery Pack
- Charger
- Wall Hanger
- Crevice Tool
- 2-in-1 Brush
- HEPA Filter (pre-installed)
- Metal Filter (pre-installed)
- Sponge Filter (pre-installed)
- Cleaning Tool
- User Manual



Image: All components of the Trucozie T351 Cordless Vacuum Cleaner, including the main unit, extension tube, various brush heads, battery, and charger.

Your browser does not support the video tag.

Video: Unboxing and overview of the Trucozie T350 (similar to T351) vacuum cleaner package contents.

Setup and Assembly

1. **Install the Battery:** Ensure the battery pack clicks securely into the designated groove on the main motor unit. Misalignment may prevent the vacuum from turning on.
2. **Attach the Extension Tube:** Connect the adjustable extension tube to the main motor unit. Press the release button on the tube to adjust its length as needed.

3. **Connect the Brush Head:** Attach the LED motorized brush head to the end of the extension tube. Ensure it clicks into place.
4. **Charging:** Before first use, fully charge the battery. The vacuum cleaner cannot be turned on while charging.

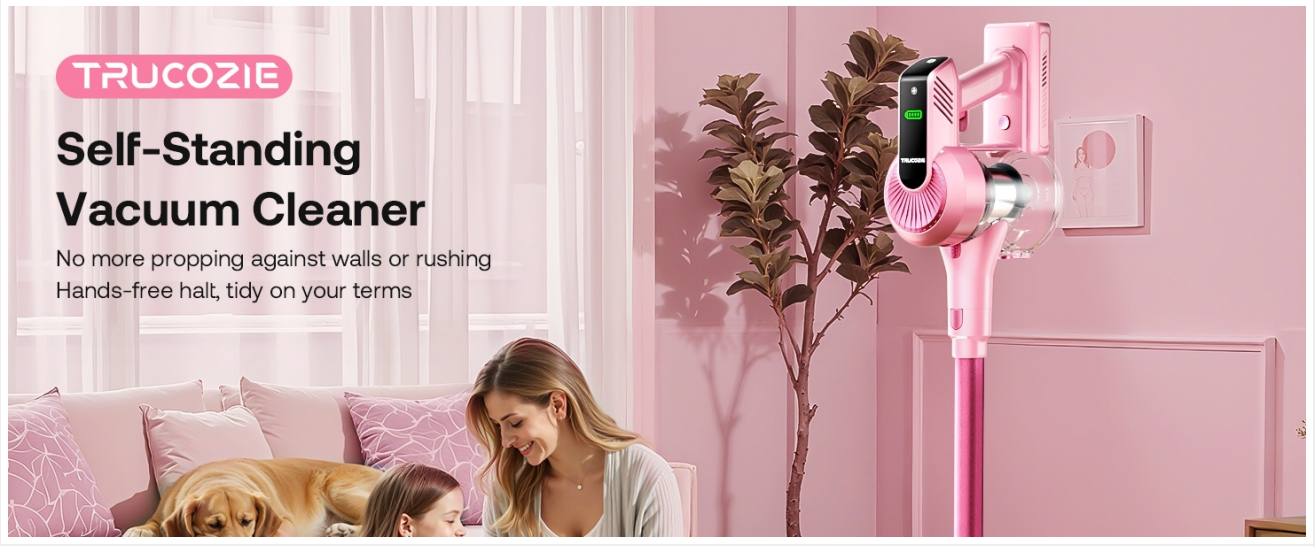


Image: Visual guide for correctly installing the battery pack into the vacuum cleaner's main unit.

Your browser does not support the video tag.

Video: Demonstrates the installation process of the Trucozie T350 (similar to T351) vacuum, including battery and tube assembly.

Operating Instructions

1. **Power On/Off:** Press the ON/OFF button on the handle to start or stop the vacuum.
2. **Adjust Suction Modes:** The vacuum offers 3 suction levels (Low, Mid, Max) for different cleaning needs. Use the mode selection button on the display to switch between modes.
    - **Low Mode:** Suitable for light debris and delicate surfaces.
    - **Mid Mode:** Ideal for everyday cleaning on various floor types.
    - **Max Mode:** Provides powerful 40KPA suction for deep cleaning, pet hair, and stubborn dirt on carpets.
3. **Self-Standing Feature:** The vacuum is designed to stand upright on its own, allowing you to pause cleaning instantly without needing to lean it against a wall or lay it down.
4. **LED Headlights:** The motorized brush head is equipped with 4 LED lights to illuminate dark areas, making hidden dust and debris visible.



Image: The Trucozie T351 vacuum cleaner demonstrating its self-standing capability.



Image: Illustration of the vacuum's long-lasting 7-cell battery, providing up to 45 minutes of runtime.

Attachments and Usage

Your Trucozie T351 comes with multiple accessories that can be combined in various ways to meet all your cleaning needs:

- **LED Motorized Brush Head:** Ideal for all floor types, including carpets, tiles, and hardwood. Its 180° swivel and LED lights help clean under furniture and in dark corners. The anti-tangle design is especially effective for pet hair.

- **Crevice Tool:** Perfect for reaching tight spaces, corners, and edges, such as between sofa cushions or along baseboards.
- **2-in-1 Brush:** This versatile tool can be used as a soft dusting brush for delicate surfaces or as a stiff brush for more stubborn dirt on upholstery and car interiors.
- **Adjustable Extension Tube:** Use with any attachment to extend reach for high areas, ceilings, or floors without bending.

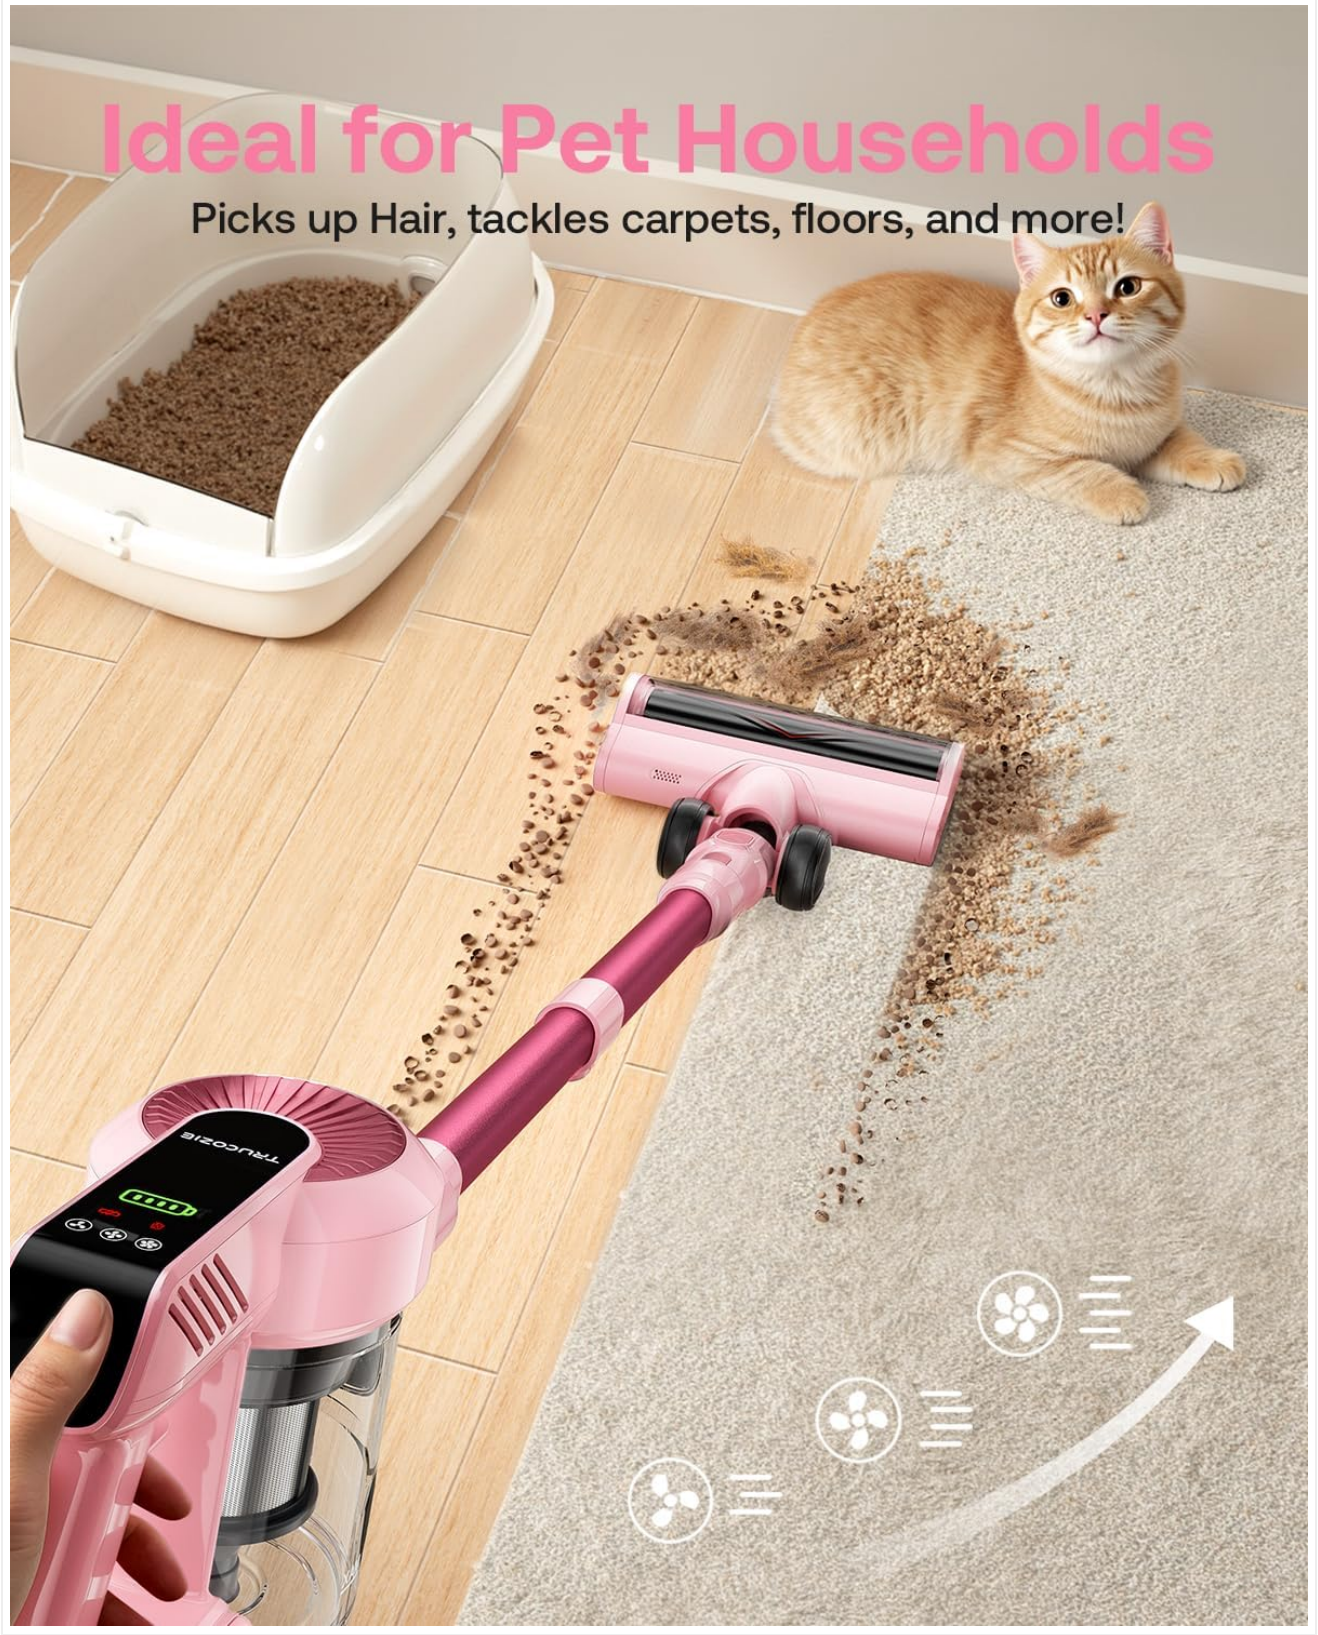


Image: The vacuum cleaner demonstrating its effectiveness on pet hair and various floor types.



Image: Detailed view of the anti-tangle brush design, highlighting its effectiveness against hair wrapping.

Your browser does not support the video tag.

Video: Demonstrates the proper usage and versatility of various attachments for the Trucozie T350 (similar to T351) vacuum cleaner.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Dust Cup and Filter Cleaning:

1. **Emptying the Dust Cup:** Press the release button on the dust cup and rotate it to the right to detach. Empty collected debris into a trash bin.
2. **Cleaning Filters:** The 6-layer sealing filtering system includes HEPA, metal, and sponge filters. Regularly clean these filters to prevent weakening suction and blockages.
    - Remove the HEPA filter and metal filter from the dust cup.
    - Tap off loose dirt or use the provided cleaning tool to brush away debris.
    - Rinse the filters under running water. Ensure they are completely dry (at least 24 hours) before re-installing.
    - Wipe the inside of the dust cup with a damp cloth.



Image: The one-click dust removal feature for easy emptying of the dust cup.



Image: Exploded view illustrating the 6-stage filtration system for effective particle capture.

Your browser does not support the video tag.

Video: Instructions on how to maintain the dust cup and filters for the Trucozie T553 (similar to T351) vacuum cleaner.

Floor Brush Cleaning:

If the "ROLLER TANGLED" indicator appears on the display, the brush roller may be stuck or tangled.

1. Turn off the vacuum and detach the motorized brush head.
2. Open the latch on the side of the brush head to remove the roller.
3. Use scissors or the provided cleaning tool to carefully cut and remove any tangled hair or debris from the roller.
4. Re-install the roller and secure the latch.

Your browser does not support the video tag.

Video: Demonstrates how to clean the floor brush and remove tangled debris for the Trucozie T553 (similar to T351) vacuum cleaner.

TROUBLESHOOTING

If you encounter any issues with your Trucozie T351, please refer to the common problems and solutions below:

Problem: Vacuum does not turn on.

- Ensure the battery pack is securely installed and clicked into place.
- Unplug the power cord if it is connected. The vacuum cannot operate while charging.
- Check if the battery is charged.

Problem: Battery is not charging.

- Use only the original Trucozie charger.
- Ensure the charger and cable are free from damage and properly plugged in.
- Check if the battery indicator blinks red or green during charging.

Problem: Vacuum stops picking up debris or suction is weak.

- Check and clean the HEPA and metal filters if they are dirty.
- Ensure all filters are properly re-installed.
- Check the extension tube for any blockages.

Problem: Floor brush stops rotating.

- Remove and re-install the brush roller to ensure it is correctly seated.
- Try to turn the floor brush, see if it can be smoothly moved.
- If the issue still exists, remove the conductive tube and connect the floor brush directly to the main unit to test.

If the issue persists after following these steps, please contact customer service.

Your browser does not support the video tag.

Video: Provides troubleshooting tips for common issues with the Trucozie T350 (similar to T351) vacuum cleaner.

Specifications

Feature	Detail
Brand	Trucozie
Model Name	T351
Suction Power	40KPa (Max Mode)
Run Time	Up to 45 minutes
Battery Type	1 Lithium Ion battery (included)
Filter System	6-layer High-Efficiency Filtration (HEPA, Metal, Sponge)
Motor	Brushless Motor, 200 Watts
Noise Level	75 Decibels
Dust Cup Capacity	0.6 Liters
Product Dimensions	16.93"L x 10.63"W x 6.92"H
Item Weight	6.92 pounds
Special Features	Self-Standing, 3 Suction Levels, 180° Rotatable Brush, LED Headlights, Anti-Tangling, LED Display, One-click Dust Removal

Warranty and Support

Each Trucozie stick vacuum cleaner comes with a 12-month protection plan. For any issues or inquiries, please contact Trucozie customer service via message or email. Our support team is available 24/7 to assist you.
For further assistance, please visit the official Trucozie Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DF2Q31VR

More documents and user manuals: **https://manuals.plus/**