Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Linkifly A6

Linkifly A6 Corded Vacuum Cleaner User Manual

Model: A6

1. Introduction

Thank you for choosing the Linkifly A6 Corded Vacuum Cleaner. This powerful and lightweight electric broom is designed to provide efficient cleaning for various surfaces in your home. With its 600W motor and 30Kpa suction, it effectively tackles dust, pet hair, and debris. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

Please read this manual thoroughly before using the vacuum cleaner and keep it for future reference.



Image: The Linkifly A6 Corded Vacuum Cleaner, showcasing its sleek design and primary components.

2. Product Components

The Linkifly A6 Corded Vacuum Cleaner comes with several components designed for versatile cleaning. Please ensure all parts are present before assembly.

- **Main Motor Unit:** Contains the 600W motor and dust collection bin.

- **Telescopic Tube:** Adjustable extension for reaching high areas or for upright cleaning.
- **Floor Brush with Two-Position Pedal:** For cleaning various floor types, including hard floors and carpets.
- **Long Crevice Nozzle:** Ideal for narrow spaces, corners, and upholstery.
- **Power Cord:** 5-meter long cord for extended reach.
- **Power Cord Organizer Hook:** For neat storage of the power cord.
- **HEPA Filter:** Advanced filtration system component.



Image: A visual representation of all included accessories and parts for the Linkifly A6 vacuum cleaner.

3. Setup and Assembly

Follow these steps to assemble your Linkifly A6 Corded Vacuum Cleaner:

1. **Attach the Telescopic Tube:** Insert the telescopic tube firmly into the main motor unit until it clicks into place.
2. **Connect the Floor Brush:** Attach the floor brush to the other end of the telescopic tube, ensuring a secure connection.
3. **Optional Accessories:** For handheld use or specific cleaning tasks, remove the telescopic tube and attach the long crevice nozzle directly to the main motor unit.
4. **Power Cord Management:** Wrap the 5-meter power cord around the integrated hooks on the telescopic tube for tidy storage when not in use.



Image: Visual guide demonstrating the assembly process of the vacuum cleaner components.

4. Operating Instructions

4.1 Powering On and Off

- Plug the power cord into a suitable electrical outlet (220V).
- Press the On/Off button located on the main motor unit or the foot pedal on the floor brush to start the vacuum cleaner.
- To turn off, press the On/Off button again.



Image: Detail of the two-position pedal on the floor brush, used to switch between hard floor and carpet modes.

4.2 Cleaning Different Surfaces

- **Floor Cleaning:** Use the floor brush for general cleaning of hard floors and carpets. Adjust the two-position pedal on the brush head to optimize suction for the surface.
- **Handheld Cleaning:** Detach the telescopic tube to use the main motor unit as a lightweight handheld vacuum. Attach the long crevice nozzle for cleaning sofas, furniture, tight spaces, stairs, and car interiors.

- **High-Reach Cleaning:** Extend the telescopic tube (from 46 cm to 65 cm) to clean curtains, ceilings, and other elevated areas.



Image: A user demonstrating the handheld configuration of the Linkifly A6 vacuum cleaner for cleaning upholstery.



Image: A user utilizing the Linkifly A6 with its telescopic tube extended for cleaning high areas.

4.3 5-Meter Cable Advantage

The extra-long 5-meter power cable provides unlimited cleaning time without the need for recharging. It allows you to clean large areas without frequently changing power outlets, reaching every corner of your room.



Image: The Linkifly A6 in use, highlighting the extensive reach provided by its 5-meter power cable.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

5.1 Emptying the Dust Bin

- Unplug the vacuum cleaner from the power outlet.
- Press the release button to detach the dust collection bin from the main motor unit.
- Empty the contents of the dust bin into a trash receptacle.
- Reattach the dust bin securely to the main motor unit.



Image: A user demonstrating how to empty the dust collection bin of the Linkifly A6 vacuum cleaner.

5.2 Cleaning the 4-Stage Filtration System

The Linkifly A6 features an advanced 4-stage filtration system, including a HEPA filter, fiber filter, and cyclonic filter. Regular cleaning is crucial for maintaining suction power and air quality.

1. Unplug the vacuum cleaner.
2. Remove the dust bin and carefully extract the filter components.
3. Tap the filters gently to remove loose dust.
4. Rinse the filters under running water. Ensure they are completely dry before reassembling.**Do not use detergents or hot water.**
5. Reinsert the dry filters into the dust bin and reattach the bin to the main unit.



Image: An exploded view illustrating the advanced 4-stage filtration system of the Linkifly A6.

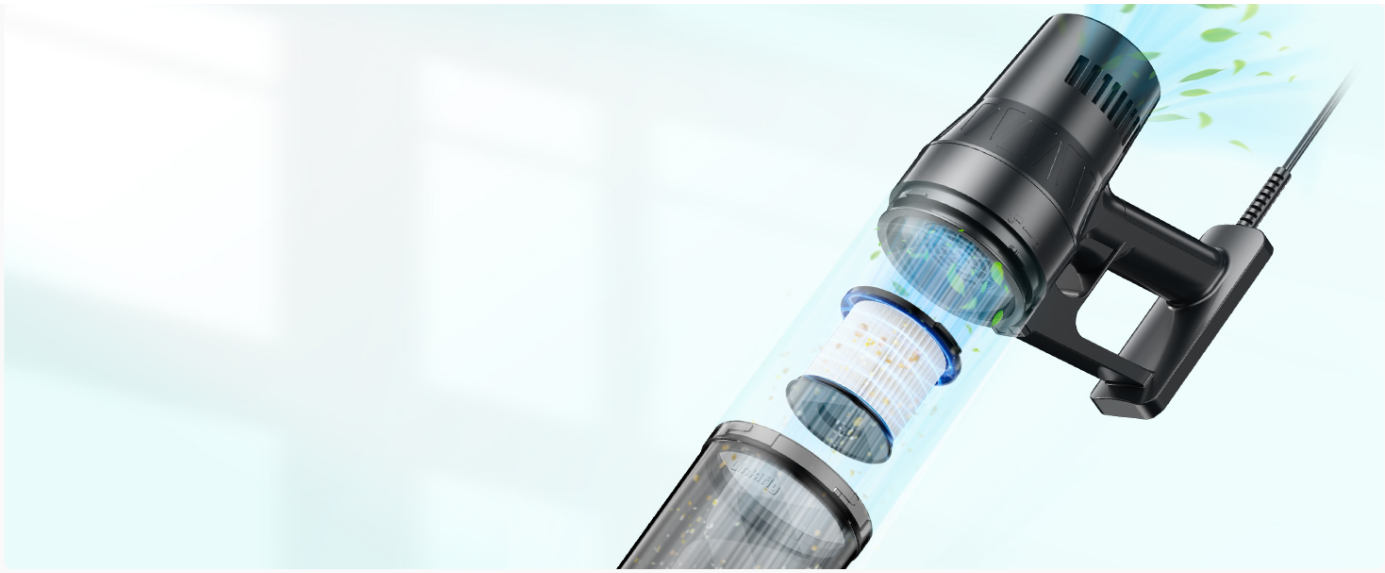


Image: The transparent dust collection chamber and removable filter components, ready for cleaning.

6. Troubleshooting

If you encounter any issues with your Linkifly A6 vacuum cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; power outlet fault; power button not pressed.	Check power cord connection; try a different outlet; ensure power button is fully pressed.
Low suction power.	Dust bin full; filters clogged; blockage in nozzle/tube.	Empty dust bin; clean filters (refer to Section 5.2); check for and remove any blockages.
Unusual noise during operation.	Blockage in brush head or tube; motor issue.	Turn off and unplug the unit, check for and remove any foreign objects; if noise persists, contact customer support.
Dust escaping from the vacuum.	Dust bin not properly closed; filters not correctly installed or damaged.	Ensure dust bin is securely latched; check filter installation; replace damaged filters.

If the problem persists after trying these solutions, please contact Linkifly customer support.

7. Specifications

Feature	Detail
Brand	Linkifly
Model Name	A6
Power Source	Corded Electric
Wattage	600 Watts
Voltage	220 Volts
Suction Power	30 Kpa

Feature	Detail
Cable Length	5 Meters
Filter Type	HEPA Filter (4-stage filtration system)
Dust Bin Capacity	1000 ml
Recommended Surfaces	All floor types
Noise Level	80 Decibels
Item Weight	2.34 Kilograms
Dimensions (L x W x H)	40L x 20W x 17H cm

8. Warranty and Support

Linkifly is committed to providing quality products and excellent customer service.

- **30-Day Money-Back Guarantee:** You may return any undamaged product within 30 days of purchase for any reason, along with its packaging materials.
- **Up to 24-Month Warranty:** This product comes with a standard 12-month warranty, which can be extended for an additional 12 months, totaling up to 24 months.
- **After-Sales Support:** Linkifly provides professional and prompt after-sales support. If you have any problems or need assistance, we will respond quickly, understand the issue in detail, and provide the best solution.

For support, please visit the Linkifly Store on Amazon or contact our customer service team directly.

© 2026 Linkifly. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DF7272VS

More documents and user manuals: **https://manuals.plus/**